

Z-Wave Protocol Implementation Conformance Statement

NanoMote Quad

General Information

Product Identifier:	ZWA003-A
Brand Name:	Aeotec
Product Version:	HW: 1 FW: 1.00
Z-Wave Certification #:	ZC10-18036041

Product Features

Battery Quantity	1
Battery Type	LIR2450
Z-Wave Scene Type	Central Scene

Z-Wave Product Information

Supports Z-Wave Beaming Technology?	No
Supports Z-Wave Network Security?	Yes
Supports Z-Wave AES-128 Security S0?	Yes
Supports Security S2?	Yes: S2 Unauthenticated
SmartStart Compatible?	No

Z-Wave Technical Information

Z-Wave Frequency:	U.S. / Canada / Mexico
Z-Wave Product ID:	0x0003
Z-Wave Product Type:	0x0102
Z-Wave Hardware Platform:	ZM5101
Z-Wave Development Kit Version:	6.71.01
Z-Wave Library Type:	Enhanced 232 Slave
Z-Wave Device Type / Role Type:	Wall Controller / Portable Slave

Association Group Information

Group # / Max	Description
Nodes	

Z-Wave Protocol Implementation Conformance Statement

(Continued)

NanoMote Quad

- 2 / 5 NanoMote Quad will send Basic Set command to the associated nodes if button 1 is pressed.
- 3 / 5 NanoMote Quad will send switch multilevel set, the multilevel start level change and multilevel stop level change command to the associated nodes if button 1 is pressed, hold and released, respectively.
- 4 / 5 Scene Controller will send Basic Set command to the associated nodes if button 2 is pressed.
- 5 / 5 NanoMote Quad will send switch multilevel set, the multilevel start level change and multilevel stop level change command to the associated nodes if button 2 is pressed, hold and released, respectively.
- 6 / 5 NanoMote Quad will send Basic Set command to the associated nodes if button 3 is pressed.
- 7 / 5 NanoMote Quad will send switch multilevel set, the multilevel start level change and multilevel stop level change command to the associated nodes if button 3 is pressed, hold and released, respectively.
- 8 / 5 NanoMote Quad will send Basic Set command to the associated nodes if button 4 is pressed.
- 9 / 5 NanoMote Quad will send switch multilevel set, the multilevel start level change and multilevel stop level change command to the associated nodes if button 4 is pressed, hold and released, respectively.

Supported Command Classes (16):

Association Group Info	Association V2
Battery	Central Scene V3
Configuration	Device Reset Locally
Firmware Update Meta-Data V3	Manufacturer Specific V2
Powerlevel	Security S0
Security S2	Supervision
Transport Service V2	Version V2
Wake Up V2	Z-Wave Plus Info V2

Controlled Command Classes (3):

Basic	Battery
Switch Multilevel V2	