

## Z-Wave Protocol Implementation Conformance Statement

### NanoMote Quad

#### General Information

<b>Product Identifier:</b>	ZWA003-A
<b>Brand Name:</b>	Aeotec
<b>Product Version:</b>	HW: 1 FW: 1.00
<b>Z-Wave Certification #:</b>	ZC10-18036041

#### Product Features

<b>Battery Quantity</b>	1
<b>Battery Type</b>	LIR2450
<b>Z-Wave Scene Type</b>	Central Scene

#### Z-Wave Product Information

Supports Z-Wave Beaming Technology?	No
Supports Z-Wave Network Security?	Yes
Supports Z-Wave AES-128 Security S0?	Yes
Supports Security S2?	Yes: S2 Unauthenticated
SmartStart Compatible?	No

#### Z-Wave Technical Information

<b>Z-Wave Frequency:</b>	U.S. / Canada / Mexico
<b>Z-Wave Product ID:</b>	0x0003
<b>Z-Wave Product Type:</b>	0x0102
<b>Z-Wave Hardware Platform:</b>	ZM5101
<b>Z-Wave Development Kit Version:</b>	6.71.01
<b>Z-Wave Library Type:</b>	Enhanced 232 Slave
<b>Z-Wave Device Type / Role Type:</b>	Wall Controller / Portable Slave

#### Association Group Information

<b>Group # / Max</b>	<b>Description</b>
<b>Nodes</b>	

# Z-Wave Protocol Implementation Conformance Statement

(Continued)

## NanoMote Quad

- 2 / 5 NanoMote Quad will send Basic Set command to the associated nodes if button 1 is pressed.
- 3 / 5 NanoMote Quad will send switch multilevel set, the multilevel start level change and multilevel stop level change command to the associated nodes if button 1 is pressed, hold and released, respectively.
- 4 / 5 Scene Controller will send Basic Set command to the associated nodes if button 2 is pressed.
- 5 / 5 NanoMote Quad will send switch multilevel set, the multilevel start level change and multilevel stop level change command to the associated nodes if button 2 is pressed, hold and released, respectively.
- 6 / 5 NanoMote Quad will send Basic Set command to the associated nodes if button 3 is pressed.
- 7 / 5 NanoMote Quad will send switch multilevel set, the multilevel start level change and multilevel stop level change command to the associated nodes if button 3 is pressed, hold and released, respectively.
- 8 / 5 NanoMote Quad will send Basic Set command to the associated nodes if button 4 is pressed.
- 9 / 5 NanoMote Quad will send switch multilevel set, the multilevel start level change and multilevel stop level change command to the associated nodes if button 4 is pressed, hold and released, respectively.

### Supported Command Classes (16):

Association Group Info	Association V2
Battery	Central Scene V3
Configuration	Device Reset Locally
Firmware Update Meta-Data V3	Manufacturer Specific V2
Powerlevel	Security S0
Security S2	Supervision
Transport Service V2	Version V2
Wake Up V2	Z-Wave Plus Info V2

### Controlled Command Classes (3):

Basic	Battery
Switch Multilevel V2	