

## Z-Wave Protocol Implementation Conformance Statement

### 4 Touch Panel Switch

#### General Information

<b>Product Identifier:</b>	HTP-4S0
<b>Brand Name:</b>	Hogar Controls
<b>Product Version:</b>	HW: 10 FW: 2.05
<b>Z-Wave Certification #:</b>	ZC10-19046446

#### Product Features

<b>Switch Load Capacity Current</b>	3
<b>Firmware Updatable</b>	Updatable by Professional/Technician
<b>Switch Load Capacity Watts</b>	700
<b>Neutral Wire Required</b>	Yes
<b>Electric Load Type</b>	Dimmable ELV (Magnetic) Dimmable Fluorescent Dimmable LED Dimmable MLV (Magnetic) ELV (Electronic) Fluorescent Incandescent Inductive (e.g. Motor) LED MLV (Magnetic)

#### Z-Wave Product Information

Supports Z-Wave Beaming Technology?	Yes
Supports Z-Wave Network Security?	Yes
Supports Z-Wave AES-128 Security S0?	No
Supports Security S2?	Yes: S2 Unauthenticated
SmartStart Compatible?	No

# Z-Wave Protocol Implementation Conformance Statement

(Continued)

## 4 Touch Panel Switch

### Z-Wave Technical Information

<b>Z-Wave Frequency:</b>	Australia / New Zealand
<b>Z-Wave Product ID:</b>	0x4414
<b>Z-Wave Product Type:</b>	0x0003
<b>Z-Wave Hardware Platform:</b>	ZM5202
<b>Z-Wave Development Kit Version:</b>	6.81.01
<b>Z-Wave Library Type:</b>	Enhanced 232 Slave
<b>Z-Wave Device Type / Role Type:</b>	On/Off Power Switch / Always On Slave

### Association Group Information

**Group # / Max    Description**

**Nodes**

1 / 1	Name: Lifeline Command: Device Reset Locally Notification Switch Binary Report
2 / 5	Name: HGT-01 Command: Basic Set Send Basic Set command to the other node in this association group when active endpoint 1.
3 / 5	Name: HGT-01 Command: Switch Binary Set Send Switch Binary Set command to the other node in this association group when active endpoint 1.
4 / 5	Name: HGT-02 Command: Basic Set Send Basic Set command to the other node in this association group when active endpoint 2.
5 / 5	Name: HGT-02 Command: Switch Binary Set Send Switch Binary Set command to the other node in this association group when active endpoint 2.
6 / 5	Name: HGT-03 Command: Basic Set Send Basic Set command to the other node in this association group when active endpoint 3.
7 / 5	Name: HGT-03 Command: Switch Binary Set Send Switch Binary Set command to the other node in this association group when active endpoint 3.
8 / 5	Name: HGT-04 Command: Basic Set Send Basic Set command to the other node in this association group when active endpoint 4.
9 / 5	Name: HGT-04 Command: Switch Binary Set Send Switch Binary Set command to the other node in this association group when active endpoint 4.

**Supported Command Classes (15):**

Association Group Info	Association V2
Basic	Device Reset Locally
Firmware Update Meta-Data V4	Manufacturer Specific V2
Multi-Channel Association V3	Multi-Channel V4
Powerlevel	Security S2
Supervision	Switch Binary
Transport Service V2	Version V3
Z-Wave Plus Info V2	

**Controlled Command Classes (2):**

Basic	Switch Binary
-------	---------------