

## Z-Wave Protocol Implementation Conformance Statement

### Heatit Z-Push Wall Controller

#### General Information

<b>Product Identifier:</b>	Z-Push Wall Controller
<b>Brand Name:</b>	Heatit controls
<b>Product Version:</b>	HW: 1 FW: 1.01
<b>Z-Wave Certification #:</b>	ZC12-21030196

#### Product Features

<b>Outdoor Use</b>	No
<b>Battery Type</b>	CR2450
<b>IP (Ingress Protection) Rated</b>	Yes
<b>Battery Quantity</b>	1
<b>Z-Wave Scene Type</b>	Central Scene

#### Z-Wave Product Information

Supports Z-Wave Beaming Technology?	No
Supports Z-Wave Network Security?	Yes
Supports Z-Wave AES-128 Security S0?	No
Supports Security S2?	Yes: S2 Authenticated, S2 Unauthenticated
SmartStart Compatible?	Yes

#### Z-Wave Technical Information

<b>Z-Wave Frequency:</b>	CEPT (Europe)
<b>Z-Wave Product ID:</b>	0x2403
<b>Z-Wave Product Type:</b>	0x0004
<b>Z-Wave Hardware Platform:</b>	ZGM130
<b>Z-Wave Development Kit Version:</b>	7.13.7
<b>Z-Wave Library Type:</b>	Enhanced 232 Slave
<b>Z-Wave Device Type / Role Type:</b>	Central Scene Device / Reporting Sleeping Slave

# Z-Wave Protocol Implementation Conformance Statement

(Continued)

## Heatit Z-Push Wall Controller

### Association Group Information

#### Group # / Max Description

##### Nodes

1 / 5	Lifeline (Normally used by the Z-Wave Controller) - Battery notification (sent when the battery runs low). - Device reset locally (sent if the device is reset). - Central scene notification.
2 / 5	- Basic Set Push on UP will send: ON (0xFF) Holding UP send: Level Increase Start Releasing UP send: Level Increase Stop Push on DOWN send: OFF (0x00) Holding DOWN send: Level Increase Start Releasing DOWN send: Level Increase Stop
3 / 5	- Basic Set Push on UP will send: ON (0xFF) Holding UP send: Level Increase Start Releasing UP send: Level Increase Stop Push on DOWN send: OFF(0x00) Holding DOWN send: Level Increase Start Releasing DOWN send: Level Increase Stop
4 / 5	-Basic Set Push on UP will send: ON (0xFF) Holding UP send: Level Increase Start Releasing UP send: Level Increase Stop Push on DOWN send: OFF (0x00) Holding DOWN send: Level Increase Start Releasing DOWN send: Level Increase Stop

#### Supported Command Classes (17):

Association Group Information V3	Association V2
Battery	Central Scene V3
Configuration V4	Device Reset Locally
Firmware Update Meta-Data V5	Indicator V3
Manufacturer Specific V2	Multi-Channel Association V3
Powerlevel	Security S2
Supervision	Transport Service V2
Version V3	Wake Up V2
Z-Wave Plus Info V2	