

Leak Gopher Z-Wave Valve Control Instructions

The Leak Gopher Z-Wave Valve Control is designed to turn on and off a electronic ball valve (included). The user can operate the valve directly using on and off buttons located in the top of the Leak Gopher Valve Control or the leak gopher can operate the valve from any Z-Wave Controller.

Depending on the Z-Wave controller, and its capabilities, the Leak Gopher Z-Wave Valve Control can be added to the controller as a Z-Wave device, operated directly from the controller, or incorporated into scenes, etc.

How to Add the Leak Gopher Z-Wave Valve Control to your Z-Wave Controller

- Plug the wall cube power adapter (included) into the receptacle on the bottom of the Leak Gopher Z-Wave Valve Control marked "3.6 VDC". Plug the wall cube into a 110 VAC outlet. This provides power to the Leak Gopher Z-Wave Valve Control.
- Configure the Z-Wave Controller to Add a device.
- When the Z-Wave Controller is ready to add a device, it will display a message like "waiting to add device. Press Add button on the device"
- The Include/Exclude button is located on the side of the Leak Gopher Z-Wave Valve Control. Press the Include/Exclude button. (On production versions of the Leak Gopher Z-Wave Valve Control the Include/Exclude button will be labeled Add/Remove in compliance with Z-Wave Plus protocol.)
- The Z-Wave Controller will acknowledge that the Leak Gopher Z-Wave Valve Control had been added to the Z-Wave network.
- Your Leak Gopher Z-Wave Valve Control is ready to use.

How to Remove the Leak Gopher Z-Wave Valve Control to your Z-Wave Controller

- Plug the wall cube power adapter (included) into the receptacle on the bottom of the Leak Gopher Z-Wave Valve Control marked "3.6 VDC". Plug the wall cube into a 110 VAC outlet. This provides power to the Leak Gopher Z-Wave Valve Control.
- Configure the Z-Wave Controller to Remove a device.
- When the Z-Wave Controller is ready to Remove a device, it will display a message like "waiting to remove device. Press remove button on the device"
- The Add/Remove button is located on the side of the Leak Gopher Z-Wave Valve Control. Press the Add/Remove button.
- The Z-Wave Controller will acknowledge that the Leak Gopher Z-Wave Valve Control had been removed from the Z-Wave network.
- Your Leak Gopher Z-Wave Valve Control is removed from this controller.

How to reset the Leak Gopher Z-Wave Valve Control

- To reset the Leak Gopher Z-Wave Valve Control Z-Wave radio and routing table, press and hold the Include/Exclude button located on the side of the Leak Gopher Z-Wave Valve Control for 15 seconds.

How to turn water on and off manually

- Plug the wall cube power adapter (included) into the receptacle on the bottom of the Leak Gopher Z-Wave Valve Control marked "3.6 VDC". Plug the wall cube into a 110 VAC outlet. This provides power to the Leak Gopher Z-Wave Valve Control.
- Plug the Leak Gopher electronic ball valve into the RJ-11 (telephone type connector) connector located on the bottom of the Leak Gopher Z-Wave Valve Control.
- Standard telephone wires, extenders, and connectors with RJ-11 connectors can be used to extend the distance between the Leak Gopher Z-Wave Valve

Control and the Leak Gopher electronic ball valve. The maximum recommended distance between the Leak Gopher Z-Wave Valve Control and the Leak Gopher electronic ball valve is 30 feet.

- On top of the Leak Gopher Z-Wave Valve Control there are two buttons.
- The button on the left is labeled Off. Press this button to close the Leak Gopher electronic ball valve stopping the flow of water through the valve.
- The button on the right is labeled On. Press this button to open the Leak Gopher electronic ball valve allowing the flow of water through the valve.

Limited Warranty & Disclaimer

- Leak Intelligence, LLC will repair or replace, at its option, any part of the device, which proves to be defective in workmanship or material under normal use, in the USA except in the states of Alaska or Hawaii, for a period of twelve months from the date the device is purchased. During the warranty period, Leak Intelligence, LLC will provide all labor and parts necessary to correct such defects, free of charge, provided the device has been operated in accordance with the manufacturer's guidelines. The Customer will return the device to Leak Intelligence, LLC for testing and repair or replacement. Should you need service, during warranty period or beyond, call 855-828-2811 to obtain return authorization before shipping your device to Leak Intelligence, LLC.
- Except for the obligation to repair or replace the Leak Gopher as stated herein, Leak Intelligence, LLC shall not be liable for any incidental or consequential damage caused by failure of the Leak Gopher to function as advertised or expected.
- All warranty service will be provided by Leak Intelligence, LLC technicians and this warranty is void if the device has been opened or serviced by anyone other than a Leak Intelligence, LLC technician.
- EXCEPT FOR THE LIMITED WARRANTY AS STATED IN THIS AGREEMENT, THERE ARE NO WARRANTIES, EXPRESSED OR IMPLIED, BY OPERATION OF LAW OR OTHERWISE. LEAK INTELLIGENCE, LLC DISCLAIMS THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE AS TO PRODUCTS AND SERVICES SUPPLIED UNDER THIS AGREEMENT. IN NO EVENT WILL LEAK INTELLIGENCE, LLC BE LIABLE FOR ANY INCIDENTAL, INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES, INCLUDING, BUT NOT LIMITED TO, COMMERCIAL LOSS, PROPERTY DAMAGE, LOSS OF USE, LOSS OF REVENUES, PROFITS, OR SAVINGS, EVEN IF LEAK INTELLIGENCE, LLC KNEW OR SHOULD HAVE KNOWN OF THE POSSIBILITY OF SUCH DAMAGES.
- Leak Intelligence, LLC does not guarantee the leak notification service in regards to notification of leaks. Leak Intelligence, LLC is not responsible for any value of water loss, commercial loss or any property damage, or for any other loss or damage caused or incurred as a result of the failure of the device and/or failure of the notification service.
- Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state. To know what your legal rights are in your state, consult your local or state consumer affairs office or your state's Attorney General.