

Quick Guide Manual

A20-SH

Digital Door Lock

Safety Precautions

Must Read This

Please read this carefully.

<p>Do not install the unit in an outdoor.</p>	<p>Do not attempt to disassemble the unit by yourself. By doing so, you may get an electronic shock and damage the product.</p>	<p>Do not use water and any type of solvent to clean the product such as gasoline or benzene as they can cause damage to electronic circuit, deterioration and or paint peel-off.</p>
<p>Do not use force with a tool onto the product.</p>	<p>Please keep your code safely and Make sure to lock the door tight when you go out.</p>	<p>Immediate re-registration of all remaining keys is required to invalidate the lost key.</p>


Caution • Make sure to follow the above instructions to avoid any injuries or damages on the properties.

※ This product can be included and operated in any Z-Wave network with other Z-Wave certified devices from other manufacturers and/or other applications. All non-battery operated nodes within the network will act as repeaters regardless of vendor to increase reliability of the network.

※ This product(A20-SH) is Z-Wave security enabled device.
 ※ Security Enabled Z-Wave Controller must be used in order to fully utilize this product.


Front Install the Front Body on the outside of Door.

①	Keypad(10-Key)
②	Battery Change Lamp
③	Dead Bolt Jam Lamp
④	CardKey Reader
⑤	Emergency Power Supply Terminal

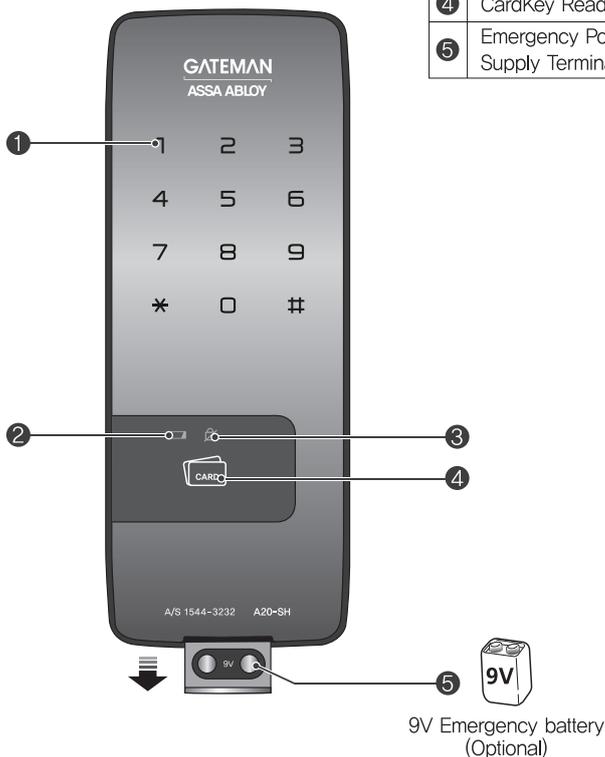

Back Install the Back Body on the inside of door.


①	Battery Cover	②	Slot for Remote Control module (optional extra)	③	1,5V AA Alkaline Batteries
④	Volume Control Switch	⑤	Automatic / Manual Lock button	⑥	Safe O/C Button
⑦	Thumb turn knob	⑧	Internal Forced Lock Switch	⑨	Ⓜ Registration button
⑩	Battery Change Lamp	⑪	Edge Bolt	⑫	Dead Bolt
⑬	Double Hook				

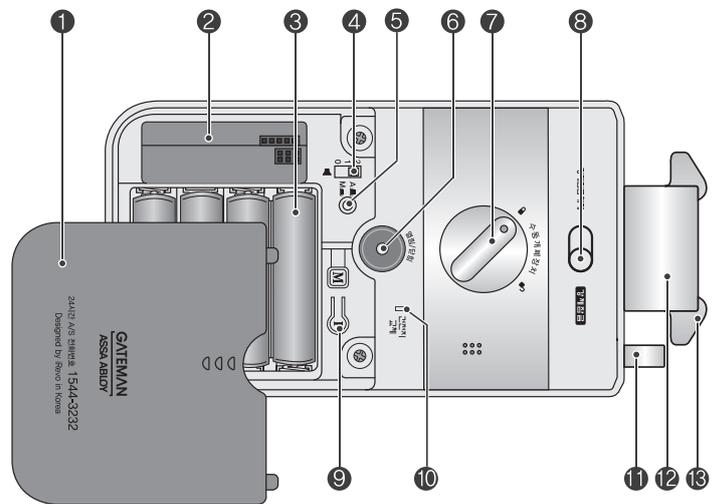

※ **M** button is not functioning on this product.

Quick Menu

Normal Mode

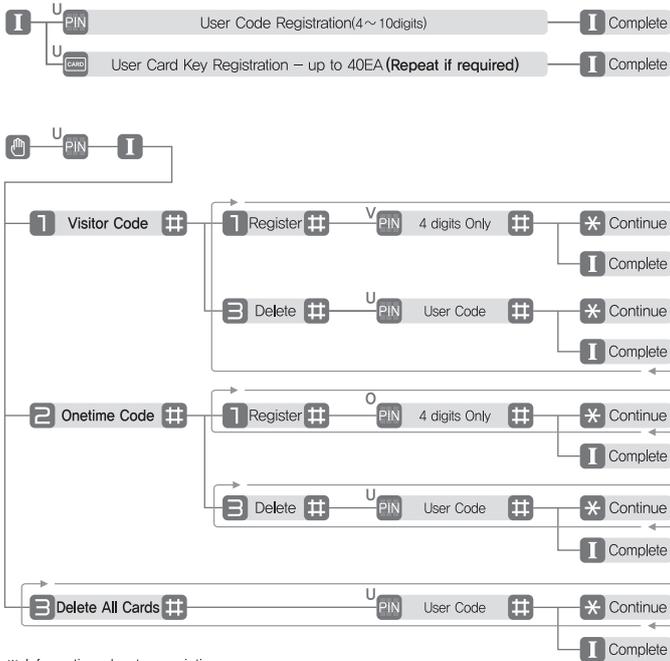


※ Information about association group

- Grouping: 2 available
- Group identifier: 1, 2
- Device per group: 5 devices



※ Information about configuration parameters

Configuration Parameter	Parameter Number	Size (byte)	Description
Silent mode on/off	1	1	level control, 1, 2, 3 default is 3 1 and 3 for models with no spoken prompts default is 3 or high
Auto Relock on/off	2	1	0 x 00 = OFF, 0 x FF = ON default is 0 x 00 or OFF
Relock time	3	1	10 to 180 seconds default is 30 seconds

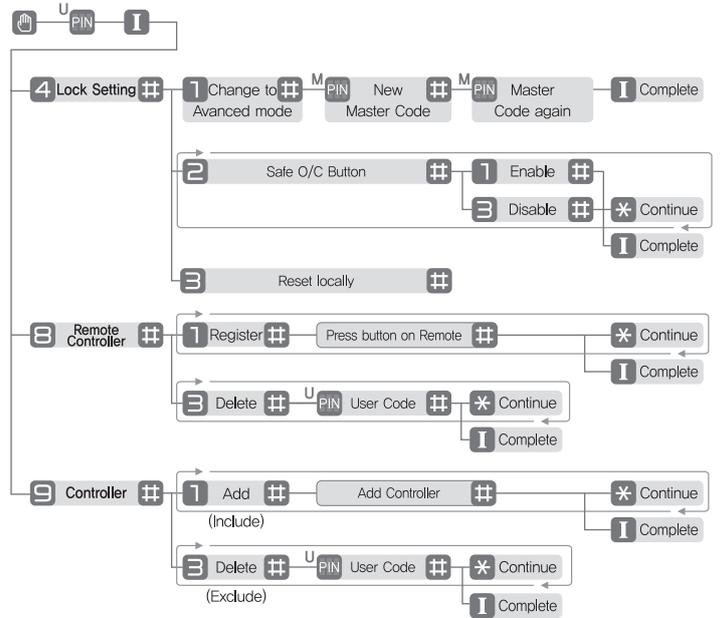

	Touch the keypad with your palm to begin and end actions.	M PIN	Enter the Master Code (4~10digits).
	Click the indicated number.	U PIN	Enter User Code (4~10digits).
	Press [] button on the keypad.	V PIN	Enter Visitor Code (Only 4digits).
	Press [] button on the keypad.	O PIN	Enter Onetime Code (Only 4digits).
	Press (Registration) button from the inside of battery cover.	U CARD	Enter User Card Key (Up to 40EA).
	Repeat operation using settings indicated.	U N	User Slot Number should be 2 digits.

Advanced Mode

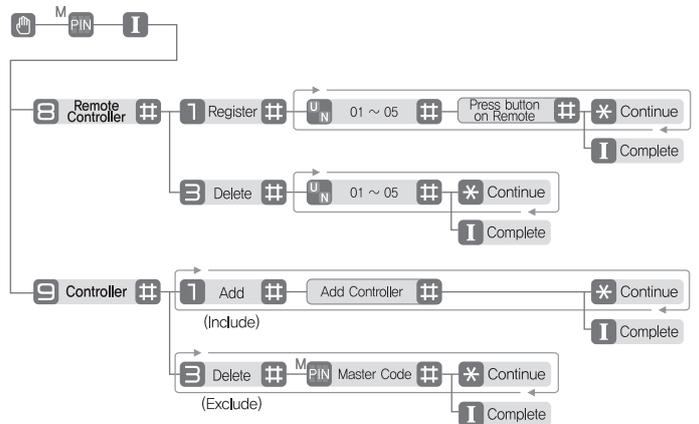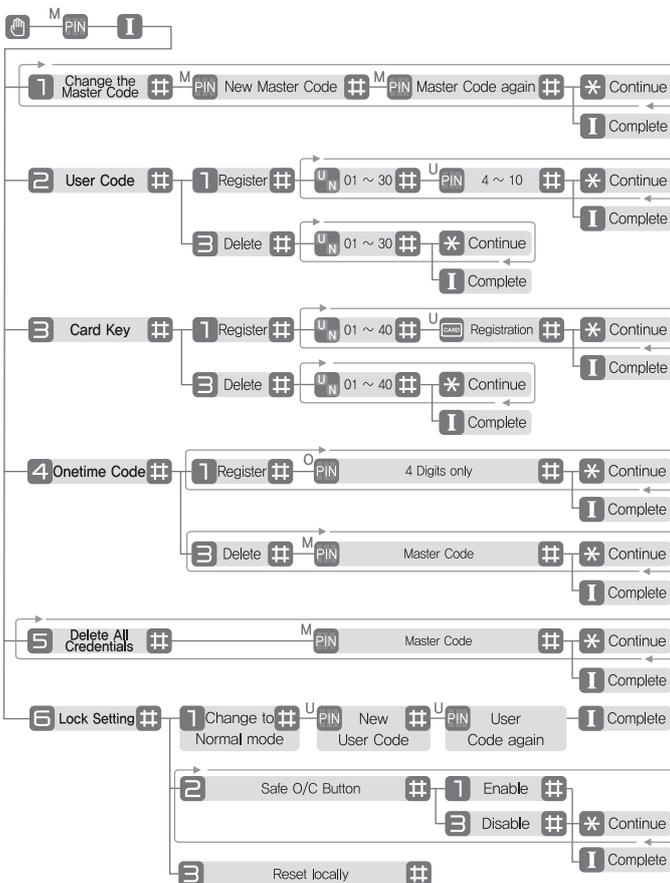

	Touch the keypad with your palm to begin and end actions.	M PIN	Enter the Master Code (4~10digits).
	Click the indicated number.	U PIN	Enter User Code (4~10digits).
	Press [] button on the keypad.	V PIN	Enter Visitor Code (Only 4digits).
	Press [] button on the keypad.	O PIN	Enter Onetime Code (Only 4digits).
	Press (Registration) button from the inside of battery cover.	U CARD	Enter User Card Key (Up to 40EA).
	Repeat operation using settings indicated.	U N	User Slot Number should be 2 digits.

Product Features

- **Master Code:** The Master code is used for programming and for feature settings. It must be created prior to programming the lock. The Master code will also operate (unlock/lock) the lock.
- **User Code:** The User code is used for operating the lock. Maximum number of user codes are 30.
- **Wrong Code Entry Limit:** After five(5) unsuccessful attempts at entering a valid code, the unit will shut down and not allow operation for three(3) minutes.
- **Network Module Setting:** This setting becomes available thru the Main Menu(9) and allows the lock to connect with the Controllers.
- **Reset locally:** Z-Wave Module exclusion by compulsion.