

TELDUS 




QUICK GUIDE

GATEWAY TELLSTICK ZNET LITE



1. CONNECT TELLSTICK ZNET LITE

1. KOPPLA IN TELLSTICK ZNET LITE

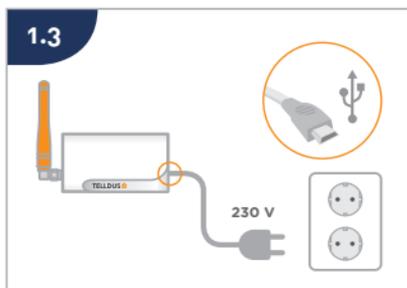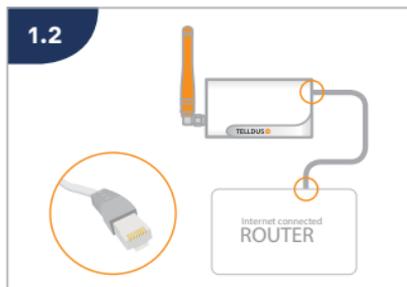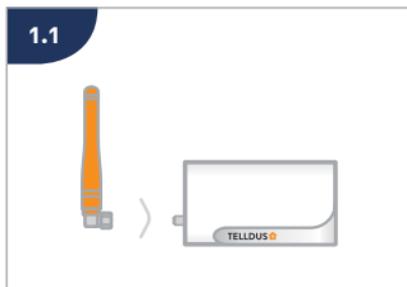

2. CREATE TELLDUS LIVE! ACCOUNT

2. SKAPA KONTO PÅ TELLDUS LIVE!









3. ACTIVATE TELLSTICK ZNET LITE

3. AKTIVERA TELLSTICK ZNET LITE

3.1. AUTOMATIC ACTIVATION / AUTOMATISK AKTIVERING:

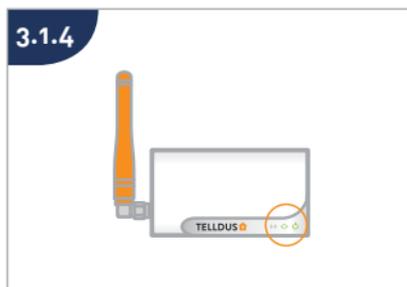
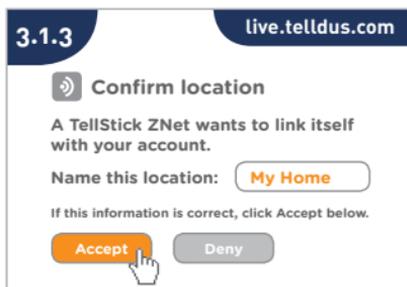


3.2. MANUAL ACTIVATION / MANUELL AKTIVERING:

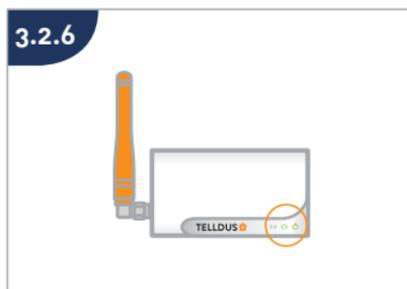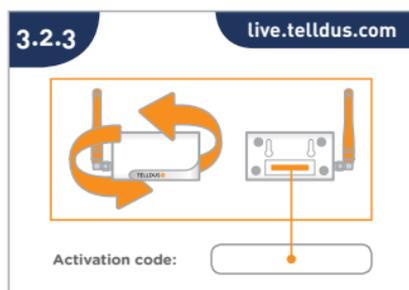




4. WALL MOUNTING (OPTIONAL)




4. VÄGGMONTERING (VALFRITT)

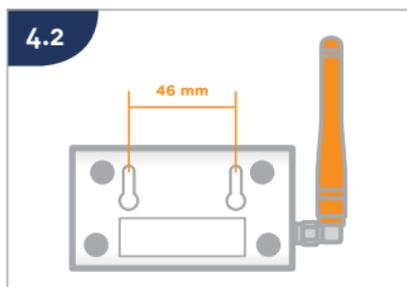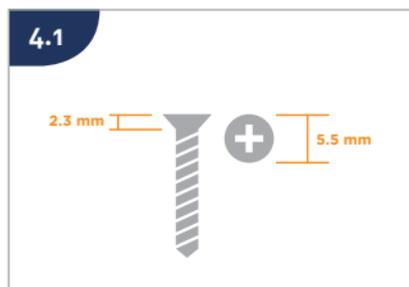

5. ADDING A Z-WAVE DEVICE



5. LÄGGA TILL EN Z-WAVE ENHET

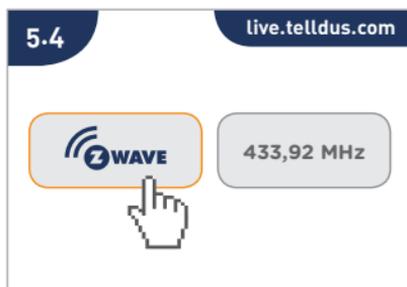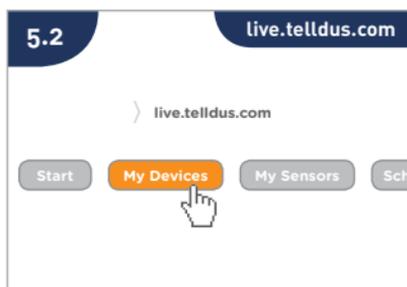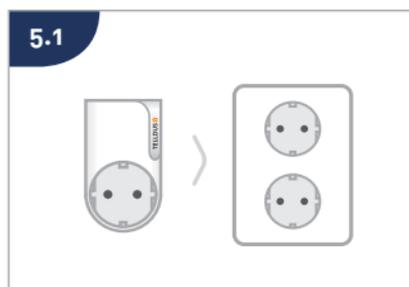

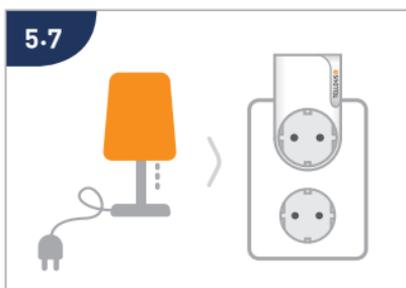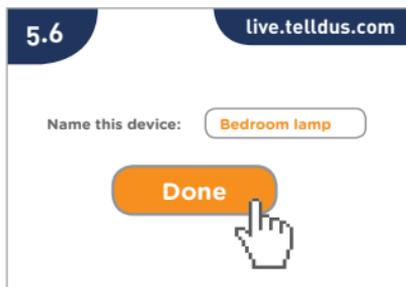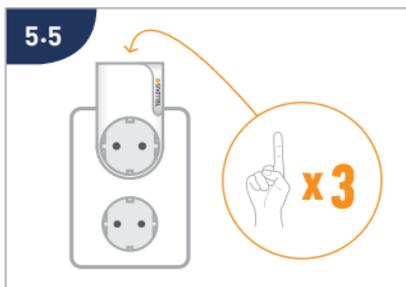

6. ADDING A 433.92 MHZ DEVICE

6. LÄGGA TILL EN 433,92 MHZ ENHET

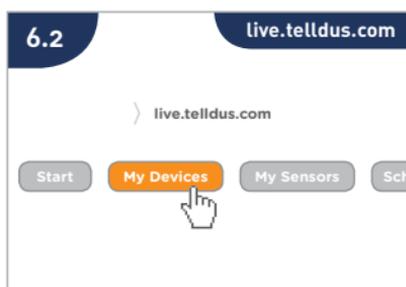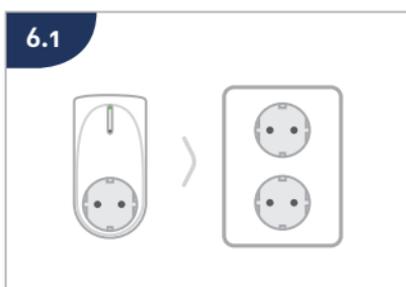

6.3

live.telldus.com

Add a new device



6.4

live.telldus.com



 
433,92 MHz



6.5

live.telldus.com

Choose brand/model:



6.6

live.telldus.com

Name this device:

Bedroom lamp



6.7

 3 sec

6.8

live.telldus.com

Learn



6.9

live.telldus.com

Done





6.10



7. EDIT A DEVICE




7. REDIGERA EN ENHET

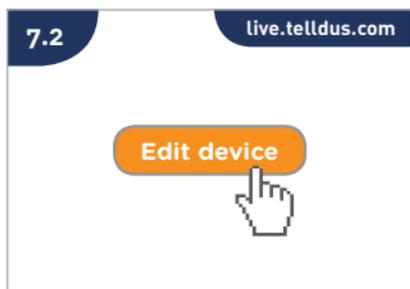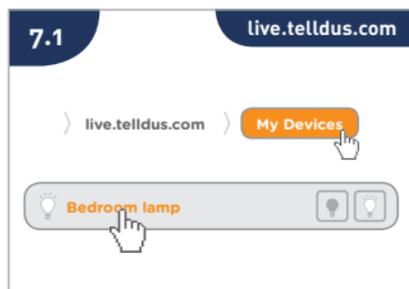

8. DELETE A DEVICE

8. TA BORT EN ENHET

8.1. EXCLUDE A Z-WAVE DEVICE / EXKLUDERA EN Z-WAVE ENHET:

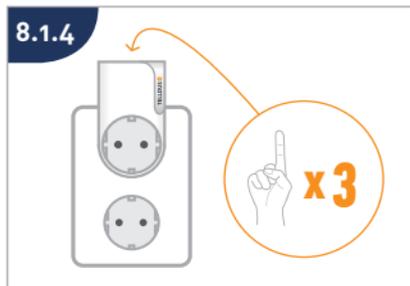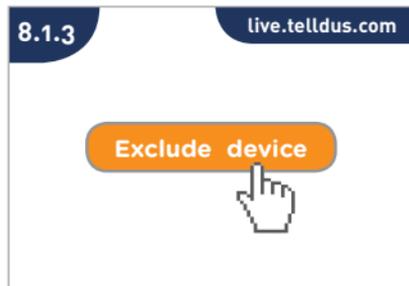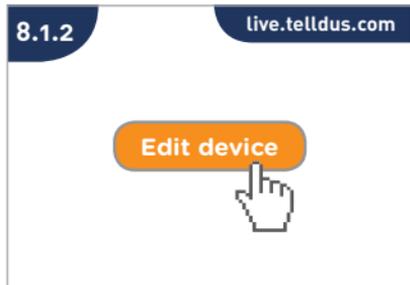


8.2. DELETE A 433.92 MHZ DEVICE / TA BORT EN 433,92 MHZ ENHET:



9. TECHNICAL MANUAL



10. ASSOCIATION

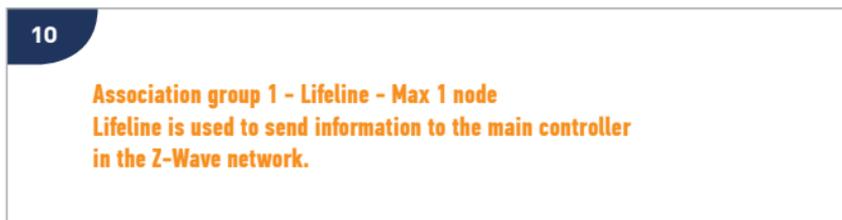

TELLDUS 

WWW.TELLDUS.COM

