


---

# OPERATING MANUAL

---

EN

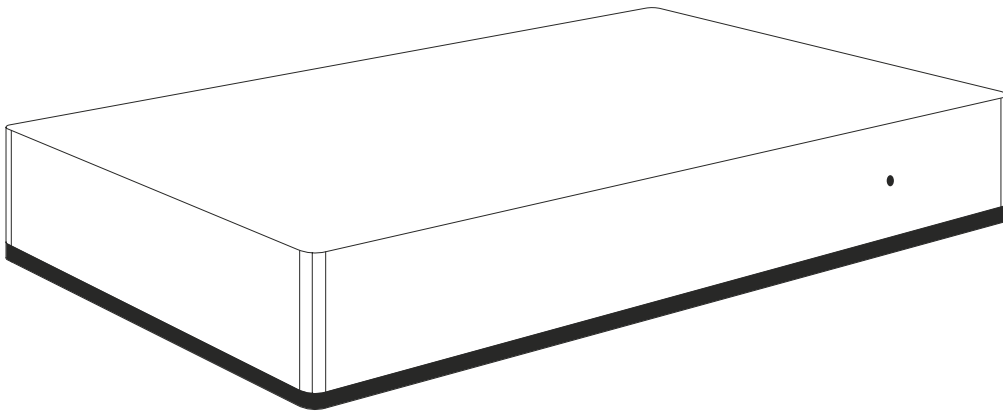

---

Instructions and warnings for installation and use

## TABLE OF CONTENTS

1: Important safety information	9
2: Description and features	10
3: Status indicator	11
4: Buttons	11
5: Installation and configuration	12
5.1: First Configuration	12
5.2: Alternative configuration	12
5.3: Adding controller to Remote Access	12
6: Adding Z-Wave™ devices	13
6.1: Adding using Inclusion Mode	13
6.2: Adding using SmartStart	13
7: Removing Z-Wave devices	14
7.1: Removing devices using Exclusion Mode	14
7.2: Removing Z-Wave devices (If added)	14
7.3: Force removing Z-Wave devices	14
8: Managing Provisioning List	15
8.1: Adding devices to Provisioning List	15
8.2: Editing devices in Provisioning List	15
8.3: Removing devices from Provisioning List	15
9: Managing devices	16
9.1: Controlling and checking state of devices	16
9.2: Configuring devices	16
9.3: Viewing events history	16
9.4: Performing actions on devices with specific command classes	17
10: Z-Wave Associations	20
10.1: Creating associations	20
10.2: Deleting associations	20
11: Rediscovering Z-Wave devices	21
12: Connecting with existing Z-Wave network	21
12.1: Adding/removing to/from existing Z-Wave network	21
12.2: Copying network information between controllers	21
12.3: DSK and PIN	22
13: Parameters	23

13.1: Setting parameters for the device	23
13.2: Copying parameters from other device	23
14: Linked devices	24
14.1: Thermostats (Humidifiers, Video Gates, Switches, Blinds and Sprinklers)	24
14.2: Cameras	25
14.3: Quick Apps	25
14.4: Notifications	27
15: Settings	27
15.1: Changing Name	27
15.2: Changing Room	27
15.3: Changing Category	28
15.4: Changing Icon	28
15.5: Adding an icon	28
15.6: Theoretical power consumption	29
16: Configuration	30
16.1: Network settings	30
16.2: Wi-Fi connection	30
16.3: Secure connection	31
17: Rooms and sections	32
17.1: Sections	32
17.2: Rooms	33
18: Users and access	34
18.1: User roles	34
18.2: Adding users	34
18.3: Giving permissions to user	34
18.4: Managing user's mobile devices	34
18.5: Setting PIN for the user	35
18.6: Setting local password for the user	35
18.7: Transferring admin privileges	35
19: Remote access	36
19.1: Enabling remote access	36
19.2: Support Access	36
19.3: Enabling Support Access	36
20: Time and units	36
20.1: Settings	36

20.2: Location	37
20.3: Home location	37
20.4: Another location	37
21: Z-Wave	38
21.1: Settings	38
22: Automation	38
22.1: Scenes	38
22.2: Creating scenes	39
22.3: Editing scenes	39
22.4: Deleting scenes	39
22.5: Duplicating scene	39
22.6: Converting Block Scene to Lua Scene	40
22.7: Scenarios	40
22.8: Favourite roller shutter positions	40
22.9: Changing name	41
22.10: Disabling/enabling	41
22.11: Changing triggering mode (manual/auto)	41
22.12: Changing other settings	41
22.13: Running scenes	42
23: Variables	42
24: Climate schedules	42
24.1: Creating Thermostats	42
24.2: Adding zones	43
24.3: Zone modes	43
24.4: Configuring zone schedule	43
24.5: Editing zone name and devices	44
24.6: Garden care	44
24.7: Creating sprinklers	44
24.8: Editing sprinklers	45
24.9: Adding and configuring watering schedules	45
24.10: Adding watering sequences to a schedule	45
25: Profiles	45
25.1: Creating profiles	45
25.2: Configuring profiles	46
25.3: Editing profile name and icon	46
25.4: Deleting profiles	46

25.5: Activating profiles manually	46
26: Alarms	47
27: Recovery Mode	48
27.1: Auto-repairing system	48
27.2: Switching between systems	49
27.3: Repairing system	49
27.4: Resetting network settings	49
27.5: Recovering system	49
28: Resetting to factory defaults	50
28.1: Resetting Z-Wave to factory defaults	50
29: Updating firmware	51
29.1: Updating firmware of gateway	51
29.2: Updating firmware of Z-Wave devices	51
30: System report	52
30.1: The report includes information about	52
30.2: To generate system report	52
31: Backups	53
31.1: Creating cloud backups	53
31.2: Creating local backups	53
31.3: Downloading local backup file	53
31.4: Restoring backups	54
31.5: Restoring backup from the list	54
31.6: Restoring local backup from file	54
32: Diagnostics	54
32.1: There are 4 tabs	54
33: Voice Assistants	55
33.1: Google Assistant	55
33.2: Amazon Alexa	56
34: Energy Panel	57
34.1: Panel configuration	57
34.2: Billing period	57
34.3: Tariff	57
34.4: Expenses	58
34.5: History	58
34.6: Meters configuration	58
34.7: General tab	59

34.8: Savings tab	59
34.9: Ecology tab	60
34.10: Scenes	60
35: Specifications	61
35.1: Technical data	61
35.2: Radio Communication	61
36: Product disposal	61
37: Declaration of conformity	62

# ABOUT THE MANUAL

This manual describes the initial installation of the smart home gateway.

Described are the most important functionalities and capabilities.





# 1: IMPORTANT SAFETY INFORMATION



**Read this manual carefully before installing and operating the product.**



## **Warning!**

- The manufacturer will not be held responsible for any loss or damage resulting from not following the instructions. Store this manual in a secure place for future reference.
- This product is not a toy. Keep away from children and animals.
- When wall-mounted, do not place the product higher than 2 meters from the floor.



## **Caution!**

- Do not attempt to disassemble, repair or modify this product yourself. Any repair should be performed only by an authorized service.
- This product is designed for indoor use only. Do not use outside!
- Do not expose this product to moisture, water, or other liquids. Never place any water carrying vessels near the product.
- Do not use the product outside of the recommended temperature and humidity ranges.
- Keep the product away from heat sources and do not place under direct sunlight.
- Do not cover or place anything on the product.
- Do not connect cable longer than 3 meters to the USB port.
- Do not place the product in metal boxes or on metal surfaces for best radio performance.

## 2: DESCRIPTION AND FEATURES

**Gateway** is the core element of the smart home system.

It enables the integration of smart home devices into a single system to provide convenient control and a powerful automation platform. The gateway is now even more secure, reliable, and versatile.

### **Features:**

- Provides a reliable foundation for smart home system,
- Capable of controlling compatible devices using the following radio standards:
  - » Z-Wave™ (700 series),
  - » Wi-Fi – 2.4 GHz (802.11 b/g/n).
- Allows to add up to:
  - » 40 Z-Wave devices (recommended),
  - » 1 IP camera,
  - » 40 scenes,
  - » 10 Quick Apps,
  - » 5 plugins.
- No Internet cable required, works on Wi-Fi,
- Modern interface designed for ease of use,
- Enhanced and convenient scene editor,
- Support for more advanced apps and drivers,
- May be used with all devices certified with the Z-Wave Plus™ certificate and should be compatible with such devices produced by other manufacturers.

## 3: STATUS INDICATOR

- Pulsing blue – start-up
- Red – Wi-Fi in Access Point mode (ready to configure)
- Pulsing copper – disconnected from the Internet
- Green – connected to the Internet
- Pulsing red – start-up to Recovery mode

## 4: BUTTONS

### R **Reboot**

Hold for 5s – restart

### D **Recovery**

Hold during start-up – put in Recovery mode

Hold for 10s, then click when the indicator is blinking – switch between Dynamic and Static IP:

- yellow blinking: set IP to Dynamic
- green blinking: set IP to Static

Hold for 20s, then click when the indicator is blinking red – reset network settings

## 5: INSTALLATION AND CONFIGURATION

**Note:** The ID and Remote access details can be found on a label on the bottom of the device.

### 5.1: FIRST CONFIGURATION

1. Plug the provided power adapter into an outlet and connect it to the gateway.
2. The gateway will turn on, wait for the indicator to turn solid red.
3. Scan the QR code and download the app.
4. Launch the application and follow the displayed instructions.

### 5.2: ALTERNATIVE CONFIGURATION

1. Connect your computer to Wi-Fi network created by the gateway. You will find Wi-Fi SSID (name) and password on the bottom of the device.
2. Go to **authentication website**.
3. Choose your language.
4. You are automatically logged in with your default credentials:
  - Login: **admin**
  - Password: **admin**
5. Configure the gateway by following steps in the Configuration Interface.

**Remember:** connect the gateway to your home Wi-Fi network after finishing the configuration.



### 5.3: ADDING CONTROLLER TO REMOTE ACCESS

1. Log in to your **ID** account.
2. Click **More** in the Remote Access section.
3. Click **Add New Home Center**.
4. Enter data of your gateway (serial number, MAC address).
5. Click Add Home Center.
6. Your Home will be now visible on the list.

## 6: ADDING Z-WAVE™ DEVICES

### 6.1: ADDING USING INCLUSION MODE

To add the device to the Z-Wave network **manually**:

1. Open the Configuration Interface.
2. Go to  > **Devices**.
3. Click .
4. Select **Z-Wave Device**.
5. Optional - selectable options (**Advanced**):
  - NWI - Network-Wide Inclusion – enabling allows for adding devices outside the direct range of the gateway,
  - Add in S0 Security mode if device supports it,
  - Allow inclusion only in near proximity (less than 2 meters).
6. Click **Start**.
7. Follow adding procedure for the device you want to add (according to its manual).
8. If you are adding in Security S2 Authenticated and the device is not on the Provisioning List:  
Input the PIN code (the underlined part of the DSK) and click **Send**.
9. The device will be added within few minutes.


### 6.2: ADDING USING SMARTSTART

**ATTENTION!** SmartStart is only available for Z-Wave 3.0 engine gateways.

**SmartStart** enabled devices can be added into a Z-Wave network by entering the Z-Wave DSK Code present on the product. The devices will be automatically added to the Z-Wave network using secure connection encrypted with Z-Wave S2 security framework.

In case you need full DSK code of the gateway you will find it on the label under the device.

To add the device to the Z-Wave network **using SmartStart**:



1. Open the Configuration Interface.
2. Go to  > **Z-Wave** > **SmartStart**.
3. Click **Add DSK**.
4. Enter the full DSK string code you have received with your device.
5. For advanced users: In **Choose Security levels** select which Security keys will be granted to the joining node (available: S2 Unauthenticated, S2 Authenticated, S2 Access Control, S0).

6. Leave the **Only S2 classic inclusion** unchecked.
7. Power the device and it will be added automatically within 10 minutes.



## 7: REMOVING Z-WAVE DEVICES

### 7.1: REMOVING DEVICES USING EXCLUSION MODE





To **remove** the device from the this or other Z-Wave network:

1. Open the Configuration Interface.
2. Go to  > **Devices**.
3. Click .
4. Select **Z-Wave Device**.
5. Follow removing procedure on the device (according to its manual).

### 7.2: REMOVING Z-WAVE DEVICES (IF ADDED)

1. Open the Configuration interface.
2. Go to  > **Devices**.
3. Click  next to the device you want to remove from the system.
4. Set learning mode duration and click Continue.
5. Follow instructions of the device.


### 7.3: FORCE REMOVING Z-WAVE DEVICES

1. Open the Configuration interface.
2. Go to  > **Devices**.
3. Click  next to the device you want to remove from the system.
4. Set learning mode duration and click Continue.
5. Click  which appeared in place of .
6. Confirm the action.
7. The gateway will try to communicate with the device. If the device responds, the process will be canceled, otherwise it will be removed from the system.



## 8: MANAGING PROVISIONING LIST

The **Provision List** is used to add Z-Wave devices using SmartStart or bootstrap classic S2 inclusion.



### 8.1: ADDING DEVICES TO PROVISIONING LIST

1. Open the Configuration Interface.
2. Go to  > **Z-Wave** > **SmartStart**.
3. Click **Add DSK**.
4. Enter the full DSK string code you have received with your device.
5. For advanced users: In **Choose Security levels** select which Security keys will be granted to the joining node (available: S2 Unauthenticated, S2 Authenticated, S2 Access Control, S0).
6. If the device should not be automatically included when powered, but only after the classic inclusion, check the **Only S2 classic inclusion** setting.
7. Click **Add**.

### 8.2: EDITING DEVICES IN PROVISIONING LIST

1. Open the Configuration Interface.
2. Go to  > **Z-Wave** > **SmartStart**.
3. Click  next to the device you want to edit.
4. You can change the **Security levels**.
5. Save.



### 8.3: REMOVING DEVICES FROM PROVISIONING LIST

1. Open the Configuration Interface.
2. Go to  > **Z-Wave** > **SmartStart**.
3. Click  next to the device you want to remove.
4. Click **Delete**.
5. The device will be removed from the list, but if it was already added to the Z-Wave network, you must perform standard removing procedure or reset the device.


## 9: MANAGING DEVICES

### 9.1: CONTROLLING AND CHECKING STATE OF DEVICES

You can control the device and check its last known state using Dashboard.


1. Open the Configuration Interface.
2. Go to .
3. You will see list of all devices and their status.
4. To fully control the device, hover over it and click .
5. The right sidebar will be expanded allowing you to fully control the device.

### 9.2: CONFIGURING DEVICES

1. Open the Configuration Interface.
2. Go to  > **Devices**.
3. You will see list of all devices with information about its ID, assigned room, role, and battery level (if battery powered).
4. Click the device to expand it, you will see a few tabs:
  - General – basic device information, like firmware version, Node ID, Endpoint ID, type and all nodes of this device,
  - Advanced – more advanced information, like Z-Wave type and version, type and unit for meters,
  - Device configuration – rediscovering device configuration,
  - Associations – configuration of Z-Wave associations,
  - Notifications – setting notifications for events on the device,
  - Parameters – setting values of configuration parameters.

### 9.3: VIEWING EVENTS HISTORY



Using History panel you can check all events in the system, like: changes in statuses of devices, activated scenes and notifications.

1. Open the Configuration Interface.
2. Go to .
3. You will see full history of your system.





## 9.4: PERFORMING ACTIONS ON DEVICES WITH SPECIFIC COMMAND CLASSES

### Basic

In the Dashboard , click  on device tile, then on the displayed sidebar you will see the last known state and you will be able to:


- Click **ON** – set 0xFF,
- Click **OFF** – set 0x00.

### Binary Switch

In the Dashboard , click  on device tile, then on the displayed sidebar you will see the last known state and you will be able to:



- Click **ON** – set 0xFF,
- Click **OFF** – set 0x00.




### Central scene

In the Device Settings ( > **Devices**), click the device to expand it and go to **Advanced** tab. You will see the list of all Scene IDs and key attributes with scenes that will be activated after receiving them:




- Click **ADD ACTION** – create new scene that will be activated when received the specific Scene ID and key attribute.

### Color Switch



In the Dashboard , click  on device tile, then on the displayed sidebar you will see the last known state and you will be able to:

- Click **ON** – turn ON the light,
- Click **OFF** – turn OFF the light,
- Change **Brightness** slider position – set new brightness,
- Click  – start increasing brightness,
- Click  – start decreasing brightness,
- Click  – stop increasing/decreasing component.


For each color component:

- Change slider position – set new component value,
- Click  – start enhancing component,
- Click  – start fading component,
- Click  – stop enhancing/fading component.


### Door Lock

In the Dashboard , click  on device tile, then on the displayed sidebar you will see the last known state and you will be able to:

- Click **Set Mode**, then select mode – activate the selected mode.


In the Device Settings ( > **Devices**), click the device to expand it and go to **Advanced** tab. In **Door Lock Configuration** section you will be able change door lock configuration.

### **Meter**



In the Device Settings ( > **Devices**), click the device to expand it and go to **Advanced** tab. You will see the type, scales and rate type of the meter.




- Click **RESET** in **Meter reset** section – reset the accumulated data.

### **Multilevel Sensor**


In the Device Settings ( > **Devices**), click the device to expand it and go to **Advanced** tab. You will see the type and scales of the sensor.

### **Multilevel Switch**



In the Dashboard , click  on device tile, then on the displayed sidebar you will see the last known state and you will be able to:

- Click **ON** – set 0xFF,
- Click **OFF** – set 0x00,
- Change slider position – set new level,
- Click  – start level change up,
- Click  – start level change down,
- Click  – stop level change.


### **Notification**

In the History Panel , you will see all the received Notification Reports with information about the type of the notification and event/state.



### **Sound Switch**

In the Dashboard , click  on device tile, then on the displayed sidebar you will see the last known state (like currently played tone, default tone) and you will be able to:

- Click **ON** – start playing the default tone,
- Click **OFF** – stop playing,
- Click **Play tone**, then select tone – start playing the selected tone,
- Click **MUTE** – mute the sound switch,
- Click **UNMUTE** – unmute the sound switch,
- Change **Volume** slider position – set new volume.



In the Device Settings ( > **Devices**), click the device to expand it and go to **Advanced** tab. In **Sound Configuration** section you will be able change default tone and volume.

## Thermostat Mode

In the Dashboard , click  on device tile, then on the displayed sidebar you will see the last known state and you will be able to:



- Click **Set Mode**, then select mode – activate the selected mode.

## Thermostat Setback

In the Dashboard , click  on device tile, then on the displayed sidebar you will see the last known state and you will be able to:


- Click **ON** – set Comfort Mode,
- Click **OFF** – set Energy Saving Mode.

## Thermostat Setpoint

In the Dashboard , click  on device tile, then on the displayed sidebar you will see the last known state and you will be able to:

- Change value in temperature field – set new Setpoint value.

## Battery

In the Device Settings ( > **Devices**), you will see battery icon with last known battery level in the column **Power** next to the device with Battery CC.

## Association / Multi Channel Association

See “Z-Wave Associations” on page 20

## Firmware Update

See “Updating firmware of Z-Wave devices” on page 51

## Indicator

See “Identifying devices”



## Other Commands Classes

Command Classes not mentioned above are controlled in the same way as Basic Command Class. To learn if the device supports Basic Command Class and how it maps values to other Command Classes, refer to manual of the device.



## 10: Z-WAVE ASSOCIATIONS

**Associations** allow devices to control other devices directly within the Z-Wave network without the participation of the gateway. Devices such can continue to work and operate selected devices even when the gateway is damaged or turned off (in case of a fire, flood, or system malfunction).

### 10.1: CREATING ASSOCIATIONS


1. Open the Configuration Interface.
2. Go to  > **Devices**.
3. Click the device you want to associate to expand it.
4. Go to **Associations** tab.
5. Select the source EndPoint and Association Group (refer to manual of the device for more information).
6. Select the target device you want to associate with.
7. Click  to set the association.
8. If the device is battery powered, wake it up manually or wait for next automatic wake up.

### 10.2: DELETING ASSOCIATIONS

1. Open the Configuration Interface.
2. Go to  > **Devices**.
3. Click the device from which you want to delete the association.
4. Go to **Associations** tab.
5. Click  next to the association you want to delete.
6. If the device is battery powered, wake it up manually or wait for next automatic wake up.

## 11: REDISCOVERING Z-WAVE DEVICES


**Rediscovery** – the process of reading the device’s capabilities after altering them.

1. Open the Configuration Interface.
2. Go to  > **Devices**.
3. Click the device to expand it.
4. Go to **Device configuration** tab.
5. Under **Device reconfiguration** click **Reconfigure device**.
6. If the device is battery powered, wake it up manually or wait for next automatic wake up.

## 12: CONNECTING WITH EXISTING Z-WAVE NETWORK

### 12.1: ADDING/REMOVING TO/FROM EXISTING Z-WAVE NETWORK

This gateway can be added to an existing Z-Wave network only if no Z-Wave devices are added to it.

1. Start adding/removing procedure on the primary controller (according to its manual).
2. Go to  > **Z-Wave**.
3. Under **Start Learn Mode** click **Start**
4. If you are prompted for the PIN, you will find it on the bottom of the gateway and on the box.

### 12.2: COPYING NETWORK INFORMATION BETWEEN CONTROLLERS

**Copying network information** (Replication) is the process of updating network information from a primary controller to secondary controllers, such as node list and routing information.


These steps are usually not required unless you have a multiple controller network.

#### **Copying information from this controller to the secondary controller**

1. Start adding procedure according to chapter “Adding using Inclusion Mode” on page 13.
2. Start Learn Mode on the secondary controller (according to its manual).

3. After couple of minutes both controllers will have the same network information.



### **Copying information to this controller from the primary controller**

1. Start adding procedure on the primary controller (according to its manual).
2. Go to  > **Z-Wave**.
3. Under **Start Learn Mode** click **Start**
4. After couple of minutes both controllers will have the same network information.

## 12.3: DSK AND PIN

In case you need full DSK code of the gateway you will find it on the label under the device.

If no Z-Wave devices are added to the gateway or the gateway is a secondary controller (not SIS\*), you can also find the full DSK in the interface:


1. Open the Configuration Interface.
2. Go to  > **Z-Wave**.
3. Under **Start Learn Mode** click **Start**
4. Click  in the left sidebar to open the Console, where the DSK will be displayed.

\* SIS – Static Update Controller configured to enable other controllers to include/exclude nodes on its behalf


## 13: PARAMETERS

Devices allows to customize their operation to user's needs using configurable parameters. The settings can be adjusted via Z-Wave controller to which the device is added. In the interface parameters are presented as simple options in Advanced Settings of the device.

### 13.1: SETTING PARAMETERS FOR THE DEVICE

1. Open the Configuration interface.
2. Go to  > **Devices**.
3. Click the device you want to change its behaviour.
4. Open the Parameters tab.
5. Find the parameters you're interested in.
6. Adjust the setting.
7. Click **Save** when you finish.
8. If the device is battery powered, wake it up manually or wait for next automatic wake up. If the device changes configuration, you will be asked to refresh the screen.

### 13.2: COPYING PARAMETERS FROM OTHER DEVICE

1. Configuration of the device can be copied from another device with the same parameters list.
2. Open the Configuration interface.
3. Go to  > **Devices**.
4. Click the device you want to copy the parameters to.
5. In the Copy configuration from field choose device you want to copy the parameters from.
6. Click COPY.
7. Save the parameters.
8. If the device is battery-powered, wake it up manually or wait for the next automatic wake-up. If the device changes configuration, you will be prompted to refresh the screen.

## 14: LINKED DEVICES

Linked Devices combine several devices into one device. Using this function results in controlling the group of related devices as if they were one single device. The group will be presented in the interfaces as a single device. The gateway offers different Linked Devices types: Thermostats, Humidifiers, Video Gates, Switches, Blinds and Sprinklers.

### 14.1: THERMOSTATS (HUMIDIFIERS, VIDEO GATES, SWITCHES, BLINDS AND SPRINKLERS)


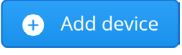
Heating systems present at our homes are quite complex and they often do not offer any smart home capabilities natively. That's why you can create a Linked Device, which can act as the given Thermostat.

#### How does the linked device work?

When you choose the main device for the thermostat it means that the actions of the switches selected in the Linked Device will depend on the readings from the main device.

Depending on the selected devices, different operating modes will be available. If you select a device (Switch/Wall Plug) as a heating device only, the linked device will support modes only for heating. If you select devices for cooling as well, then the Linked Device supports more modes, i.e.: Heat, Cool, Auto, Off.

#### Creating Thermostats


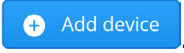
1. Open the Configuration interface.
2. Go to  > **Devices**.
3. Click .
4. Choose **Other Device**.
5. Click **Thermostat**.
6. Enter the name of the thermostat.
7. Choose a Room.
8. Choose the main device.
9. Select heating and/or cooling devices.
10. Save.



## 14.2: CAMERAS

### Adding Cameras

Supported cameras: Your camera must use MJPEG video compression format. H.264, H.265, RTSP, and other streaming formats are not supported in the Configuration Interface.

1. Open the Configuration interface.
2. Go to  > **Devices**.
3. Click .
4. Click **IP Camera**.
5. Choose Manufacturer and Model of your device (select Other if your camera is not on the list).
6. Click Next.
7. Go to the Advanced tab.
8. Enter data for your camera.
9. Click Save.

## 14.3: QUICK APPS



The concept of Quick Apps is an evolution of plugins and virtual devices found in previous gateways.

It is possible to use Quick Apps to prepare integrations with the devices which are not Z-Wave, but offer some API which can be implemented in our Quick App.

### Advantages of the new Quick Apps approach:

- easier development,
- simple installation,
- quick configuration,
- usable in scenes.

### Creating Quick Apps

1. Open the Configuration interface.
2. Go to  > **Devices**.
3. Click .
4. Choose Other Device.
5. Choose Quick App.
6. Enter the name of the Quick App.

7. Choose a Room.
8. Choose the device type .
9. Click > next to the created Quick App.
10. Go to Edit&Preview tab.
11. Click Edit.
12. Drag & drop items and enter the Lua code.
13. Click Save.

### Quick App encryption

**Note:** Quick App code encryption is available with gateway firmware version 5.113 or higher.


Encryption is used to keep your data confidential. The file or transmitted data is distorted so that only the appropriate users with the secret key can reconstruct the original text.

With code encryption, you will be able to share your solutions without giving access to the source code to other users.

The interface allows the Quick App to be encrypted in two ways:

- **Encrypted** – your file will be downloaded as Encrypted, no one will be able to see or edit it.
- **Encrypted and restricted for specific serial numbers** – your file will be downloaded as Encrypted and restricted for specific serial numbers, no one will be able to see or edit it. In addition, the file will only be able to be opened on the designated gateways. Just enter the serial numbers of the gateway.

### Downloading the encrypted Quick App file

1. Open the Configuration interface.
2. Go to  > **Devices**.
3. Select Quick App from the list and expand the tab.
4. Select Advanced.
5. Click Download.
6. Select protection type.
7. Now you can share your QuickApp without worrying about tampering with your file.

## Uploading an encrypted file

To upload an encrypted Quick App, follow the same steps as for an open source Quick App's file.

Once the Quick App has been uploaded, the ability to edit the code and download the file will be blocked.


## 14.4: NOTIFICATIONS

### Setting notifications for the device


1. Choose the states of the device you want to be informed about.  
Available options depend on the device type.
2. Choose the interval for the notification:
  - Once (will be done once when the event occurs),
  - Once per minute (at the full minute),
  - Once per hour (at the full hour),
  - Once per day (every day at 12.00),
  - Once per week (Monday at 12.00).
3. Choose the channel of communication:
  - E-mail,
  - Push.
4. That's all. You will now be informed every selected time interval the device will be in one of the states you chose.

## 15: SETTINGS

### 15.1: CHANGING NAME


1. Open the Configuration interface.
2. Go to  > **Devices**.
3. Click on the frame next to the device you want to rename.
4. Enter new name.

### 15.2: CHANGING ROOM


1. Open the Configuration interface.
2. Go to  > **Devices**.
3. Choose a room from the list.

### 15.3: CHANGING CATEGORY


**Categories are used to filter devices in the History window and in the mobile app.**

1. Open the Configuration interface.
2. Go to  > **Devices**.
3. Click > next to the device.
4. Choose one of the categories:
  - Lights,
  - Blinds,
  - Ambience,
  - Climate,
  - Gates,
  - Safety,
  - Security,
  - Multimedia,
  - Remotes,
  - Other.

### 15.4: CHANGING ICON

1. Open the Configuration interface.
2. Go to  > **Devices**.
3. Click > next to the device.
4. Choose one of the default icons or add new one.


### 15.5: ADDING AN ICON

1. Open the Configuration interface.
2. Go to  > **Devices**.
3. Click > next to the device.
4. Click ADD ICON (Size of the icon must be 128px/128px).

## 15.6: THEORETICAL POWER CONSUMPTION

For switches without a built-in power metering feature, you can define the theoretical power consumption.

Whenever the device is turned on, the meter will assume that it consumes power set by the user (in Watts).

1. Open the Configuration interface.
2. Go to  > **Devices**.
3. Expand the device you want set the theoretical power for.
4. Open the Advanced tab.
5. Enabled the Theoretical power consumption and set the power.
6. Save.

## 16: CONFIGURATION

### 16.1: NETWORK SETTINGS

#### Checking network status


There are two ways to check network status of the gateway:

1. By checking the status indicator on the gateway housing:
  - Red – Wi-Fi in Access Point mode (ready to configure)
  - Pulsing copper – disconnected from Internet
  - Green – connected to Internet
2. By checking the network status in the Configuration Interface:

 > Network > Internet Status

### 16.2: WI-FI CONNECTION


#### Connecting to a Wi-Fi network:

1. Open the Configuration interface.
2. Go to  > Network > Wi-Fi connection.
3. Enable Wi-Fi.
4. Click Search & Connect to Network
  - If your network is on the list:
    - Select the network from the list and click Next,
    - Enter password if needed.
  - If your network is not on the list:
    - Select Different/Hidden and click Next,
    - Enter the network name (SSID) and security data
5. Click Connect.


#### How to set static IP Address:

Setting static IP address on a gateway consists of at least three steps:

- Determine the IP of the gateway and decide whether is it the IP you want to leave permanently.
- Configure the home router so that it also keeps the IP for this device.
- Set the selected IP in the Configuration Interface:

1. Open the Configuration interface.
2. Go to  > **Network** > **Wi-Fi connection**.
3. Set Network connection type to Static/Manual.
4. Input the IP address you want to set for the gateway.

#### **How to set dynamic IP Address:**

1. Open the Configuration interface.
2. Go to  > **Network** > **Wi-Fi connection**.
3. Set Network connection type to DHCP.


#### **Resetting network settings**

Resetting network settings will restore Wi-Fi factory settings.

#### **Using button on the cover:**

1. Hold the D button for 20 seconds.
2. Click when the indicator is blinking red.


#### **Using Recovery Interface:**

1. Open the  Recovery Interface.
2. In Network Settings section click Reset.

## 16.3: SECURE CONNECTION

The gateway can use HTTP and HTTPS protocols for communication. Use HTTPS to ensure security by encrypting communication.

#### **To set connection type:**

1. Open the Configuration interface.
2. Go to  > **Network** > **Secure Connection**.
3. Select connection type:
  - HTTP – standard connection without additional encryption,
  - HTTPS – secure encrypted connection,
  - HTTP/HTTPS – the gateway will accept both types of connection.
4. Save.

**REMEMBER** Your browser might show you a warning when connecting via HTTPS, in this case, do the following:

1. Download certificate from the Secure Connection section in Network settings and install it on your system (and browser),
2. Use the gateway's serial number to connect locally, i.e. use serial\_number.local, e.g. https://yh-00000001.local

### Installing root certificate on Windows

1. Download the certificate.
2. In the Windows Start menu search for mmc app and open it.
3. In the MMC (Microsoft Management Console) app go to File > Add/Remove Snap-In.
4. Add Certificate Snap-in: **Certificates > Select "Computer account" > Next > Next > OK.**
5. Now go to Certificates > Trusted Root Certification Authorities and right-click on "Certificates"
6. Import the certificate.
7. Find the certificate downloaded from the gateway.
8. Import it.
9. Done.
10. Your connection with the gateway is now secure.


## 17: ROOMS AND SECTIONS

Rooms and sections are used to organize devices to reflect their place in your house.

### 17.1: SECTIONS

Sections represent areas in your house (e.g. floors) and rooms can be assigned to them.


#### Adding sections:

1. Open the Configuration interface.
2. Go to  > **Rooms**.
3. Click Manage sections.
4. Type in a new name and click plus icon.

#### Deleting sections:

1. Open the Configuration interface.
2. Go to  > **Rooms**.




3. Click Manage sections.
4. Click  next to the section you want to delete.


## 17.2: ROOMS

Rooms represent rooms and other places in your house (e.g. living room, corridor) and devices can be assigned to them.


### **Adding rooms:**

1. Open the Configuration interface.
2. Go to  > **Rooms**.
3. Click Add room.
4. Set room information
  - Category – categories are used for filtering rooms by type,
  - Name – name of the room,
  - Section – section of the house the new room will be assigned to,
  - Icon – icon that will represent the room.
5. Save.

### **Editing rooms:**


1. Open the Configuration interface.
2. Go to  > **Rooms**.
3. Click ... in the top right corner of the room icon.
4. Click Edit.
5. Edit room information:
  - Category – categories are used for filtering rooms by type,
  - Name – name of the room,
  - Section – section of the house the new room will be assigned to,
  - Icon – icon that will represent the room.
6. Save.

### **Deleting rooms:**

1. Open the Configuration interface.
2. Go to  > **Rooms**.
3. Click ... in the top right corner of the room icon.
4. Click Delete.
5. Confirm.

**Default room:**

New devices will be automatically assigned to the default room.


1. Open the Configuration interface.
2. Go to  > **General**.
3. Set Default room (under the section: Main Sensors).

## 18: USERS AND ACCESS

### 18.1: USER ROLES


- **Admin** – only one user, can configure the system, operate devices, add users and give them permissions.
- **User** – one or more users, can switch devices on/off, see the state and history data of devices.

### 18.2: ADDING USERS



1. Open the Configuration interface.
2. Go to  > **Access > Users**.
3. Click Add user.
4. Enter Name and E-mail (we recommend using ID) of added user and click Next.
5. Message with local password for the new account will be sent to entered e-mail address.

### 18.3: GIVING PERMISSIONS TO USER

For a new user to be able to use the gateway, admin must give it appropriate privileges.


1. Open the Configuration interface.
2. Go to  > **Access > Users**.
3. Click Manage Access on the user list.
4. Select sections and/or devices to give the user access to them.
5. Click Save.

### 18.4: MANAGING USER'S MOBILE DEVICES


1. Open the Configuration interface.
2. Go to  > **Access > Users**.
3. Click  > next to the user.

4. To add a mobile device to the gateway, log in to the mobile application on the given device.
5. To remove a mobile device from the gateway, click the next to it and then confirm action by clicking DELETE.
6. Select “Send notifications” check box if you want to receive notifications on mobile devices.


## 18.5: SETTING PIN FOR THE USER

1. Open the Configuration interface.
2. Go to  > **Access > Users**.
3. Click > next to the user
4. Enter the PIN code. Remember it, you will need this to change it and to disarm the alarm.
5. Select “Ask for PIN when arming” check box to increase safety and prevent unintentional arming.

## 18.6: SETTING LOCAL PASSWORD FOR THE USER

1. Open the Configuration interface.
2. Go to  > **Access > Users**.
3. Click the > next to the user.
4. Enter new local password.
5. Click Save.

## 18.7: TRANSFERRING ADMIN PRIVILEGES

1. Open the Configuration interface.
2. Go to  > **Access > Users**.
3. Choose the non-admin user to transfer the rights.
4. Click > next to this user.
5. Click TRANSFER ADMIN ROLE.
6. Click Transfer to confirm.
7. Message about transferring the admin role will be sent to the chosen user’s e-mail address.
8. User has to log into the gateway. In the top right corner click its e-mail address and choose Account Settings.
9. Click ACCEPT to accept the transfer.


## 19: REMOTE ACCESS

Remote Access allows you to connect and manage your control panel and devices from a remote area outside your home. The gateway must be connected to the Internet and powered on.

### 19.1: ENABLING REMOTE ACCESS

Remote access is enabled by default.

**To enable/disable remote access:**


1. Open the Configuration interface.
2. Go to  > **Access > Remote Access**.
3. Enable/disable Remote Access toggle.

### 19.2: SUPPORT ACCESS

You should enable Support Access when you have an issue that you cannot resolve on your own. By granting access to your gateway, the support team may be able to find problems faster.

### 19.3: ENABLING SUPPORT ACCESS


To enable support access:

1. Open the Configuration interface.
2. Go to  > **Access > Remote Access**.
3. Enable Support Access toggle.

## 20: TIME AND UNITS

The gateway gives you possibility to set the time, time zone, units and even separators!

### 20.1: SETTINGS

1. Open the Configuration interface.
2. Go to  > **General**.
3. Open the Time & Units tab.

**Now you can change settings, such as:**

#### **Date and time**

- Time zone,
- Date and time (you can get it from the NTP server or set manually),

- NTP server,
- Date format,
- Hour format (12-hour, 24-hour),
- Date,
- Time.

### **Units and separators**

- Temperature unit (Celsius, Fahrenheit),
- Wind speed unit (km/h, mph),
- Decimal mark (comma, dot).


## 20.2: LOCATION

Setting location in the gateway allows you to personalize your smart home experience.


Location is used for weather retrieving and can also be useful for automation purposes.

Once you set your home and/or work location, you can trigger certain scenes via entering or leaving the zone.

## 20.3: HOME LOCATION

1. Go to  > **General** > **Location** (tab).
2. Drag the map so that you see your home address.
3. Click the location of your home to update the pin.
4. Set the radius accordingly to your house and property size, e.g. 100m.
5. Save.

## 20.4: ANOTHER LOCATION

1. Go to  > **General** > **Location** (tab).
2. Click Add Location.
3. Enter the name of your new location, e.g. Work.
4. Drag the map and click the place of your work.
5. Set the radius of your work, e.g. 300 m.
6. Save.

## 21: Z-WAVE

### 21.1: SETTINGS

- Reconfigure all devices,
- Reconfigure mesh network (You can choose if you want to configure entire Z-Wave network or single devices),
- Broadcast “Node Information” frame,
- Add secondary controller,
- Transfer controller,
- Reset energy metering,
- Reset Z-Wave,
- Enable devices polling,
- Poll unavailable devices,
- Mark nodes as unavailable,
- Set devices polling time interval,
- See number of devices added to your gateway.

## 22: AUTOMATION


### 22.1: SCENES

Scenes allow automating your system to provide the real Smart Home experience. They can integrate multiple devices included in your system and may be activated by weather conditions, a series of intuitive timers or various sensor/module states.



**There are three types of scenes to create in the interface:**

- **Block Scenes** are easy to build. Using number of available customizable blocks complex scenes can be visually created. It is not possible to implement all functionalities of the System with Block Scenes, but are the best way for a basic user to enhance home automation.
- **Lua Scenes** are most advanced, but allow user to fully utilize all System capabilities. Such scenes are based on the Lua programming language and require basic programming skills.
- **The scenarios** are very easy to build. They have almost ready-made solutions for autoamticiation.



## 22.2: CREATING SCENES

1. Open the Configuration interface.
2. Go to  > **Scenes**.
3. Click Add scene.
4. Choose scene type.
5. Set basic settings:
  - Name – name of the scene.
  - Run scene – choose if the scene will be run automatically (when conditions are met) or manually (ignore conditions).
  - Allow to restart a running scene – if set to “Yes”, every new activation of the scene restarts it, if set to “No”, scene can’t be activated again if it is already running.
  - Category – categories are used for filtering scenes by type.
  - Icon – icon that will represent the scene.
6. Save.



## 22.3: EDITING SCENES

1. Open the Configuration interface.
2. Go to  > **Scenes**.
3. Click  to edit the scene.
4. Edit scene.
5. Save.



## 22.4: DELETING SCENES

1. Open the Configuration interface.
2. Go to  > **Scenes**.
3. Click the  to delete the scene.
4. Click Delete.

## 22.5: DUPLICATING SCENE

1. Open the Configuration interface.
2. Go to  > **Scenes**.
3. Click  next to the scene you want to duplicate.
4. Click Copy to confirm.

## 22.6: CONVERTING BLOCK SCENE TO LUA SCENE

1. Open the Configuration interface.
2. Go to  > **Scenes**.
3. Click  next to the scene you want to duplicate.
4. Click Copy & Convert to confirm.

## 22.7: SCENARIOS


You can set up Scenarios. These are special scenes that allow you to control your roller shutters in the morning and in the evening.

### The available scenarios:

- **Morning scenario** – the possibility to set the roller shutters to raise, lower or move to a favourite position at sunrise or at a specific time.
- **Evening scenario** – the roller shutters can be set to raise, lower or move to your favourite position at sunset or at a specific time.

A list of scenarios is available during adding a scene.

### Adding a Scenario:


1. Open the Configuration interface.
2. Go to  > **Scenes**.
3. Click Add scene.
4. Click Scenario.
5. Select the Morning Scenario or the Evening Scenario.
6. Configure the actions to be performed.
7. The list of available Scenarios will be available on the Scenarios tab.

## 22.8: FAVOURITE ROLLER SHUTTER POSITIONS

During scenario creation, you can use your favourite roller shutter positions.

- **Intermediate position** - comfortable opening, providing shade from the sun while keeping out the light in the room.
- **Unsealed position (Ventilation)** - minimum opening, providing security while keeping the outside air flowing in.


### Adding favourites for Z-Wave :

1. Open the Configuration interface.
2. Go to  > **Devices**.
3. Open the device properties and select Advanced.
4. To start the process, click Configure.
5. The controls for configuration (up, down, stop) will appear.




6. Adjust the correct position and then click Save this position.
7. If the roller shutter has not reached the desired level, you can repeat the configuration by clicking Configure again.

## 22.9: CHANGING NAME


1. Open the Configuration interface.
2. Go to  > **Scenes**.
3. Click on the frame next to the scene you want to rename.
4. Enter new name.

## 22.10: DISABLING/ENABLING


1. Open the Configuration interface.
2. Go to  > **Scenes**.
3. Click Disable/Enable button next to the scene you want to disable/enable.

## 22.11: CHANGING TRIGGERING MODE (MANUAL/AUTO)


In auto mode, the scenes runs automatically, when triggers and conditions are met, in manual mode the scene can be triggered only manually by the user.

1. Open the Configuration interface.
2. Go to  > **Scenes**.
3. Click toggle to change triggering mode.

## 22.12: CHANGING OTHER SETTINGS


1. Open the Configuration interface.
2. Go to  > **Scenes**.
3. Click > to expand the scene.
4. Edit scene settings:
  - Allow to restart a running scene – if set to “Yes”, every new activation of the scene restarts it, if set to “No”, scene can’t be activated again if it is already running.
  - Category – categories are used for filtering scenes by type.
  - Hidden scene - tick to hide the scene in the interfaces.
  - Require PIN code - tick if you want to secure the scene by requiring a PIN code to run.
  - Icon - the icon that will represent the scene.
5. Save.

## 22.13: RUNNING SCENES


1. Open the Configuration interface.
2. Go to  > **Scenes**.
3. Click Play button next to the scene which you want to run.

## 23: VARIABLES

Variables allow you to create more advanced scenes and home automations which goes beyond just a scene setup. There are situations and things that you want to keep track outside the particular scene, or you want to share the variable across different scenes.

**Standard variable** – The Standard variable can store any value you wish. The value stored in the Standard variable can be set manually in  > **General > Variables** or from a scene. It can then be used as part of a condition in other scenes.

**Enumerated variable** – The Enumerated variable has set values that you configure when you create the variable. The variable can then only be set to one of these present values. It is useful having defined values such as Night, Day, Home, Away etc.



1. Open the Configuration interface.
2. Go to  > **General > Variables**.
3. Click Add Variable.
4. Choose Standard or Enumerated variable.
5. Enter the Name and Value/Values.
6. Click Add.

## 24: CLIMATE SCHEDULES

Temperature schedules allow for automatic control of heating and cooling for each area (zone) of the house.


Devices controlling temperature (e.g. thermostats) are required to a create the temperature zone. You can create your own thermostats by connecting a temperature sensor and actor that turns heating/cooling on/off.

### 24.1: CREATING THERMOSTATS

1. Open the Configuration interface.
2. Go to  > **Devices**.
3. Click  .

4. Choose Other Device.
5. Click Thermostat.
6. Enter the name of the thermostat.
7. Choose a Room.
8. Choose the main device.
9. Select heating and/or cooling devices.
10. Save.


## 24.2: ADDING ZONES

1. Open the Configuration interface.
2. Go to  > **Climate**.
3. Click Add Zone.
4. Select how zones should be created:
  - Automatically – zones will be created automatically for all rooms with temperature devices.
  - Manually – manually select devices to be included in the new zone.

## 24.3: ZONE MODES

- Schedule – zone works according to the set schedule.
- Manual – constant temperature is set for a specified time duration.
- Vacation – constant temperature is set until disabled.



## 24.4: CONFIGURING ZONE SCHEDULE

1. Open the Configuration interface.
2. Go to  > **Climate**.
3. Click > to expand the zone.
4. Select operating mode:
  - Heating: devices increase the temperature to reach the temperature setpoint,
  - Cooling: devices decrease the temperature to reach the temperature setpoint,
  - Auto: devices determine if they should cool or heat to reach the temperature setpoint,
  - Off: devices are always off.
5. Set start times for periods by moving the sliders or entering them below.

6. Enter temperatures to be set on each period.
7. Save.

If you want to use the same schedule on multiple days, you can set it once, then copy it to the remaining days.



## 24.5: EDITING ZONE NAME AND DEVICES

1. Open the Configuration interface.
2. Go to  > **Climate**.
3. Click  to edit the zone.
4. Change name or devices in the zone.
5. Save.


## 24.6: GARDEN CARE

Watering schedules allow for automatic control of your sprinklers. You need to create sprinklers first in order to configure watering schedules.


## 24.7: CREATING SPRINKLERS

1. Open the Configuration interface.
2. Go to  > **Devices**.
3. Click .
4. Choose Other Device.
5. Choose Sprinklers.
6. Fill in new sprinkler settings:
  - Enter the name.
  - Choose a room.
  - Choose watering devices.
  - Choose watering default time.
  - Select soil moisture sensor (optional).
  - Set humidity level to turn off watering.
7. Save.

## 24.8: EDITING SPRINKLERS

1. Open the Configuration interface.
2. Go to  > **Devices**.
3. Find your sprinkler on the list.
4. Click > next to the sprinkler you want to edit.
5. Click EDIT DEVICE.
6. Edit settings and Save.

## 24.9: ADDING AND CONFIGURING WATERING SCHEDULES

1. Open the Configuration interface.
2. Go to  > **Garden**.
3. Click Add Schedule.
4. Insert name for watering schedule.
5. Click > to expand the schedule.
6. Choose days to apply the schedule for.
7. Click Save.

## 24.10: ADDING WATERING SEQUENCES TO A SCHEDULE

1. Click > to expand the schedule.
2. Click ADD SEQUENCE to add new sequence to the schedule.
3. Choose devices to use in this sequence.
4. Click > next to the sequence to configure it.
5. Set order of the sprinklers and modify duration if needed.
6. Repeat steps 2-5 to add and configure more sequences.
7. Click Save.


## 25: PROFILES

Profiles are sets of states (of devices, zones, scenes) that can be activated quickly by the user or a scene.


At least one profile is required. There are four default profiles, but you can add more if you want to.

### 25.1: CREATING PROFILES


1. Open the Configuration interface.

2. Go to  > **Profiles**.
3. Click Add Profile.
4. Name the new profile.
5. If you want to copy settings from another profile, select it in Based on field.
6. Select icon for the new profile.
7. Click Add.


## 25.2: CONFIGURING PROFILES

1. Open the Configuration interface.
2. Go to  > **Profiles**.
3. Set how your scene, devices and zones should work in each profile.

## 25.3: EDITING PROFILE NAME AND ICON

1. Open the Configuration interface.
2. Go to  > **Profiles**.
3. Next to profile name click ...
4. Click Edit.
5. Change name or click new icon.
6. Save.

## 25.4: DELETING PROFILES

1. Open the Configuration interface.
2. Go to  > **Profiles**.
3. Next to profile name click ...
4. Click Delete.
5. Confirm.

## 25.5: ACTIVATING PROFILES MANUALLY

1. Open the Configuration Interface.
2. On the top bar click the name of current profile.
3. Click on the name of the profile you want to activate.

## 26: ALARMS

Alarm feature allows to create alarm zones using sensors in your system. Breaching any sensor in an armed zone will trigger an alarm. The system will inform you about an alarm, you can also activates scenes when alarm triggers.

Blue icon indicates the occurrence of an alarm. When alarm occurs, icon becomes red and clickable.

Clicking red icon will direct you to Settings > Alarm so that you can see in which zone the alarm occurred.

## 27: RECOVERY MODE

Recovery Mode allows retrieving the gateway operating system in case of technical problems, e.g. when the Configuration Interface is not reachable after update.



Using Recovery Mode you can repair the system or restore the default configuration (to its initial state).

The gateway maintains two copies of the system (System A and B) to ensure safety of your data during the firmware update. Updating system is always performed on the inactive system, then the gateway switches to it, thus maintaining copy of your data from before the update. In case of any problems you can switch back to it.

### Using button on the cover:

1. Unplug the power supply from the gateway.
2. Press and hold the D button.
3. Plug the power supply into the gateway.
4. Release the D button when the indicator starts pulsing red.
5. When the indicator turns green, open the Recovery Interface in your Internet browser, as you would normally open the Configuration Interface.

### Using Configuration Interface:

1. Open the Configuration Interface.
2. In top right corner click .
3. Choose .
4. Recovery Mode from the menu.
5. Confirm.
6. Wait for the system to reboot, the indicator will turn green.
7. Refresh the browser tab.

### 27.1: AUTO-REPAIRING SYSTEM

In case of problems after updating your system, you can quickly repair it by using auto-repair. It will switch to copy of your system from before the last system update.

1. Enter the Recovery Mode.
2. Click Auto-repair.
3. Confirm.



## 27.2: SWITCHING BETWEEN SYSTEMS

You can switch between system A and B at any moment using the Recovery Mode, e.g. when current system encounters a problem.

1. Enter the Recovery Mode.
2. Click Switch to System A/B.
3. Choose if you want to restore Latest version or use Local file.
4. Confirm.

## 27.3: REPAIRING SYSTEM

This feature allows you to restore the operating system to the latest version or version from a file without deleting any user data. Only the system will be refreshed.

Depending on how you have entered the Recovery Mode, different system will be available for repairing: inactive when entered via configuration interface or active when entered using D button. Switch system to repair the other one.


1. Enter the Recovery Mode.
2. Click Repair System A/B.
3. Choose if you want to restore Latest version or use Local file.
4. Confirm.

## 27.4: RESETTING NETWORK SETTINGS

In some cases, problems with the gateway may be caused by changes in the network configuration of the environment in which the gateway is located. If you do not want to restore the entire system to factory settings, try resetting the network settings first, as this may solve your problems with the gateway.

1. Enter the Recovery Mode.
2. Click Reset in the Reset Network Settings section.
3. Confirm.

## 27.5: RECOVERING SYSTEM

 **CAUTION:** The configuration will be removed and lost if not backed up. This feature allows you to restore the operating system to the latest version or version from a file and delete all data from this system (users, devices, scenes etc.).

Depending on how you have entered the Recovery Mode, different system will be available for recovering: inactive when entered via configuration interface or active when entered using **D** button. Switch system to recover the other one.

1. Enter the Recovery Mode.
2. Click Recover System A/B.
3. Choose if you want to restore Latest version or use Local file.
4. Confirm.

## 28: RESETTING TO FACTORY DEFAULTS



**Caution!** The whole configuration will be removed and lost if not backed up.

If this controller is the primary controller for your network, resetting it will result in the nodes in your network being orphaned and it will be necessary after the reset to exclude and re-include all of the nodes in the network.


This feature allows you to restore the whole system to factory settings. It means the factory software version will be restored and all data from the system A and B will be deleted (users, devices, scenes etc.).

If the gateway is set as Z-Wave secondary controller use this procedure only when the primary controller is missing or otherwise inoperable.

1. Open the Configuration Interface.
2. In the top right corner click user name
3. Choose **Recovery Mode** from the menu.
4. Confirm.
5. Wait for the system to reboot, the LED indicator will be pulsing red.
6. When the LED indicator turns solid red, refresh the browser tab.
7. Click **Factory Reset** under **Network Status** section.
8. Check “**Yes, I’m sure and I know what I’m doing**” checkbox.
9. Confirm.

### 28.1: RESETTING Z-WAVE TO FACTORY DEFAULTS

Resetting the Z-Wave network removes all the Z-Wave devices from the gateway’s memory, but the other data remains unchanged. Scenes that used Z-Wave devices will not work anymore.


1. Open the Configuration Interface.
2. Go to  > **Z-Wave**.
3. Under **Reset Z-Wave** click **Reset**.
4. Confirm.

## 29: UPDATING FIRMWARE


The gateway will inform you if there are any new updates with red badge and number on icon in the top bar. Updates may include new features, improvements, and bug fixes. We recommend installing those updates as soon as they are available to ensure best operation and security.

Updating the gateway is not possible via the Remote Access.

### 29.1: UPDATING FIRMWARE OF GATEWAY

1. Open the Configuration Interface.
2. Go to  > **Update** > **Gateway**.
3. Click **Download Update** for the respective update.
4. Wait for the update to be downloaded.
5. Determine whether you want to do the cloud backup, local backup or no backups before the update.
6. Accept Terms & Privacy Policy.
7. Click **Install Update**.
8. Click **Update** to confirm the update.

### 29.2: UPDATING FIRMWARE OF Z-WAVE DEVICES

1. Open the Configuration Interface.
2. Go to  > **Update** > **Devices**
3. You will see list of devices ready to update.
4. Select a device from the list.
5. Click **Start update**.

## 30: SYSTEM REPORT


The system allows to print a full report of the configuration for easier management and diagnostics.

The report gives you all the necessary information about the system at first glance. This can be useful for example for finding devices needing battery replacement or creating scenes.

### 30.1: THE REPORT INCLUDES INFORMATION ABOUT

- network configuration,
- rooms,
- devices,
- scenes,
- users,
- alarm zones,
- climate zones,
- garden schedules,
- profiles,
- general settings,
- variables and events,
- backups.

### 30.2: TO GENERATE SYSTEM REPORT

1. Open the Configuration interface.
2. Go to  > **General**.
3. Click Generate next to Generate system report
4. A new window with the report will open ready to print.



## 31: BACKUPS

Backups of your entire system are the best way to prevent losing configuration data in case of any issues or unintentional changes. We recommend creating backups regularly.



There is limited storage for backups! You can store up to 5 local and up to 50 MB of backups in our cloud service. If you need more you can download and save them on your computer.

### 31.1: CREATING CLOUD BACKUPS


Cloud backups require configured and enabled Remote Access (see link [enable remote access](#)).

1. Open the Configuration Interface.
2. Go to  > **Backup** >  **Cloud Backup**.
3. Click Create backup.
4. Enter a description for the new backup.
5. Confirm.
6. Wait for the process to end (interface will be unavailable while creating the backup).
7. The backup will be added to your cloud backups.

### 31.2: CREATING LOCAL BACKUPS

1. Open the Configuration Interface.
2. Go to  > **Backup** >  **Local Backup**.
3. Click Create backup.
4. Enter a description for the new backup.
5. Confirm.
6. Wait for the process to end (interface will be unavailable while creating backup).
7. The backup will be added to your local backups.


### 31.3: DOWNLOADING LOCAL BACKUP FILE

1. Open the Configuration Interface.
2. Go to  > **Backup**.
3. Click Download next to the local backup you want to download.
4. File with last local backup will be downloaded on your computer.


## 31.4: RESTORING BACKUPS

Cloud backups require configured and enabled Remote Access (see link [enable remote access](#)).

## 31.5: RESTORING BACKUP FROM THE LIST

1. Open the Configuration Interface.
2. Go to  > **Backup**.
3. Next to backup you want to restore click Restore.
4. If provided with options:
  - Click Restore & Convert – backup created on earlier software version will be restored on the current version.
  - Click Restore with version – backup created on earlier software version will be restored with that version.
5. Confirm.
6. Wait for the process to end (interface will be unavailable while restoring backup).

## 31.6: RESTORING LOCAL BACKUP FROM FILE

1. Open the Configuration Interface.
2. Go to  > **Backup > Local Backup**.
3. Click Upload backup.
4. Select backup file on your computer.
5. Backup will be added to your list.
6. If you want to restore the backup, click Restore next to it.

# 32: DIAGNOSTICS

Diagnostics screen presents technical data about actual use of particular components, i.e. CPU, RAM, Storage, Z-Wave. This can help in troubleshooting or understanding how certain actions influence our system.

## 32.1: THERE ARE 4 TABS

- CPU – shows the actual use of each core,
- RAM – shows the actual use of RAM memory and indicated how much percent is used for what purpose,
- Storage – shows the status of internal memory,

- Z-Wave – lists all Z-Wave devices that are not configured or without templates.

## 33: VOICE ASSISTANTS

### 33.1: GOOGLE ASSISTANT

The **Google Assistant** and system work together to make devices even more convenient to use. Smart system and voice control by Google will help you to control lights, blinds, temperature, sensors, scenes and even more without lifting a finger. There won't be a need to find your phone, use wall switches or any other remotes – just talk to your Google Assistant.

#### Google Assistant

The Google Assistant is a virtual assistant developed by Google that is primarily available on mobile as an app and on smart home devices, like Google Nest Audio, Google Nest Mini, Google Nest Hub and similar.

Smart Home (Home control) for smart home devices with Google Assistant (like Google Home) is available in the following languages:

- English (U.S., U.K., Canada, Australia),
- German (Germany),
- French(France, Canada),
- Italian,
- Spanish (Spain, Mexico),
- Portuguese (Brazil),
- Polish (only on mobile devices).

Availability and features of the Google Assistant or Google Home app may vary depending on your region and phone settings.

#### Activating integration in the Google Home app:

1. On your mobile device, open the Google Home app.
2. Tap +.
3. Tap Set up device.
4. Tap Supported by Google.
5. Search for **Smart Home**, then tap it.
6. Log in with your **ID** account.
7. Assign rooms if required.

### Activating integration in the Google Assistant app:

1. On your mobile device open the Google Assistant and say “Hey Google, open Assistant settings” or go to Assistant settings.
2. Tap **Assistant** and then **Home control**.
3. Search for **Smart Home**, then tap it.
4. Log in with your **ID** account.
5. Assign rooms if required.

## 33.2: AMAZON ALEXA

The **Amazon Alexa** and system work together to make devices even more convenient to use. Smart system and voice control by Amazon will help you to control lights, blinds, temperature, sensors, scenes and even more without lifting a finger. There won't be a need to find your phone, use wall switches or any other remotes – just talk to Alexa.

Amazon Alexa is Amazon's voice service that responds to questions and commands. Alexa can give you the latest news, tell you the current weather forecast, play music, control connected home products, and much more.

### Regional accessibility and supported languages

- English (US, UK, Canada, India),
- French (France, Canada),
- German (Germany),
- Italian (Italy),
- Portuguese (Brasil),
- Spanish (Spain, Mexico, US).

### Enabling Smart Home skill

1. Open **Amazon Alexa mobile app**.
2. Tap Devices on the bottom menu.
3. At the bottom of the screen tap YOUR SMART HOME SKILLS.
4. Tap ENABLE SMART HOME SKILLS.
5. Tap looking glass and search for “smart home”.
6. Select Smart Home Skill.
7. Tap ENABLE TO USE.
8. Log in with ID account with added Home Center gateway.
9. Go back to the Alexa app.
10. Smart Home skill will be added, tap Discover devices.



## 34: ENERGY PANEL

The Energy Panel is dedicated to energy producing installations, but it also allows you to analyse your home's energy consumption.

If you have a main energy meter, all the total consumption data will come from this device.

In the case of the lack of a main energy meter, the consumption data will come from all devices present in the system with active energy metering.

The panel has a data display switch, which allows energy consumption and energy savings to be presented in kWh or in the selected currency.

### 34.1: PANEL CONFIGURATION

The panel configuration is only available to the system administrator.

**To access the configuration:**

Go to  Energy → Panel settings

### 34.2: BILLING PERIOD

- Possibility to choose the interval and the start date of the billing period.
  - » one month
  - » two months
  - » quarter
  - » six months
  - » year
- Editing a billing period only affects the current period, previous billing periods will not be modified.
- You can also enter your fixed costs.

### 34.3: TARIFF

- Possibility to set the billing rate per kWh of energy.
- Here you can change the currency.
- The tariff consists of:
  - » Main rate – by default applies for the entire billing period.
  - » Additional rates – possibility of adding an additional rate with a different billing rate.
- The possibility of defining a percentage of energy, which determines what proportion of the energy given up to the mains can be taken back in the future.

- » The factor affects the total cost of energy production.
- » The default value is 100%, a change only affects the current billing period.

### 34.4: EXPENSES

The tab allows you to save the cost of the energy production installation.

- Possibility of specifying the cost and date of installation of the energy-producing installation.
- Determination of additional costs related to maintenance and servicing.


### 34.5: HISTORY

- Possibility of deleting data history from individual devices in the system.
- To delete the history, select the devices and dates.

### 34.6: METERS CONFIGURATION

Choose how to measure energy consumption:

- **Whole consumption** – the total energy consumption/production will be calculated as the sum from all devices (production data goes directly to the energy meter).

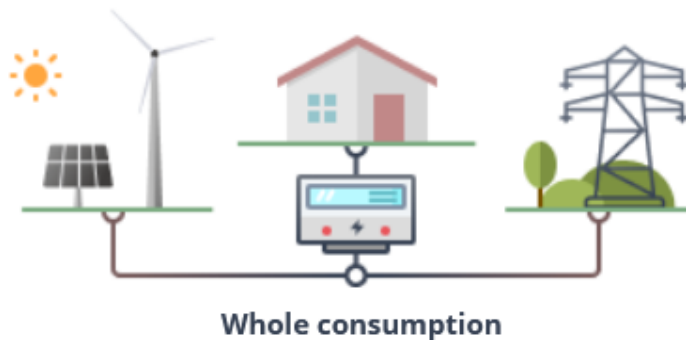

- **Grid consumption** – The instantaneous power consumption will be calculated as the sum of the readings from the selected devices (production goes directly to the house, the meter shows the difference between production and consumption.)



**Grid consumption**

### 34.7: GENERAL TAB

The General tab is the basic view of the Energy Panel. It consists of elements:

1. Summary. Here you can find the current value of Production, Consumption and Energy Balance.
2. Billing periods comparison.
  - The difference between the current and previous billing period. At least one billing period must be closed for this value to appear.
3. Energy Balance Chart. Contains three series of data related to the energy balance, according to the selected time period. Default values are:
  - Daily balance.
  - Data series of the current day and the two preceding days.
4. The devices that consume the most energy. Here you can find a list of the 3 devices that consume the most energy in a given period of time.
5. Detailed consumption data. Here you will find a graph specifying the consumption data for each section/room during the specified time.

### 34.8: SAVINGS TAB

The tab allows a detailed analysis of consumption and production over a selected period. It consists of elements:

1. Summary of energy consumption. Here you can find the current cost of energy consumption, the average cost from closed billing periods and the annual energy consumption.
2. Energy balance over time. This includes:
  - The chart describes the energy consumption/production data for the selected period.

- Summary of total production and consumption for the selected period.
  - List of devices that have consumed energy in the selected period.
3. Comparison of a period from the top chart to another date. It is possible to compare a selected day/week with any date.

### 34.9: ECOLOGY TAB

The Ecology tab shows the positive impact on the environment by using an energy producing installation. It consists of elements:

1. Summary:
  - Self-sufficiency – determines the percentage of the energy production installation that covers the energy demand.
  - Equivalent trees planted calculated on the basis of electricity produced.
  - CO2 reduction based on electricity produced.
2. Your achievements and their impact on the environment. A chart showing the rate of ‘tree planting’ over a period of time. It starts with the day of electricity production.
3. The CO2 reduction chart illustrates the reduction of CO2 over a selected period of time. It starts with the day of electricity production.

### 34.10: SCENES

Creating scenes with the Energy Panel allows you to control the energy expenses of your electrical installation. Scenes give you the opportunity to change your habits into more ecological ones.

You can use the surplus energy produced to power additional devices.

For block scenes you can use: summary energy consumption, consumption by device, consumption by room, consumption by device/conditions categories, summary production, summary balance and current rate.

## 35: SPECIFICATIONS

### 35.1: TECHNICAL DATA

Power supply	5 V DC, max. 1 A (adapter included)
Operating temperature	0-40°C
Operating humidity	max. 75% relative humidity (non-condensing)
Power connector	USB Micro B
Dimensions	178x110x31 mm

### 35.2: RADIO COMMUNICATION

Protocol	Radio frequency	Max. transmitting power
Z-Wave (700 series)	868.0-868.6 MHz * 869.7-870.0 MHz *	+9 dBm
Wi-Fi (802.11 b/g/n)	2400.0-2483.5 MHz	+20 dBm

## 36: PRODUCT DISPOSAL

This product is an integral part of the automation and therefore must be disposed together with the latter.



As in installation, also at the end of product lifetime, the disassembly and scrapping operations must be performed by qualified personnel. This product is made of various types of material, some of which can be recycled while others must be scrapped. Seek information on the recycling and disposal systems envisaged by the local regulations in your area for this product category.

**Caution!** – some parts of the product may contain pollutant or hazardous substances which, if disposed of into the environment, may cause serious damage to the environment or physical health.

As indicated by the symbol alongside, disposal of this product in domestic waste is strictly prohibited. Separate the waste into categories for disposal, according to the methods envisaged by current legislation in your area, or return the product to the retailer when purchasing a new version.

**Caution!** – local legislation may envisage serious fines in the event of abusive disposal of this product.

## 37: DECLARATION OF CONFORMITY

### WEEE Directive Compliance



Device labelled with this symbol should not be disposed with other household wastes. It shall be handed over to the applicable collection point for the recycling of waste electrical and electronic equipment.

### Declaration of conformity



Hereby, manufacturer declares that the device is in compliance with the essential requirements and other relevant provisions of Directives 2014/53/EU, 2011/65/EU and 2015/863. The full text of the EU declaration of conformity is available at the manufacturer internet address.



