



---

# Smart Dry Contact Switch 7

---



## OPERATING INSTRUCTIONS

PRODUCT CODE	PRODUCT VARIANT
DRY700	Standard
DRYZRX	ZRX (includes the radio communication with CRC)

## Revision History

Rev. Doc.	Date	Page	Description
0	14/03/2022		Initial version
1	04/04/22		Added parameter 51
2	13/04/22		Max Value parameter 50
3	04/05/22		ZRX variant section

## Content

Revision History .....	II
Device description .....	1
Technical Specifications .....	2
Safety information.....	2
Electrical Connections diagram .....	3
Device Installation .....	4
LED status indicator .....	4
Add/Remove the device into a Z-Wave™ network (classic) .....	4
SmartStart Inclusion .....	5
S2 Secure inclusion .....	5
Supported Command Classes .....	6
Supporting Command Class Basic .....	6
Supporting Command Class Indicator .....	6
Device Control .....	7
Controlling the device by External Switches .....	7
Controlling the device by a Z-Wave™ controller .....	7
Associations .....	8
Timer Management .....	9
Reset to the factory settings.....	9
Firmware Update .....	9
Offline setup Mode.....	9
Configurations .....	10
Input Configuration .....	10
Output Configuration: .....	12
Timer management .....	12
Association group management .....	14
Central Scene management .....	16
ZRX variant of the device .....	17
Association of a Cherubini Remote Control Serie SKIPPER - POP O GIRO .....	17

Setting the first remote control .....	18
Setting additional remote controls .....	18
Remote control memory clearing .....	19
Clearing all remote controls .....	19
Controlling the device from a Cherubini Remote Control.....	20
Disposing the devices .....	21
Compliance with directives.....	21
Warranty.....	21

## Device description

Smart Dry Contact Switch 7 can **turn ON and OFF equipment's with an independent power supply**, such as solenoid valves (e.g. gas, water and irrigation), power operated valves etc.


It is very easy to install and **works with both momentary and toggle switches**.

It operates in any Z-Wave™ network with other Z-Wave™/Z-Wave Plus™ certified devices and controllers from any other manufacturer. As a constantly powered node, the device will act as repeater regardless of the vendor in order to increase the reliability of the network.

This device is a security enabled Z-Wave Plus™ product that is able to use encrypted Z-Wave Plus™ messages to communicate to other security enabled Z-Wave Plus™ products.

This device must be used in conjunction with a Security Enabled Z-Wave™ Controller in order to fully utilize all implemented functions.

In its ZRX variant the device can also be controlled by Cherubini Remote Controls of SKIPPER - POP OR GIRO series.

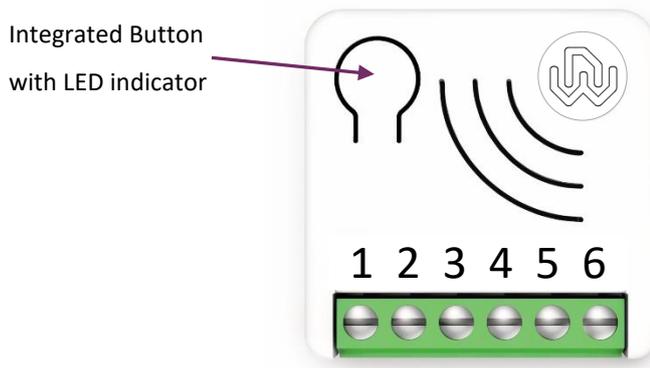

Integrated Button	1 or 3 clicks to enter in Learn Mode 6 clicks to reset the system to manufacturer's settings 2 clicks to enter in Offline setup mode
Power Supply	1, 2 – Null 6 - Line
Input Switch	3 – Input - Line signal
Output	4, 5 – Dry Contact

## Technical Specifications

Power supply	110 - 230 VAC±10% 50/60 Hz - 24VDC
Maximum Load on Relay	16A resistive Load
System temperature limitation	105°C
Work temperature	From -10° to 40° C
Power consumption	< 260 mW in standby < 480 mW with working load
Radio frequency	868.4 MHz
Protection system	S2 Security
Maximum distance	Up to 100 m outdoor Up to 40 m indoor
Dimensions	37x37x17 mm
Actuator element	16 Amp relay
Compliance	CE, RoHs
Electrical IP Rating	IP20

## Safety information



**INFO:** The device is designed to be installed in flush mounting junction boxes or close to the load to be controlled.



**WARNING:** The device must be installed by electricians qualified to intervene on electrical systems in compliance with safety requirements set out by the regulations in force.



**DANGER** The device must be connected with a voltage of 230 VAC, before carrying out any operation, please make sure the power main switch is in **OFF** position.



**DANGER:** Any procedure requiring the use of the Integrated Button is related only to the installation phase and is to be considered a service procedure that must be performed by qualified personnel. This operation must be performed with all necessary precautions for operating in areas with a single level of insulation.



**WARNING:** Do not connect loads that exceed the maximum load permitted by the actuator element.



**WARNING:** All connections must be performed according to the electrical diagrams provided




**WARNING:** The device must be installed in norm-compliant systems suitably protected from overloads and short circuits.

## Electrical Connections diagram

The device must be supplied by 230 AC or by 24 VDC Power Supply

Connections must be done following one of the diagrams below: if you need to control a Load connected on a different power supply system you **must** follow the diagram on the right side.

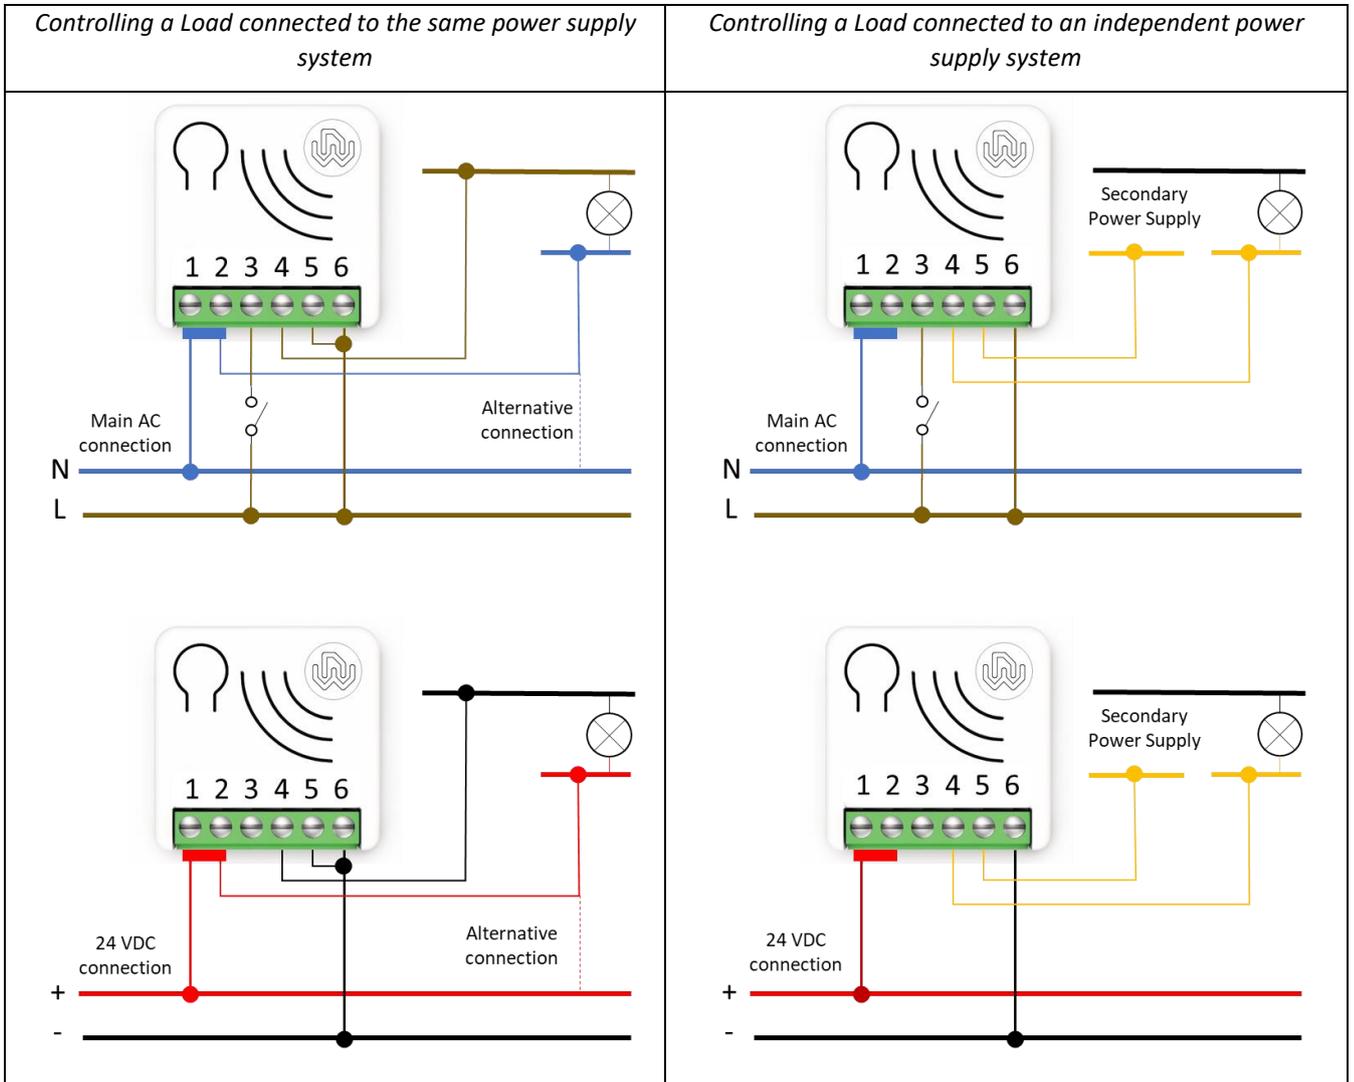

Power Supply	1, 2 – Null 6 - Line
Input Switch	3 – Input - Line signal
Output	4, 5 – Dry Contact


**⚠ WARNING:** The power line must be opportunely protected from short-circuits and excess load due to a failure of the load.

## Device Installation

- 1) Make sure the main switch is set to the OFF position
- 2) Connect the device based on the diagrams provided
- 3) Turn the main switch to the ON position
- 4) Include the device in the Z-Wave™ network



**TIP:** The antenna must not be shortened, removed or modified. To ensure maximum efficiency, it must be installed as shown. Large size metal equipment near the antenna can negatively affect reception. Each device is a node in a mesh network. If there are metal obstacles, the obstacle can often be overcome with a further triangulation node.

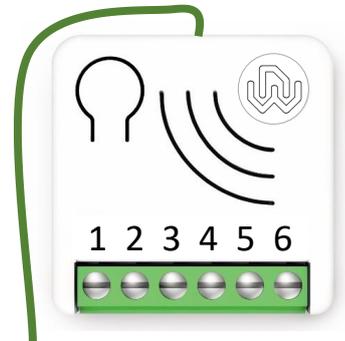

## LED status indicator

The system includes an RGB LED that shows the device's status during installation:

**Solid RED:** the device is not included in any network

**Solid BLUE:** the device is Offline setup mode state

**4 GREEN blinks then OFF:** the device has been just added to a Z-Wave™ network in S2 Authenticate Mode

**4 BLUE blinks then OFF:** the device has been just added to a Z-Wave™ network in S2 Unauthenticated Mode

**4 RED blinks then OFF:** the device has been just added to a Z-Wave™ network without security

**Sequence of GREEN-BLUE** Learn Mode for inclusion

**Sequence of RED-BLUE** Learn Mode for exclusion

Rapid sequence of **GREEN-BLUE-RED:** the event on the input (*external switch*) is not valid



**TIP:** To test if the electrical connections are correct, before the inclusion of the device, while pressing *n* times the external switch, the RGB LED should flash **green** for the same amount of times. If it does not, check the wire connections.

## Add/Remove the device into a Z-Wave™ network (classic)

### Standard Inclusion (add)

All Smart Serie 7 devices are compatible with all Z-Wave™/Z-Wave Plus™ certified controllers. The devices support both the **Network Wide Inclusion** mechanism (which offers the ability to be included in a network, even if the device is not directly connected to the controller) and **Normal Inclusion**.

By default, the inclusion procedure starts in **Normal Inclusion** mode and after a short timeout the procedure continues in **Network Wide Inclusion** mode that lasts for about 20 Seconds.

Only a controller can add the device into the network. After activating the inclusion function by the controller, the device can be added by setting it in **Learn Mode**.

Before including the device, the LED status indicator is solid RED. The adding of a device is executed by activating the adding procedure in the inclusion section of the controller interface and executing 1 or 3 click on the integrated button (the device is set in **Learn Mode**). As soon as the inclusion procedure initiates the LED indicator starts a sequence of GREEN-BLUE blinks. The device is included in the network when the LED status is OFF and the interview is completed.

## Standard exclusion (remove)

Only a controller can remove the device from the network. After activating the exclusion function by the controller, the device can be removed by setting it in **Learn Mode**.

The procedure of exclusion can be activated by **Removing** a node from the Z-Wave™ network and executing 1 or 3 click on the integrated button; as soon as the exclusion initiates, the LED indicator starts a sequence of RED-BLUE blinks. The device is excluded from the network when the LED status indicator is solid RED and the App\_status in the interface is OK.


## SmartStart Inclusion

Z-Wave™ SmartStart aims to shift the tasks related to inclusion of an end device into a Z-Wave™ network away from the end device itself, and towards the more user-friendly interface of the gateway.

Z-Wave™ SmartStart removes the need for initiating the end device to start inclusion. Inclusion is initiated automatically on power-ON and repeated at dynamic intervals for as long as the device is not included into a Z-Wave™ network. As the new device announces itself on power-ON, the protocol will provide notifications, and the gateway can initiate the inclusion process in the background, without the need for user interaction or any interruption of normal operation. The SmartStart inclusion process only includes authenticated devices.


Smart Serie 7 devices can be added into a Z-Wave™ network by scanning the Z-Wave™ QR Code present on the product with a controller providing SmartStart inclusion. No further action is required and the SmartStart product will be added automatically within 10 minutes of being switched on in the network vicinity.

The SmartStart QR and the full DSK string code can be found on the back of the device. The PIN is the first group of 5 digits printed underlined. If you plan to use the DSK, it is important that you take a picture of the label and keep it in a safe place.

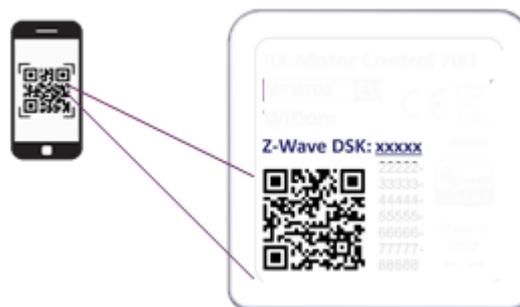

## S2 Secure inclusion

When adding Smart Serie 7 devices to a Z-Wave™ network with a controller supporting Security 2 Authenticated (S2), the PIN code of the Z-Wave™ Device Specific Key (DSK) is required. The unique DSK code is printed on the product label. The first five digits of the key are highlighted and underlined to help the user identify the PIN code.

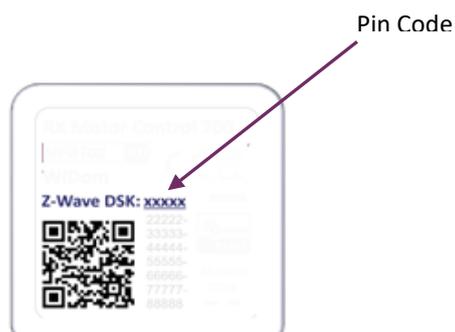

## Supported Command Classes

Command Class	Version	Non-Secure CC	Secure CC
BASIC	2		x
ZWAVEPLUS_INFO	2	x	
ASSOCIATION	2		x
MULTI_CHANNEL_ASSOCIATION	3		x
ASSOCIATION_GRP_INFO	3		x
TRANSPORT_SERVICE	2	x	
VERSION	3		x
MANUFACTURER_SPECIFIC	2		x
DEVICE_RESET_LOCALLY	1		x
INDICATOR	3		x
POWERLEVEL	1		x
SECURITY_2	1	x	
SUPERVISION	1	x	
FIRMWARE_UPDATE_MD	5		x
APPLICATION_STATUS	1	x	
CONFIGURATION_V4	4		x
SWITCH_BINARY	2		x
CENTRAL_SCENE	3		x

### Supporting Command Class Basic

The basic command classes are mapped into the Switch Binary Command Class.

Basic Command received	Mapped Command (Binary Switch)
Basic Set (0xFF)	Switch Binary Set (0xFF)
Basic Set (0x00)	Switch Binary Set (0x00)
Basic GET	Basic Report 0x00 if the Binary Switch is in Off state 0x00 Basic Report 0xFF if the Binary Switch is in On state 0xFF

### Supporting Command Class Indicator

The device supports the Command Class Indicator V3 (ID 0x50). When the device receives an indicator set, the led blinks accordingly to the Indicator set received.

The color shown by the indicator will be:

**RED:** if the device is included without Security

**BLUE:** if the device is included in S2 Unauthenticated Mode

**GREEN:** if the device is already included in S2 Authenticated Mode

## Device Control

Smart Dry Contact Switch 7 can turn ON and OFF the load by using an external switch, or from remote through a controller.

### Controlling the device by External Switches

For the operation of the device within the Z-Wave™ network and controlling the loads connected to the device, control actions are performed on the external switches.



The **CONTROL ACTIONS** are **EVENTS** executed on **EXTERNAL SWITCHES** connected to the Line Signal terminal of the device which can be *Clicks, Hold Down and Up*.


Event	Type of switch	Actions on the switch
Click	Momentary switch ( <i>button</i> )	Press briefly & Release <i>(when pressed it autonomously returns to the initial position)</i>
	Toggle Switch ( <i>bistabile</i> )	Press & Release <i>(a single click means one single flip of the switch)</i>
MultiClick= <b>n</b> clicks	Momentary switch	Sequence of consecutive <b>n</b> clicks
	Toggle Switch	
Hold Down	Momentary switch	Press longer than click. <i>After a Hold Down <u>always</u> follows an UP event.</i>
Up	Momentary switch	Release. <i>The event applies <u>only</u> if there has been a <u>previous</u> Hold Down event.</i>

Since the device supports Central Scene Notification all the events described in the table will be notified with a Central Scene Notification Report to the Lifeline. The events that trigger a Central Scene Notification Report can be customized with the configuration parameter in the Central Scene Notification Parameter section.

### Controlling the device by a Z-Wave™ controller

The device can be controlled by any Z-Wave™ / Z-Wave Plus™ certified controller available in the market.

In the figure below, are represented a couple of examples of *control panel interfaces* that show how the device will appear once included into the Gateway.

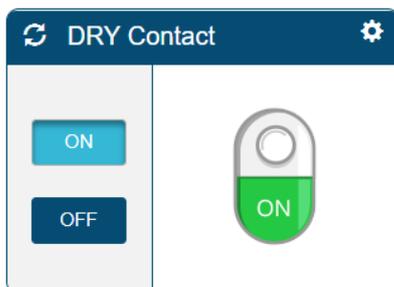

## Associations

Smart Dry Contact Switch 7 can control other devices like other relays or dimmers. The device supports 5 association groups, each of which supports the association of up to 8 devices (nodes):

Group ID	Group Name	N° of max nodes supported in the group	Description	Command sent
1	Lifeline	8	Lifeline Group. Nodes belonging to this group will receive: notifications about device reset; changes related to the relay and Indicator Status and the Central Scene Notification.	DEVICE_RESET_LOCALLY_NOTIFICATION SWITCH_BINARY_REPORT CENTRAL_SCENE_NOTIFICATION INDICATOR_REPORT
2	Follow me	8	The state of the output (ON/OFF) will be propagated to the associated device.	BASIC_SET
3	clicks on button 1 G1	8	The associated device will be controlled based on the click events and output propagation defined by configuration parameters on the <i>Association group management</i> section	
4	clicks on button 1 G2	8		
5	Dimming Group	8	The devices will be controlled by dimming commands: 1 Click→ON/OFF 2 Clicks→Max On Level Hold Down→ change level in UP/Down direction UP →Stop level Change	SWITCH_MULTILEVEL_SET SWITCH_MULTILEVEL_STOP_LEVEL_CHANGE



**INFO:** Association ensures direct transfer of control commands between devices and is performed without participation of the main controller.

## Timer Management

A timer can be set when switching On and/or Off. It is also possible to define which event will start the timer. (for example only the change on the output due to double clicks).

## Reset to the factory settings

The device can be reset to the original factory settings with 6 consecutive clicks on the integrated button. After the reset is completed, the device will reboot and a **RED** solid led is showed.

Please use this procedure only when the network primary controller is missing or otherwise inoperable.



**INFO:** If the reset is performed while the device is still part of a network, it notifies the other devices that it has been removed (*Device Reset Locally Notification*).

## Firmware Update

The system supports over-the-air firmware updates that do not require the device to be removed from its location. The firmware update can be activated from all certified controllers supporting version 2 of the Firmware Update function.



**WARNING:** The system will be rebooted at the end of the firmware update procedure. It is advisable to carry out the firmware update procedure only when necessary and following careful planning of the intervention.

## Offline setup Mode

The device has a unique feature that allows to configure some parameters without using any user interface. This feature enables the professional user to setup the main features of the device in the field even if the device is not included in a Z-Wave™ Network. When the device will be included in the network all these configuration parameters will be maintained.

To enter in offline setup mode, operate 2 clicks on the integrated button.

When the device is in Offline setup mode the led becomes solid Blue and the following configurations are permitted:

1 click	Setup input type to toggle switch. Equivalent to set parameter n.1 to 2
2 clicks	Activate a switch Off timer of 10 minutes. Equivalent to set parameter n.30 to 15 and parameter n.31 to 6000
3 clicks	Activate a switch Off timer of 5 minutes. Equivalent to set parameter n.30 to 15 and parameter n.31 to 3000
After receiving the command the led blinks a number of times equal to the number of clicks recognized	
6 clicks	Exit from Offline setup mode and return to normal operation
Hold down for 5 seconds	Reset all configuration parameters to their default value and return to normal operation

After entering in Offline setup mode, the device returns to normal operation if no action on the switch is detected for more than 20 Seconds.

## Configurations

### Input Configuration

Parameter Number	Size	Parameter Name	Default Value	Description
1	1	IN_TYPE	1	Define the input type
<b>Parameters Values</b>			<b>Min: 0</b>	<b>Max: 2</b>
Value	Description			
0	no switch input			
1	momentary switch (button)			
2	toggle switch			

Parameter Number	Size	Parameter Name	Default Value	Description
10	1	IN_TOGGLE	15	Define which event on the input 1 toggle output.
<b>Parameters Values</b>			<b>Min: 0</b>	<b>Max: 31</b>
Value	Description			
0	Disabled			
1	1 click			
2	2 clicks			
4	3 clicks			
8	Hold down			
16	Up			
<p>If you support more than 1 event, the value for the configuration parameter is the <u>sum</u> of the event values.</p> <p>For example:</p> <p>1 click and 2 clicks -&gt; Parameter value must be <math>1 + 2 = 3</math></p> <p>1 click and 3 clicks -&gt; Parameter value must be <math>1 + 4 = 5</math></p> <p><b>Default Value: 1 click, 2 clicks, 3 clicks, Hold down → 15</b></p>				

Parameter Number	Size	Parameter Name	Default Value	Description
11	1	IN_ON_EXCLUSION	0	Define which events on the input do not switch-On output.
<b>Parameters Values</b>		<b>Min: 0</b>		<b>Max: 31</b>
Value	Description			
0	Disable			
1	1 click			
2	2 clicks			
4	3 clicks			
8	Hold down			
16	Up			
<p>If you support more than 1 event, the value for the configuration parameter is the <u>sum</u> of the event values.</p> <p>For example:</p> <p>1 click and 2 clicks -&gt; Parameter value must be 1 + 2 =3</p> <p>1 click and 3 clicks -&gt; Parameter value must be 1 + 4 =5</p> <p><b>Default Value: Disable →0</b></p>				

Parameter Number	Size	Parameter Name	Default Value	Description
12	1	IN_OFF_EXCLUSION	0	Define which events on the input do not switch-Off output.
<b>Parameters Values</b>		<b>Min: 0</b>		<b>Max: 31</b>
Value	Description			
0	Disable			
1	1 click			
2	2 clicks			
4	3 clicks			
8	Hold down			
16	Up			
<p>If you support more than 1 event, the value for the configuration parameter is the <u>sum</u> of the event values.</p> <p>For example:</p> <p>1 click and 2 clicks -&gt; Parameter value must be 1 + 2 =3</p> <p>1 click and 3 clicks -&gt; Parameter value must be 1 + 4 =5</p> <p><b>Default Value: Disable →0</b></p>				

### Output Configuration:

Parameter Number	Size	Parameter Name	Default Value	Description
21	1	OUT_TYPE	0	Define the output type.
<b>Parameters Values</b>			<b>Min: 0</b>	<b>Max: 1</b>
Value	Description			
0	direct load or normally Open relay			
1	normally Closed relay			

Parameter Number	Size	Parameter Name	Default Value	Description
23	1	STARTUP_OUT	2	Define the output level on startup <i>(status of the device following a restart)</i>
<b>Parameters Values</b>			<b>Min: 0</b>	<b>Max: 3</b>
Value	Description			
0	OFF			
1	ON			
2	Previous status			
3	equal to input (ON if input close, OFF if input open)			

### Timer management

It allows you to activate an ON and OFF timer independently. To activate the timers you need to:

- 1) Define which event will start the timer (Parameter 30)
- 2) To set the Off timer define the time with parameter 31
- 3) To set the On timer define the time with parameter 32

Parameter Number	Size	Parameter Name	Default Value	Description
30	1	TIMER_SETUP	0	Define which trigger events activate the timers when output status has changed
<b>Parameters Values</b>			<b>Min: 0</b>	<b>Max: 127</b>
Value	Description			
0	disabled			
1	1 click			

2	2 clicks
4	3 clicks
8	Hold down
16	Up
32	Network (status change trigger by gateway or other devices in the Z-Wave™ network)
64	System (based on the startup status, or other timer event)
<p>If more than 1 event are supported, the value for the configuration parameter is the <u>sum</u> of the event values.  For example:  1 click and 2 clicks -&gt; Parameter value must be 1 + 2 =3  <b>Default value: Disabled → 0</b></p>	

Parameter Number	Size	Parameter Name	Default Value	Description
31	4	OFF_TIMEOUT	0	Time in tenth of seconds after which the output will be switched Off.
<b>Parameters Values</b>		<b>Min: 0</b>		<b>Max: 360000</b>
<b>Value</b>	<b>Description</b>			
0-360000	Specific time expressed in tenth of seconds for Status change			

Parameter Number	Size	Parameter Name	Default Value	Description
32	4	ON_TIMEOUT	0	Time in tenth of seconds after which the output will be switched On
<b>Parameters Values</b>		<b>Min: 0</b>		<b>Max: 360000</b>
<b>Value</b>	<b>Description</b>			
0-360000	Specific time expressed in tenth of seconds for Status change			

## Association group management

This section defines the configuration parameters associated respectively with the control groups G1, G2, and dimming.

Parameter Number	Size	Parameter Name	Default Value	Description
40	1	G1_SETUP	1	Define which events on the input control G1 association group.
<b>Parameters Values</b>		<b>Min: 0</b>		<b>Max: 31</b>
Value	Description			
0	No control			
1	1 click			
2	2 clicks			
4	3 clicks			
8	Hold down			
16	Up			
<p>If you support more than 1 event, the value for the configuration parameter is the <u>sum</u> of the event values.            For example:            1 click and 2 clicks -&gt; Parameter value must be <math>1 + 2 = 3</math>            1 click and 3 clicks -&gt; Parameter value must be <math>1 + 4 = 5</math>  <b>Default value: 1 click → 1</b></p>				

Parameter Number	Size	Parameter Name	Default Value	Description
41	1	G2_SETUP	2	Define which events on the input control G2 association group.
<b>Parameters Values</b>		<b>Min: 0</b>		<b>Max: 31</b>
Value	Description			
0	No control			
1	1 click			
2	2 clicks			
4	3 clicks			
8	Hold down			
16	Up			
<p>If more than 1 event are supported, the value for the configuration parameter is the <u>sum</u> of the event values.            For example:            1 click and 2 clicks -&gt; Parameter value must be <math>1 + 2 = 3</math></p>				

1 click and 3 clicks -> Parameter value must be 1 + 4 =5

**Default value: 2 clicks →2**

Parameter Number	Size	Parameter Name	Default Value	Description
44	1	G1_ASS_VALUE	101	The value used to control G1 association group.
<b>Parameters Values</b>		<b>Min: 0</b>		<b>Max: 102</b>
Value	Description			
0	OFF			
1-99	specific diming value			
100	ON			
101	propagate ( <i>output 1 status to the associated device</i> )			
102	toggle remote ( <i>change status ON/OFF of associated devices</i> )			

Parameter Number	Size	Parameter Name	Default Value	Description
45	1	G2_ASS_VALUE	101	The value used to control G2 association group.
<b>Parameters Values</b>		<b>Min: 0</b>		<b>Max: 102</b>
Value	Description			
0	OFF			
1-99	specific diming value			
100	ON			
101	propagate ( <i>output 1 status to the associated device</i> )			
102	toggle remote ( <i>change status ON/OFF of associated devices</i> )			

Parameter Number	Size	Parameter Name	Default Value	Description
50	4	DIMMING_TIME	5	<i>Fade On/Off time in second used to control device in dimming group</i>
<b>Parameters Values</b>		<b>Min: 0</b>		<b>Max: 3600</b>
Value	Description			
0-3600	Specific time expressed in seconds			

Parameter Number	Size	Parameter Name	Default Value	Description
51	1	MIN_DIM_LEVEL	1	Define the minimum dimming level to control the device in a dimming group.
<b>Parameters Values</b>		<b>Min: 1</b>		<b>Max: 99</b>
Value	Description			
1-99	Specify the minimum dimming value (not null)			

### Central Scene management



Parameter Number	Size	Parameter Name	Default Value	Description
60	1	SCENE_SETUP	31	Define which event on the input trigger a central scene notification.
<b>Parameters Values</b>		<b>Min: 0</b>		<b>Max: 31</b>
Value	Description			
0	None			
1	1 click			
2	2 clicks			
4	3 clicks			
8	Hold down			
16	Up			
<p>If more than 1 event are supported, the value for the configuration parameter is the <u>sum</u> of the event values.  For example:  1 click and 2 clicks -&gt; Parameter value must be <math>1 + 2 = 3</math>  1 click and 3 clicks -&gt; Parameter value must be <math>1 + 4 = 5</math>  <b>Default value: all event →31</b></p>				

## ZRX variant of the device

The section is **valid ONLY for the ZRX variant** of the device.

### Association of a Cherubini Remote Control Serie SKIPPER - POP O GIRO

#### LEGEND OF THE SYMBOLS:

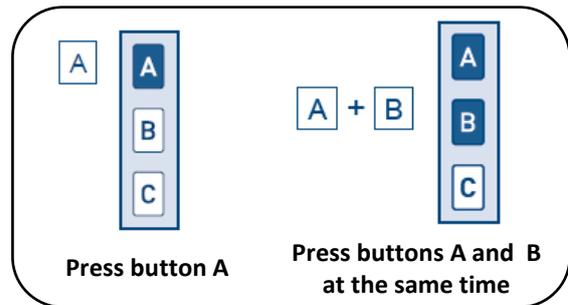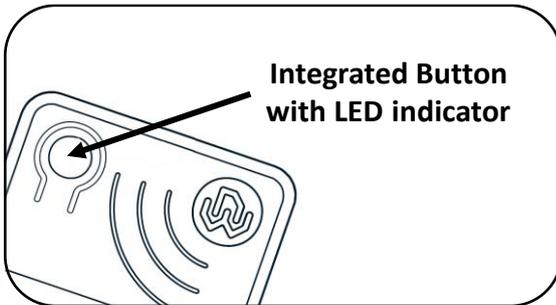

 Single BLUE Blink	Confirmation of sequence start recognition.
 Sequence of GREEN – BLUE	Confirmation of recognition of the Operation required. Duration of about 4 seconds, time within which the command confirmation must take place.
 4 GREEN blinks	Confirmation that the requested operation was completed successfully.
 4 RED blinks	The requested operation has not been carried out..
 4 BLUE blinks	Confirmation that all remotes have been deleted.




## Setting the first remote control

This operation can only be performed when the product is new, or after a total delete of the memory. Every time you connect the device to the power supply, you have 3 hours to store the first remote control. After this time, the ability to store the remote control is disabled. To reset the timer of the function you have to disconnect and reconnect the power supply to the device, or to activate the procedure of deleting all the remote controls as described below.



The operation can be performed in two ways:

**T1:** First remote control to be set

1) Setting through operations with the remote control

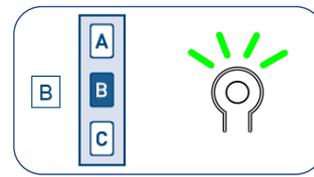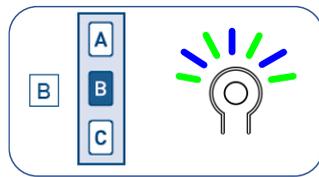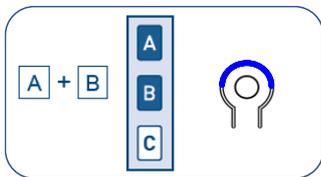

2) Setting through operations with both remote control and device.


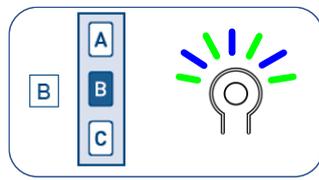
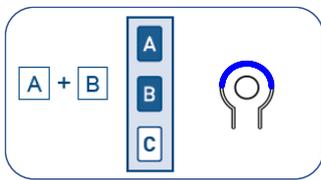


## Setting additional remote controls

It is possible to set up to 15 remote controls.

**Tn:** Already programmed remote control

**Tx:** Additional remote control

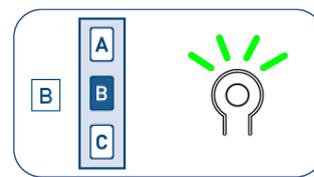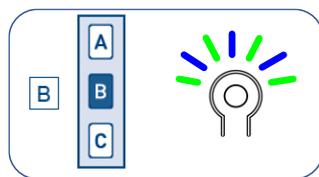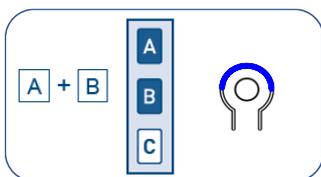


### Remote control memory clearing


It is possible to delete singly all the memorized remote controls. When the last one is deleted the motor initial condition is restored. The same applies to single channels of a multichannel remote control: just select the channel before performing the sequence.

**Tn:** Remote control to be cleared

This sequence deletes the remote control from all associated receivers.

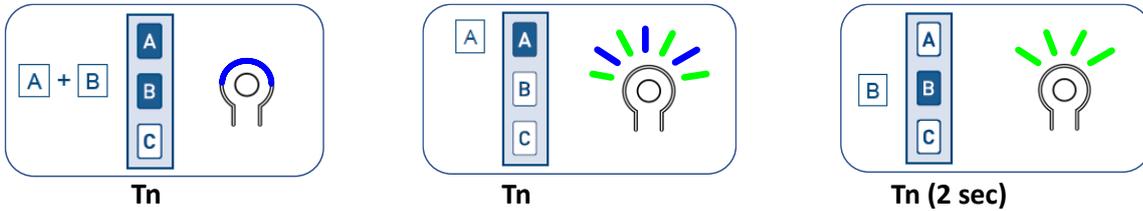


This sequence deletes the remote control from only one receiver.

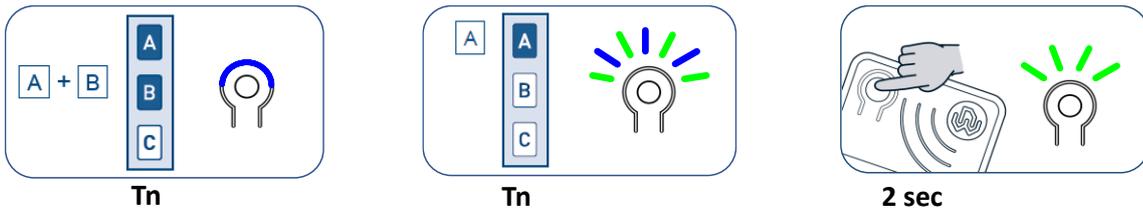

### Clearing all remote controls

Total clearing from the memory is carried out by holding down the button integrated in the device for 5 seconds as indicated below

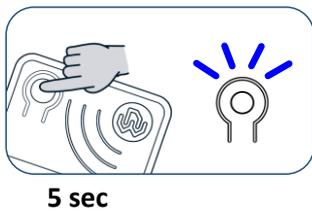

## Controlling the device from a Cherubini Remote Control

The events on the buttons of the remote control allow the controlling of the load as indicated in the following table.

Pulsante	Evento	Risultato
	Click	Switching on the load ON
	Hold Down	
	Click	Changing the load status (from ON to OFF and vice versa)
	Hold Down	
	Click	Switching on the load OFF
	Hold Down	

## Disposing the devices



This product bears the selective sorting symbol for waste electrical and electronic equipment (WEEE).

This means that this product must be handled pursuant to European Directive 2002/96/EC in order to be recycled or dismantled to minimize its impact on the environment.

For further information, please contact your local or regional authorities.

Electronic products not included in the selective sorting process are potentially dangerous for the environment and human health due to the presence of hazardous substances.

## Compliance with directives

Smart Serie 7 devices are built in compliance with directives 2014/53/EU and 2011/65/EU.

WiDom Srl shall not be held responsible for any damage caused by these devices if they are used in a manner that is not compliant with the instructions in this manual. WiDom Srl reserves the right to make any changes to the product that it considers necessary or useful without jeopardizing its primary features.

## Warranty

For detailed information on the warranty please refer to the *Standard Warranty Conditions* indicated in company's website at [www.widom.it](http://www.widom.it).

Please check at [www.widom.it](http://www.widom.it) the newest version of this document.

WiDom Srl reserves the right to change product features and specifications at any time without notice, and is not responsible for typographical or graphical errors that may appear in this document.