Ring Smoke/CO Listener Manual –

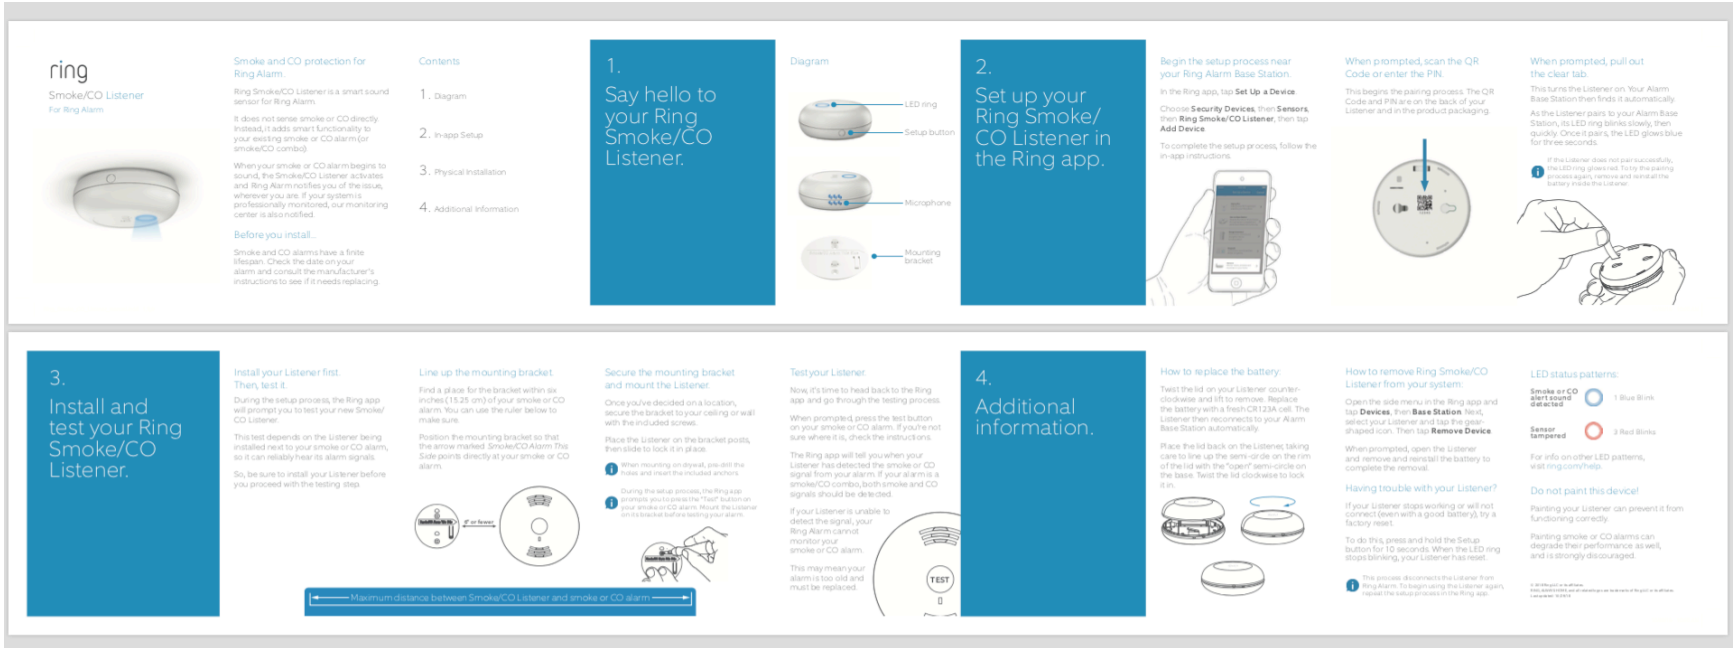

As part of Device inclusion instructions, Ring Alarm mobile application will guide the user with instructions to locate QR code and enter PIN Code –

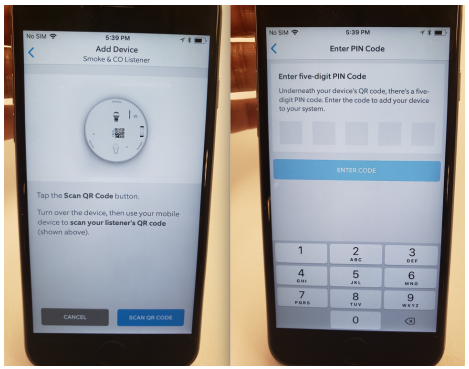

Factory Reset Instructions –

- Press and hold the Setup button for 10 seconds. When the LED ring stops blinking, Listener will reset.
    - Note:
        - This process disconnects the Listener from Ring Alarm. To begin using the Listener again, repeat the setup process in the Ring app.
        - "**Use this procedure only in the event that the network primary controller is missing or otherwise inoperable.**"

Association CC**:**

This sensor has one Association groups of 1 node. Group 1 is the lifeline group who will receive unsolicited messages relating to Smoke/CO Siren detected/not detected notifications, case tampering notifications, and low-battery notifications.

Configuration CC:

Parameter No.	Description	Size in Bytes	Value description	Default
1	Configures how often the sensor should send an unsolicited Battery Report to the Lifeline.	2	255 to 4200 seconds in 255 second increments that the sensor should wait between sending unsolicited battery reports.	4200
2	Configures the sensor to be able or not able to “hear” CO Detectors in addition to Smoke Detectors.	1	1: Smoke Detector Siren 2: Smoke+CO Detector Siren	1
3	Starts the “Installation Test” Mode	1	0: Cancel Installation Test Mode 1: Start Installation Test Mode	0