smanos K2 Smart Hub

The K2 Smart Hub is a security enabled Z-Wave Plus product that is able to use encrypted Z-Wave Plus messages to communicate to other security enabled Z-Wave Plus products.

Contents

1. Install the K2 Smart Hub

1.1. Download the "smanos home" App

You can search "smanos home" in App Store or scan the QR codes as below.

1.2. Sign Up/In

If you have not registered an account with smanos, please press "Sign up" just below the "Sign in" icon on the app, and follow the instructions to create your account first.

If you do not receive an account verification code in your email inbox during the registration process, please remember to check your spam/junk folder and make sure the notice has not been blocked by your service provider.

Once you have an account with us, please select the "Sign in" icon and enter your email address and password to log in.

Press the "+" button on the Device List. Tap on [K2 Smart Hub], then follow the configuration steps to set up your K2 Hub with your home Wi-Fi.

1.3. Setup the K2 Smart Hub

1. Plug the power adapter into a wall socket and into the K2 Hub, slide the Power Switch from OFF to ON, wait until the white light flashes blue.
2. Connect the K2 to Your Smartphone
Use the Pin to press the Wi-Fi Configuration Button 3 seconds, the light flash red and blue alternately.
3. Go to your phone's Wi-Fi settings, look for and select "smanos K2" hotspot to connect your mobile to the Hub. When connected, return to your "smanos home" app.
4. Enter Wi-Fi Details for Your K2 Smart Hub Select your 2.4GHz Wi-Fi network from the display list, and enter the Wi-Fi network password. The Hub will connect to the selected Wi-Fi network. This binding process should take about one minute.
5. When a successful connection is established, the indicator will stop blinking. Now, your smanos K2 Hub is successfully set, enjoy a smart and secure life!

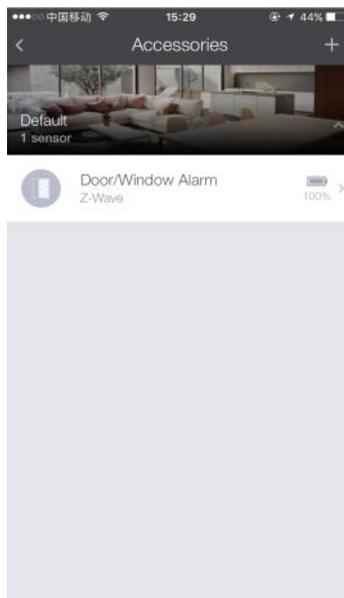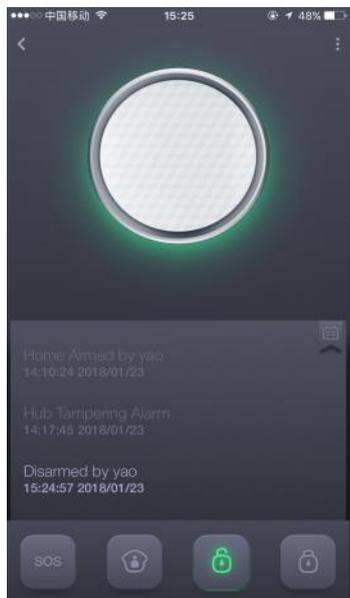# 2. Certification Product Documentation

D.2 Controllers - Inclusion / Exclusion

I. Inclusion:

1. Click [ ] icon on the up-right corner and select [ ] icon to enter the interface

of the accessories list.

Click "+" icon on the up-right corner (of the accessories list page) to enter the device selection page.


2. Press the "Z-Wave Products" and "START INCLUSION" to add the Z-Wave device.

　　* The list (from Keypad to Glass Break Detector) is for adding the proprietary RF devices.

3. Press the "INCLUSION " button to enter the add mode.

① The K2 Hub is waiting for adding the device. LED flashing in red, green and blue.

② Set the Z-Wave device into the adding mode according to its manual.

③ The K2 Hub will start the inclusion process and device configuration. Successful inclusion and configuration will be confirmed by "User defined name and location" message. The device LED lights stop blinking.
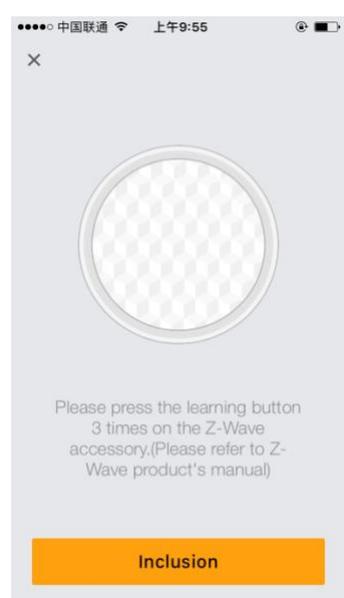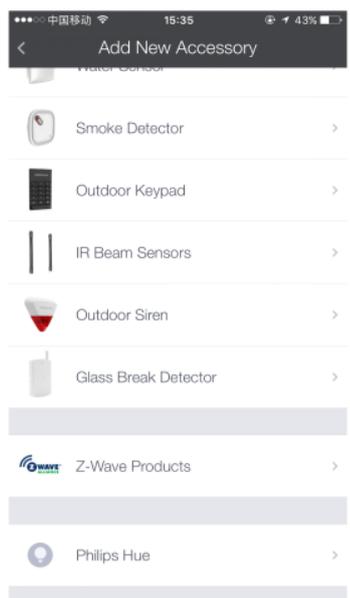
II. Exclusion:

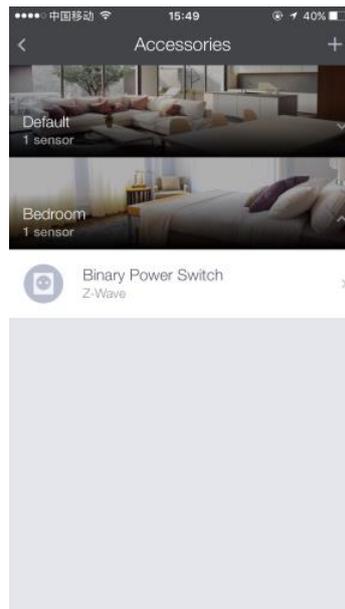Deleting the device will remove it from both the Z-Wave network and the controller's memory.

From Z-Wave network:

1. Click [ ] icon on the up-right corner and select [ ] icon to enter the interface of the accessories list.

2. Click on the room (Location) where the device is installed.
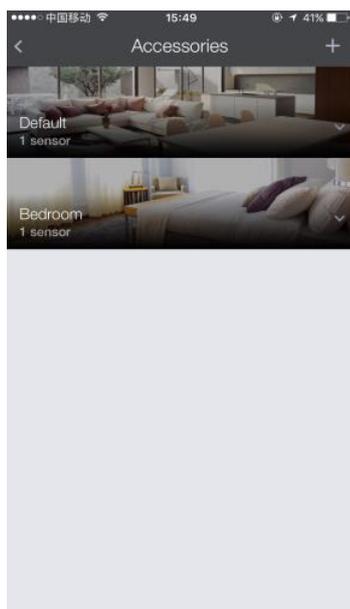
3. Click "door 1" and slide to the left, then the delete button appear.

4. Click the " " button, and then click the "YES" button in the pop-up box, the K2 Hub enters the delete mode, waiting to delete the accessory.

① Set the Z-Wave device into the learn mode according to its user's manual.

② The K2 Hub will start the process of exclusion and removing from controller's memory.

③ If the device is deleted successfully, then the "Reminder" message box will be closed.
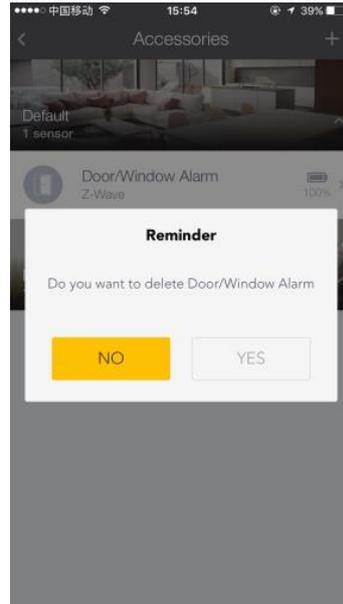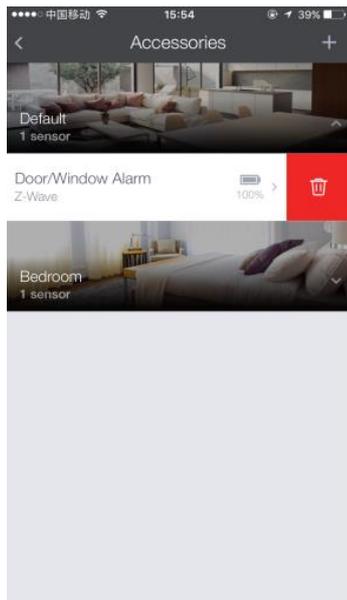
From controller's memory

1. Click [▦] icon on the up-right corner and click on the [⚙] icon into the "Setting" interface.

2. Click "Delete Z-Wave" Device into the delete mode, and the device can be removed from the learning mode.

D.3 Controllers – Replication

When the K2 Hub adds a controller to the network, the replication of the network information from the K2 Hub to another controller is initiated.

D.4 Controllers – Learn Mode

1. Click [▦] icon on the up-right corner and click on the [⚙] icon into the "Setting" interface.

2. Click the "Connect the K2 Hub to Other Controller", and the K2 Hub enters the "Learn mode" mode.

The K2 Hub will terminate the learning mode if the connections are not completed in certain time.

D.5 Controllers - Including the K2 Hub

1. Click [▦] icon on the up-right corner and click on the [⚙] icon into the "Setting" interface. (ref. D.4)

2. Click the "Connect the K2 Hub to Other Controller" button, and the K2 Hub enters

the "Learn mode" mode.
The K2 Hub will wait for other controllers to add for inclusion.

D.6 Controllers - Basic Documentation

If the K2 Hub receives a basic command, it will not do anything.

D.8 Devices from multiple manufacturers in one network

The K2 Hub can be operated in any Z-Wave network with other Z-Wave certified devices from other vendors.
All non-battery operated nodes within the network will act as repeaters regardless of vendor to increase reliability of the network.

D.9 Documentation for Association CC

1. Grouping identifier：1 ；
2. Maximum number of devices that can be added to the group：1
3. Description of how the association group is used and / or triggered by the product：
① When the K2 Hub is added to the network, it's group 1 needs to be set "lifeline".
② When the K2 Hub is added to the network by a controller,
"COMMAND_CLASS_DEVICE_RESET_LOCALLY" is sent to the controller via "lifeline" when the K2 Hub returns to factory settings.

D.12 Documentation related to BASIC commands

The K2 Hub will control the added "unknown' devices via Basic Set on/off.
The value of basic set on is "0" while the basic set off is "0xff".

D.13 Documentation for Factory Default Reset

Note: If this controller is the primary controller for your network, resetting it will result in the nodes in your network being orphaned and it will be necessary after the reset to exclude and re-include all of the nodes in the network. If this controller is being used as a secondary controller in the network, use this procedure to reset this controller only in the event that the network primary controller is missing or otherwise inoperable.

1. Click [▦] icon on the up-right corner and click on the [⚙] icon into the "Setting" interface. (ref. D.4)
2. Click the "Reset Z-Wave Module" button and a pop-up box will be displayed.
3. Click "Reset" and the K2 Hub will start restoring factory settings of the Z-Wave module.

4. Click "Cancel" and the K2 Hub will cancel the restoring factory settings.
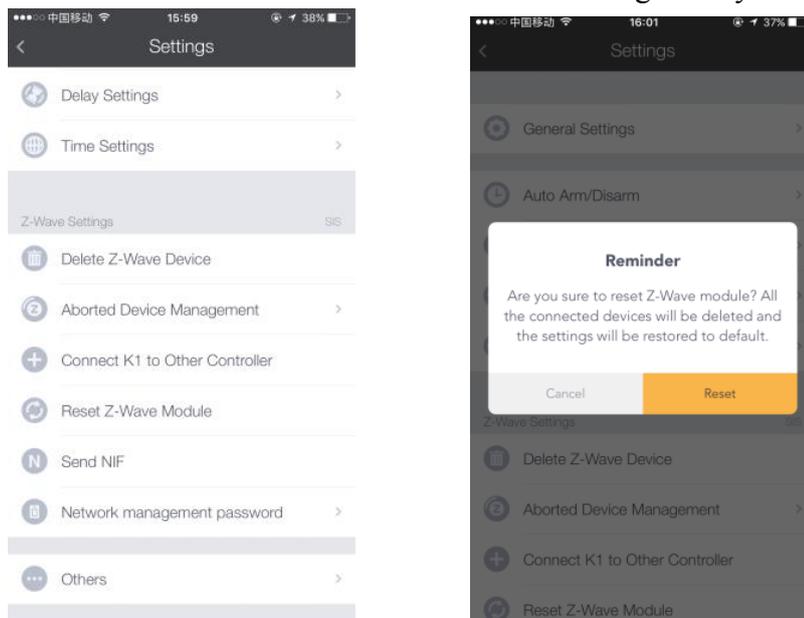
D.17 Documentation for S2 Security CC

Support Command Class	Non-secure added	Secure_0 added		Secure_2 added		
		Non-secure CC	Secure CC	Non-secure CC	Secure2_Access CC	Secure2_Access CC	Secure2_Access CC
Application Status V1	√	√		√			
Association V2	√	√		√			
Association Group Information V3	√	√		√			
CRC-16 Encapsulation V1	√	√		√			
Device Reset Locally V1	√		√		√	√	√
Inclusion Controller V1	√	√		√			
Manufacturer Specific V2	√		√		√	√	√
Network Management Inclusion V2			√		√		
Network Management Basic V2			√		√		
Network Management Proxy V2			√		√		
Powerlevel V1	√		√		√	√	√
Security V1			√				
Security_2 V1					√		
Supervision V1	√	√		√			
Transport Service V2	√	√		√			
Version V2	√		√		√	√	√
Z-Wave Plus Info V2	√	√		√			

D.19.1 How to activate any functionality available in the device related to Z-Wave behavior.

I. Click [▪] icon on the up-right corner and click on the [⚙] icon into the "Setting" interface. (ref. D.4)

To delete Z-Wave Device:

Click "Delete Z-Wave Device", the K2 Hub enters to the delete mode and is waiting for the selected device enters to the learning mode.

To remove the failed node:

Click "Aborted Device Management", and the K2 Hub enters the failed node management page.

1. Click " 🗑 " and then "Delete" in the pop-up box to remove the failed node.

2. Click " 🗑 " and then "Cancel" in the pop-up box to cancel removing the failed node.

To replace the failed node:

Click "Aborted Device Management", and the K2 Hub enters the failed node management page.

1. Click " " and then "Continue" in the pop-up box to replace the failed node. After the K2 Hub enters the Add mode, set the accessory to be added to the learning mode.

2. Click " " and then "Cancel" in the pop-up box to cancel replacing the failed node.

Click "Send NIF" to broadcast NIF.
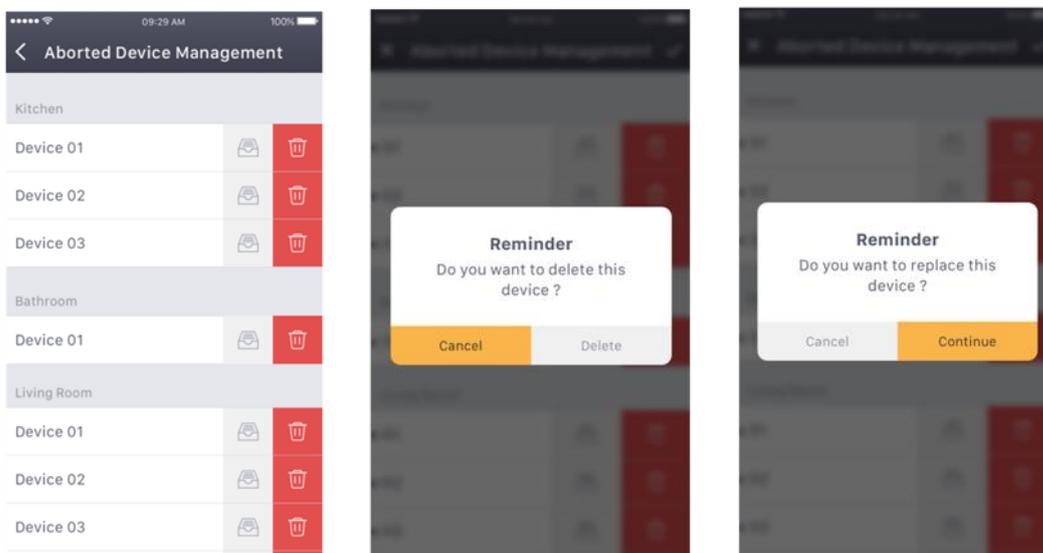
Click "Network Management Password" for password modification and acquisition.
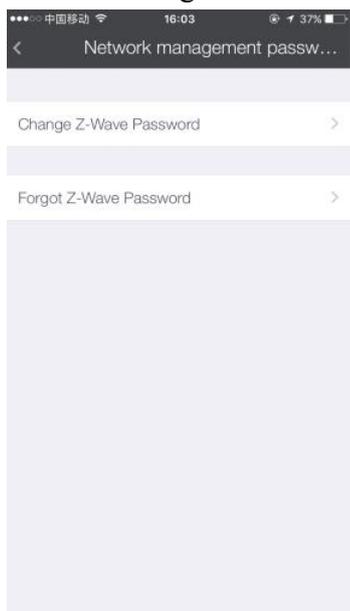
1. The initial password of K2 Hub's network management is '111111', the effective time is 5 minutes each time. After 5 minutes, it needs to re-enter the password.

2. Click 'Change Z-Wave Password', the password can be modified to enter the old password once and new password two times.

3. Click 'Forgot Z-Wave Password' to enter the password acquisition interface. Enter the main account and password to get the current network management password.
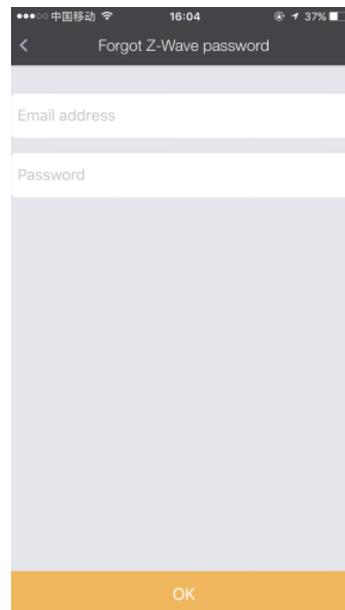
II. Device Attribute

1. Click [⦂] icon on the up-right corner and select [⬚] icon to enter the interface of the accessories list. (ref. D.2)
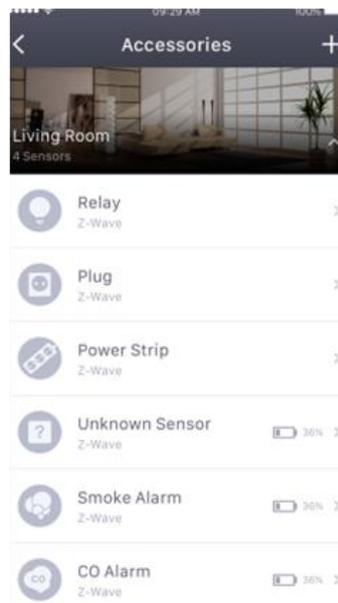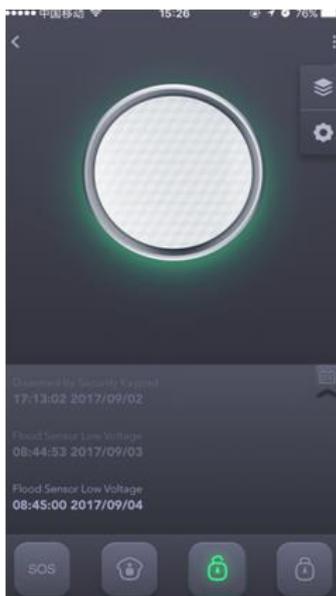
2. Select the Z-Wave device and enter the attribute page.
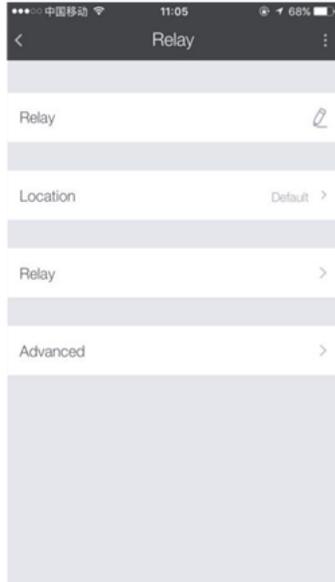
3. On attribute page, user can do the followings:

to edit the device name

to locate the device (ex. installed in the Living Room)

to control the device

a. to control the plug (ex. turn on/off the light)

b. to control the dimmer (ex. moving the control bar to adjust the brightness.)
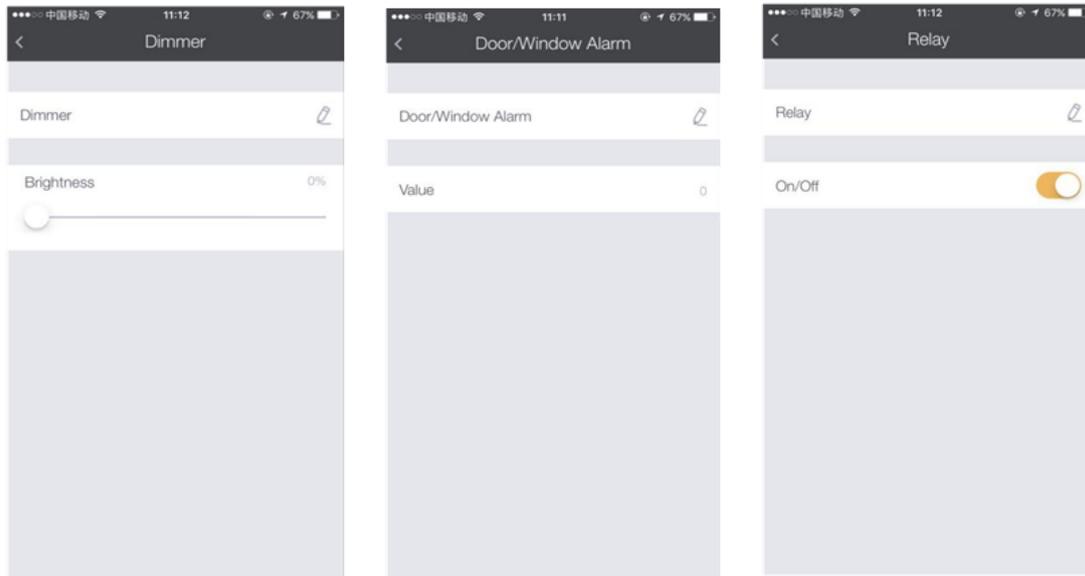
c. to control an unknown sensor via on/off button.

d. to control an added controller

e. to read the data of sensors (ex. temperature, humidity)
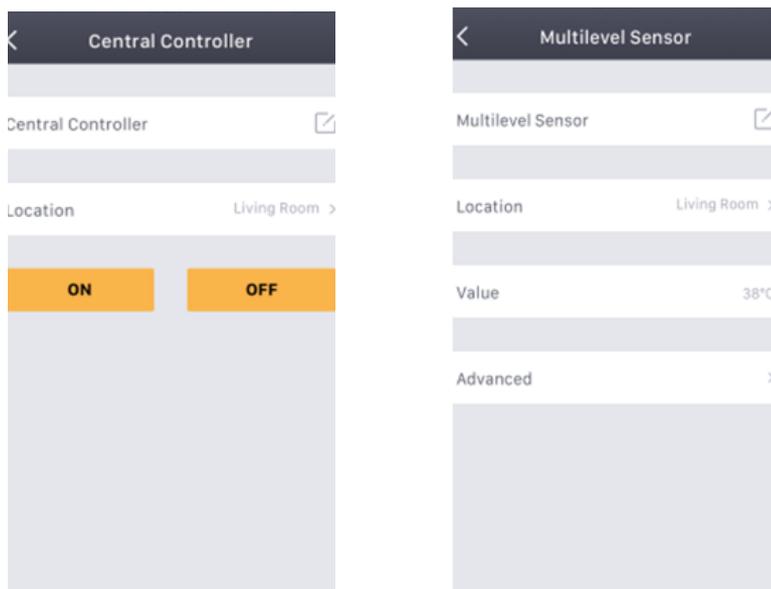
f. to control a thermostat

Mode: to setup the thermostat function mode.

Set Point: to setup values (ex. temperatures that the thermostat should work on).

Fan Mode: to setup the fan mode.

3. to setup the advanced features of the device

Association
a. Click "Advanced" and then "Association"
b. Click "Association Set", enter the group number you want to set, and then select the device that you want to link.
c. Click "Association Remove", enter the group number you want to remove, and then select the device that is linked to it.

Configuration
a. Click "Advanced" and then "Configuration"
b. Enter the desired parameter number (it can be found on the device menu)
c. Select "Default" or "Customize"
    Default: the device is to be configured as factory settings.
    Customize: user is able to configure the device.
d. Enter the desired size (the size is defined on the device menu)
e. Enter the desired value (the value is described on the device menu)
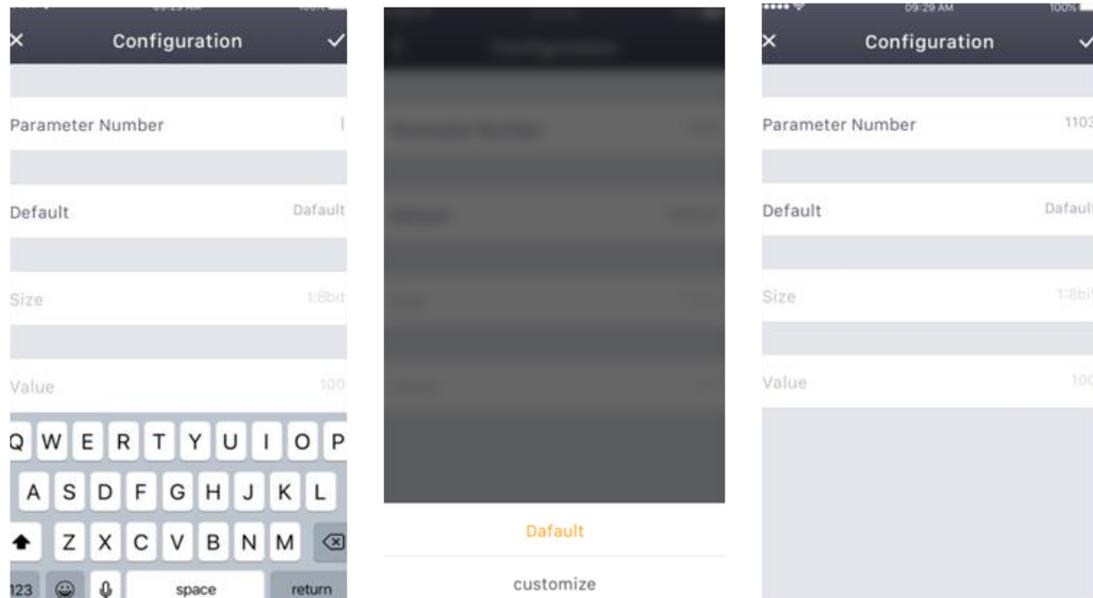
D.19.3 How to send controlled command from the controller

COMMAND_CLASS_ASSOCIATION:
When a device is added to the network and it supports this command, the K2 Hub will use this command to set "Lifeline" of the device.

Association Group Information Command Class：
When a device is added to the network and it supports this command, the K2 Hub will use this command to query group names for the newly added device.

COMMAND_CLASS_BATTERY:
When a device is added to the network and it supports this command, the K2 Hub will use this command to obtain the battery power level of the device.

COMMAND_CLASS_BASIC:
The device that is not recognized by the device will enter into the "Unknown" attribute interface, the K2 Hub will use this command to control the device through the ON/OFF buttons.

COMMAND_CLASS_SWITCH_BINARY:
If a switch is added and it supports this command, then access the device's attribute interface, the K2 Hub will use this command to control the device through the ON/OFF buttons.

COMMAND_CLASS_CONFIGURATION：
When a device is added to the network and it supports this command, then enter the

advanced settings in the device's attribute interface, the K2 Hub will use this command to set the configuration of the device.

DEVICE_RESET_LOCALLY_NOTIFICATION:
The K2 Hub will send this command through "lifeline" when it is reset.

OMMAND_CLASS_DOOR_LOCK:
When a door lock is added, then enter the device's attribute interface, the K2 Hub will use this command to control the door lock through the ON/OFF buttons.

COMMAND_CLASS_INCLUSION_CONTROLLER:
1. When the K2 Hub is added to the network by a controller that supports Inclusion Controller Command Class, the K2 Hub will use this command to add device.
2. When the K2 Hub adds a controller that supports Inclusion Controller Command Class, this command is used when the controller adds device.

COMMAND_CLASS_MANUFACTURER_SPECIFIC:
When a device is added to the network and it supports this command, the K2 Hub will use this command to obtain manufacturer ID of the device.

COMMAND_CLASS_METER:
When a meter is added to the network and it supports this command, the K2 Hub will use this command to obtain the scales of this meter.

COMMAND_CLASS_MULTI_CHANNEL:
When a device is added to the network and it supports this command, the K2 Hub will use this command to obtain the end point functions of the device.

COMMAND_CLASS_MULTI_CHANNEL_ASSOCIATION:
When a device is added to the network and it supports this command, the K2 Hub will use this command to get the command class that is supported by the end point of the device.

COMMAND_CLASS_SENSOR_MULTILEVEL:
When a device is added to the network and it supports this command, the K2 Hub will use this command to obtain the notification type that is supported by the device.

COMMAND_CLASS_SWITCH_MULTILEVEL:
When a dimmer is added and it supports this command, then access the device's attribute interface, the K2 Hub will use this command to control the dimmer by moving the control bar.

COMMAND_CLASS_NO_OPERATION:

The K2 Hub will use this command to check if a node is reachable or not.

COMMAND_CLASS_NOTIFICATION:
When a device is added to the network and it supports this command, the K2 Hub will use this command to obtain the notification type that is supported by the device.

COMMAND_CLASS_SECURITY:
When a device is added to the network and it supports this command, the K2 Hub will use this command to add the device.

COMMAND_CLASS_SECURITY_2:
When a device is added to the network and it supports this command, the K2 Hub will use this command to add the device.

COMMAND_CLASS_THERMOSTAT_MODE:
When a thermostat is added to the network and it supports this command, then access the device's attribute interface, the K2 Hub will use this command to set "Mode" of the thermostat.

COMMAND_CLASS_THERMOSTAT_FAN_MODE:
When a thermostat is added to the network and it supports this command, then access the device's attribute interface, the K2 Hub will use this command to set "Fan Mode" of the thermostat.

COMMAND_CLASS_THERMOSTAT_FAN_STATE:
When a thermostat is added to the network and it supports this command, then access the device's attribute interface, the K2 Hub will use this command to obtain the status of the fan.

COMMAND_CLASS_THERMOSTAT_SETPOINT:
When a thermostat is added to the network and it supports this command, then access the device's attribute interface, the K2 Hub will use this command to set "Set Point" of the thermostat.

COMMAND_CLASS_THERMOSTAT_OPERATING_STATE:
When a thermostat is added to the network and it supports this command, then access the device's attribute interface, the K2 Hub will use this command to obtain the operating status of the thermostat.

COMMAND_CLASS_VERSION:
When a device is added to the network and it supports this command, the K2 Hub will use this command to obtain the version information of the device.

COMMAND_CLASS_WAKE_UP:

When a device is added to the network and it supports this command, the K2 Hub will use this command to obtain the wake-up interval of the device.

COMMAND_CLASS_ZWAVEPLUS_INFO:
When a device is added to the network and it supports this command, the K2 Hub will use this command to get additional information of the device.