# Yale® Z-Wave Plus™ Smart Module Installation Guide

Please use this procedure only when network primary controller is missing or otherwise inoperable.

## Adding a Yale Z-Wave Plus™ v2 Smart Module to your Assure Lock & Z-Wave™ System

1. Install Yale Smart Module into slot above battery compartment
   **IMPORTANT:** Batteries must be removed before inserting Yale Smart Module:
   - Remove battery cover
   - Remove batteries
   - Insert Yale Smart Module
   - Reinstall batteries
   - Reinstall battery cover



2. Open Z-Wave™ system's smart home or alarm app on your smartphone or tablet
3. If you have SmartStart* enabled with your Z-Wave™ System follow in-app prompts to add a new device If you don't have SmartStart or are not sure, follow steps 4 - 6
4. On your lock keypad, enter your master entry code followed by the ⚙ icon
5. Press the 7 key followed by the ⚙ icon
6. Press the 1 key followed by the ⚙ icon

If prompted, scan QR code

## Removing a Yale Z-Wave Plus™ v2 Smart Module from your Assure Lock & Z-Wave™ System

1. Open Z-Wave™ system's smart home or alarm app and follow instructions for removing a device
2. On your lock keypad, enter your master entry code followed by the ⚙ icon
3. Press the 7 key followed by the ⚙ icon
4. Press the 3 key followed by the ⚙ icon
5. Remove Yale Smart Module from slot above battery compartment
   **IMPORTANT:** Batteries must be removed before removing Yale Smart Module:
   - Remove battery cover
   - Remove batteries
   - Remove Yale Smart Module
   - Reinstall batteries
   - Reinstall battery cover



6. If you're adding a new Yale Smart Module, follow instructions included with it

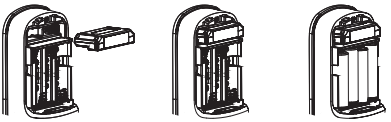*SmartStart enabled products can be added into a Z-Wave network by scanning the Z-Wave QR Code present on the product with a controller providing SmartStart inclusion. No further action is required and the SmartStart product will be added automatically within 10 minutes of being switched on in network vicinity.

P/N AYR-MOD-ZW3-MNL-0015 Rev A

**Warning:** Changes or modifications to this device, not expressly approved by ASSA ABLOY Residential Group could void the user's authority to operate the equipment.

**This device is a security enabled Z-Wave Plus™ v2 product that is able to use encrypted Z-Wave Plus™ v2 messages to communicate to other security enabled Z-Wave Plus™ v2 products. This device must be used in conjunction with a Security Enabled Z-Wave™ Controller in order to fully utilize all implemented functions. This product can be operated in any Z-Wave™ network with other Z-Wave™ certified devices from other manufacturers. All non-battery operated nodes within the network will act as repeaters regardless of vendor to increase reliability of the network.**

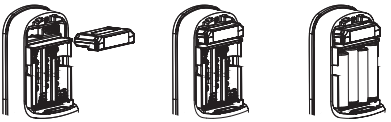**FCC:**

*Class B Equipment*

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful Interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS. (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

**Industry Canada:**

**Section 7.1.2 of RSS-GEN** Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

En vertu des règlements d'Industrie Canada, cet émetteur radio ne peut fonctionner avec une antenne d'un type et un maximum (ou moins) approuvés pour gagner de l'émetteur par Industrie Canada. Pour réduire le risque d'interférence aux autres utilisateurs, le type d'antenne et son gain doivent être choisies de façon que la puissance isotrope rayonnée équivalente (PIRE) ne dépasse pas ce qui est nécessaire pour une communication réussie.

Section 7.1.3 of RSS-GEN This Device complies with Industry Canada License-exempt RSS standard(s). Operation is subject to the following two conditions: 1) this device may not cause interference, and 2) this device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil est conforme avec Industrie Canada RSS standard exemptes de licence(s). Son fonctionnement est soumis aux deux conditions suivantes: 1) ce dispositif ne peut causer des interférences, et 2) cet appareil doit accepter toute interférence, y compris les interférences qui peuvent causer un mauvais fonctionnement du dispositif.

CAN ICES-3B/NMB-3B

## Yale Locks & Hardware

24/7 Tech Support: 1-855-492-0505 • www.yalehome.com

Yale® is a registered trademark of ASSA ABLOY Residential Group. Other products' brand names may be trademarks or registered trademarks of their respective owners and are mentioned for reference purposes only. © Copyright 2020. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Residential Group is prohibited.

Yale real Living

**Yale® Assure Lock®**
**Interconnected Touchscreen**
**Installation and Programming Instructions**
**(YRC226/YRC622)**




*4" Shown - 5.5" Available*




Retrofitting or modifying this product may impact fire rating, safety features and warranty.
Consult with code specifications to ensure compliance with all codes and ratings.

An ASSA ABLOY Group brand
P/N YRL-EM/CL-TSIN/STL-FUL Rev H
ASSA ABLOY
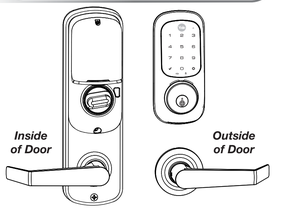
## Before You Begin



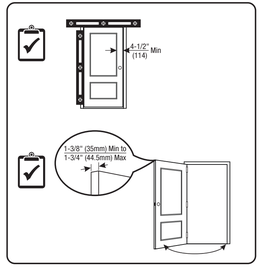

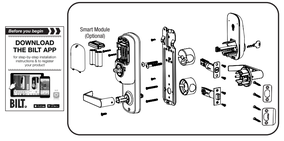
## Mark Door Reference Lines




## 1 Preparing Door *(if necessary)*

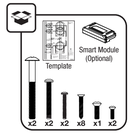


## 2 Installing Strike Plates

7-16 / 8-32 x 1" UNCWS

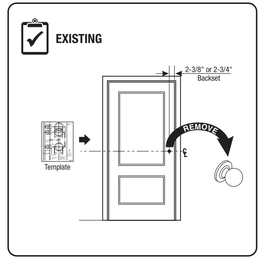x4




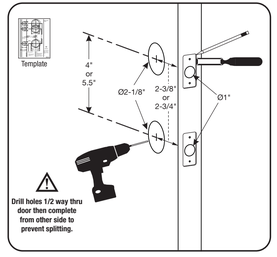


## Determining Handing

The hand of a door is determined from the secure side of the door. The term "secure" means the side from which you initially unlock and enter.

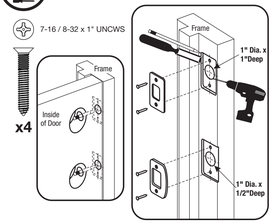


## 3 Changing Handing *(if necessary)*

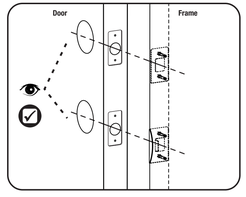***4" Left Hand to 4" Right Hand Shown***

4-24 x 1/4" PPHMS

x2

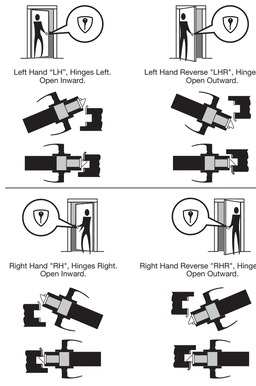





## 3 Changing Handing *(if necessary)* continued






## Lockset Handing Configurations

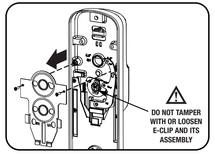


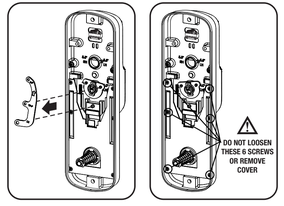Confirm LH is visible thru LH hole as shown for left hand installation.

Confirm RH is visible thru RH hole as shown for right hand installation.
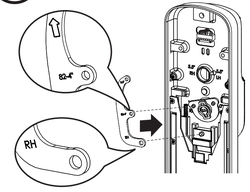
## Test Lever and Thumbturn

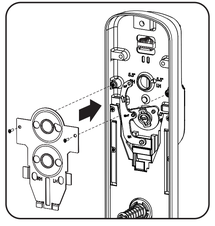After handing is changed, check that lever and thumbturn rotate freely.
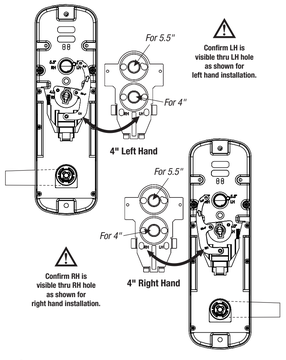
## 4 Installing Fire Cups




Both Fire Cups and a UL marked Latchbolt must be used to qualify for UL listing.

## 5 Adjusting Deadbolt Latch




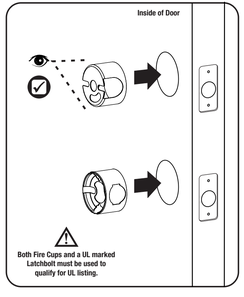


## 6 Installing Deadbolt Latch & Latchbolt

7-16 / 8-32 x 1" UNCWS

x4

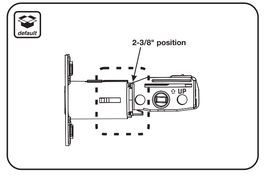

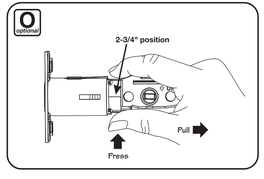
## 7 Installing Exterior Deadbolt

M6x55 PPHMS

x2

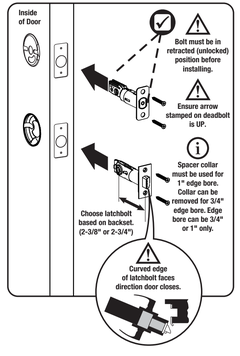


## 8 Installing Lock Chassis

10-32 x 1-1/2" PPHMS

x2

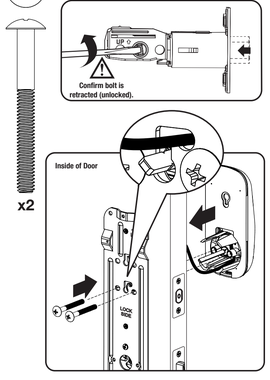


## 9 Securing Back Plate to Door

#6-32 x 1/2" POHMS

x2

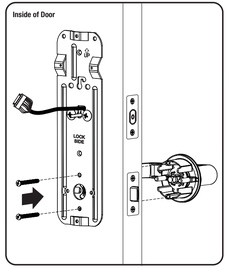


## Testing Deadbolt & Latchbolt Operation




## 10 Attaching the Cable Assembly

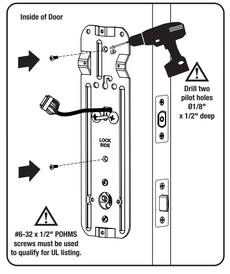


## 11 Installing Interior Lock

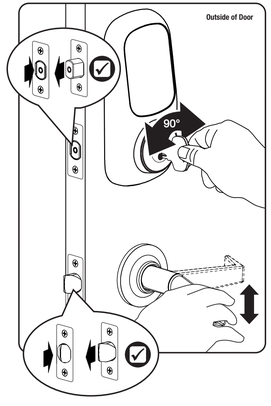


Almost done! Turn sheet over to finish installation.

## 11 Installing Interior Lock continued

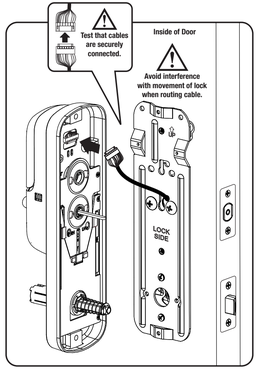


## 12 Installing Interior Lever

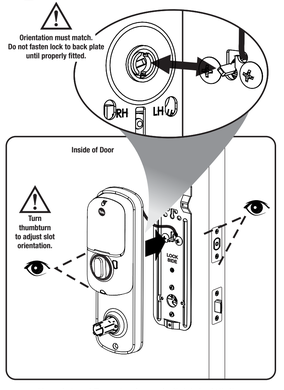





## Testing Final Latchbolt Operation

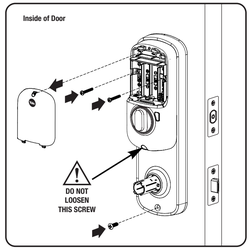


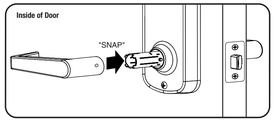


## Testing Final Deadbolt Operation

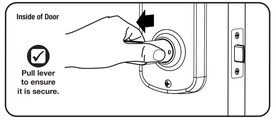

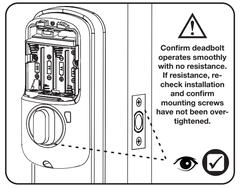


## Testing Final Deadbolt Operation

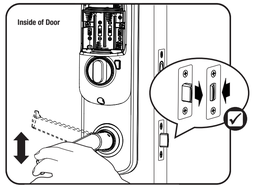


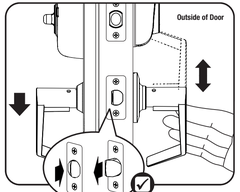If testing fails, go back to beginning of Step 11 and check installation.

## 13 Installing Optional Smart Module

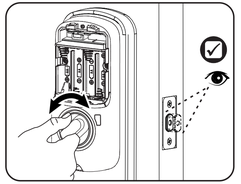


## 14 Installing Batteries & Cover

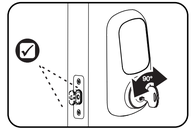


## Handing the Lock

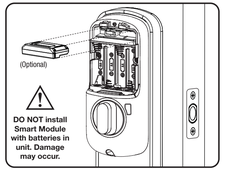


Congratulations, you've installed the Yale® Assure Lock® Interconnected Touchscreen (YRC226/YRC622)!
Continue with the Programming Instructions to customize your product.

## Hardware Troubleshooting

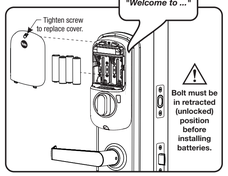Cycle lock in both the locked and unlocked positions. If problems are found:

| |
|---|
| **Bolt will not extend and lock jam alarm occurs**<br>a. Confirm manual operation.<br>b. Enter your Master PIN code.<br>c. With the bolt retracted, press menu Option 3 for Advanced Lock Settings.<br>d. Press Option 5 to rehand the lock.<br>e. Test the operation; locking the door via the keypad. |
| **Door is binding**<br>a. Check that door and frame are properly aligned and door is free swinging.<br>b. Check hinges: They should not be loose or have excessive wear on knuckles. |
| **Bolt will not deadlock**<br>a. Check for sufficient clearance of the bolt within the strike-side jamb. Correct this by increasing the depth of the pocket for the bolt.<br>b. Check for misalignment of bolt and/or strike which may be preventing bolt from properly entering the strike. With the door open, extend and retract the bolt; if it is smooth, check the strike alignment. |
| **Bolt does not extend or retract smoothly**<br>a. Bolt and strike are misaligned, see above.<br>b. Check the backset of door relative to adjustments already made to bolt.<br>c. Verify proper door preparation and re-bore holes that are too small or misaligned.<br>d. Verify keypad wire harness is routed properly (see Step 10).<br>e. Verify bolt is installed with correct side up (see Step 6). |
| **Touchscreen numerics are scrolling**<br>Remove interior lock and check to ensure that the wire harness is routed properly (see Step 10). |
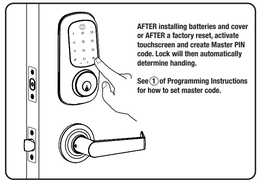
## Changing Lock: Replacing Cylinder

To Remove cylinder:
A. Remove touchscreen from door.
B. Remove pan head screw.
C. Remove cylinder by letting it drop out of assembly.




## Resetting Lock to Factory Default

When resetting the lock, all user codes, including the Master PIN code*, are deleted. All programming features are reset to original default settings (see below).

1. Remove the battery cover and batteries.
2. Remove the interior lock to access the reset button hole. (See image at right.)
3. Re-insert 3 batteries and insert a small screwdriver into the hole; holding the reset button for 3 seconds.
4. While still holding the reset button, insert the 4th battery and hold the reset button for an additional 3 seconds.
5. Release the reset button.
6. Re-install the interior lock onto the door.

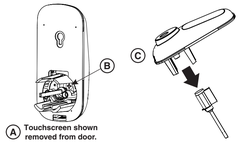


Upon reset, Master PIN Code creation is the only option available and must be performed prior to any other programming of the lock.

For best results, the lock should be installed on the door when resetting the lock to factory default. If the process was done and the lock was not installed on the door, review the Re-Handing instructions listed in Hardware Troubleshooting.

## Programming Instructions

### Touchscreen




### Interior Lock



### Lock Activation

OR

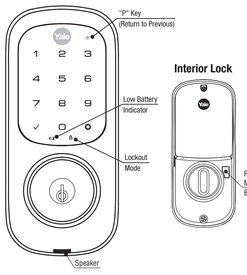Master PIN Code must be created before any further programming.
Max User Codes = 250 with Z-Wave Plus or ZigBee network module
Max User codes = 25 without network module or with iM1 network module
Max User Codes = 12 with Bluetooth

## 1 Creating Master PIN Code

**Creating a Master PIN Code must be performed upon installation or after resetting the lock to factory default. Programming and use of lock is not possible until this step has been successfully completed.**




## 2 Creating User PIN Codes

Master PIN code must be created first.
*Max user codes = 250 with Z-Wave Plus or ZigBee network module
Max user codes = 25 without network module or with iM1 network module
Max user codes = 12 with Bluetooth







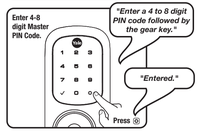


## 3 Unlocking Door with PIN Code

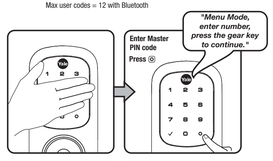


## Factory Settings
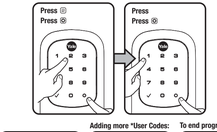
| Settings | Factory Setting |
|---|---|
| Master PIN Code | Registration ***required**** |
| Automatic Re-lock | Disabled |
| Inside Indicator Light | Disabled (Off) |
| One Touch Locking | Enabled |
| Privacy Button Setting | Disabled |
| Volume Setting | Enabled (Low) |
| Language Setting | English |
| Lockout Mode | Disabled |
| Wrong Code Entry Limit | 5 Times |
| Shutdown Time | 60 Seconds |

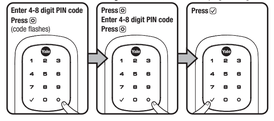*The Master PIN code must be registered prior to any other programming of the lock.

## Definitions

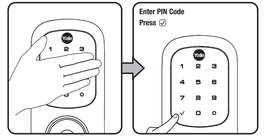**All Code Lockout Mode:** This feature is enabled by the Master code. When enabled, it restricts all user (except Master) PIN code access. When attempting to enter a code while unit is in Lockout, the RED locked padlock will appear on the screen.

**Automatic Re-lock Time:** After a successful unlock, unit will re-lock automatically after duration selected in **Advanced Lock Settings** (Main Menu selection #3).

**Handing the Lock:** Lock handing refers to which direction the bolt comes out of the door (right or left). If lock was programmed off the door, the lock may need adjusting. Review Handing the Lock instructions and/or Re-Handing instructions listed in Hardware Troubleshooting.

**Inside Indicator Light:** Located on interior lock. Shows active status (Locked) of lock and can be enabled or disabled in **Advanced Lock Settings** (Main Menu selection #3).

**Language Setting Mode:** Choosing English (1), Spanish (2) or French (3) becomes the (default) setting for the lock's voice prompts.

**Low Battery:** When battery power is low, the Low Battery Warning indicator flashes RED. If battery power is completely lost, use the cylinder key override.

**Master PIN Code:** The Master PIN code is used for programming and for feature settings. **It must be created prior to programming the lock.** The Master code will also operate (unlock/lock) the lock.

**Network Module Setting:** With the optional Network Module installed, this setting becomes available thru the Main Menu (7) and allows the lock to connect with a network controller.

**One Touch Locking:** When the latch is retracted, activating the keypad will extend the latch (during Automatic Re-lock duration or when Automatic Re-lock is disabled). When One-Touch Re-lock is **not** in use **(disabled)**, any valid PIN code will re-lock the lock.

**Previous:** While in Menu Mode, pressing this icon cancels the current operation and returns the user to the previous step.

**Privacy Mode:** Privacy mode is disabled by default. Enable Privacy Mode by pressing the privacy button for 4 seconds to put the lock in do-not-disturb mode (all pin codes are disabled).

**Shutdown Time:** The unit will shutdown (flashing RED) for sixty (60) seconds and not allow operation after the wrong code entry limit (5 attempts) has been met.

**Tamper Alert:** Audible alarm sounds if attempting to forcibly remove outside lock from door.

**User PIN Code:** The user code operates the lock. The maximum number of user codes with Z-Wave Plus or Zigbee network module is 250; without network module or with iM1 network module, maximum is 25; with Bluetooth, maximum is 12. *Note:* When deleting user pin code(s), screen will display user pin code being deleted.

**Volume Setting Mode:** The volume setting for PIN code verification is set to **Low (2)** by default; otherwise it can be set to **High (1)** or **Silent (3)** for quiet areas.

**Wrong Code Entry Limit:** After five (5) unsuccessful attempts at entering a valid PIN code, the unit will shut down and not allow operation for sixty (60) seconds.

## Model YRC226 Feature Programming Thru Menu Mode Using Master PIN code*

1. Touch screen with back of hand or palm to activate.
2. Enter 4-8 digit master PIN code* followed by key.
   Lock Response: "Menu mode, enter number, press key to continue."
3. Enter digit corresponding to the function to be performed followed by the key.
   Follow the voice commands.




## Model YRC622 Feature Programming Thru Menu Mode Using Master PIN code*

1. Touch screen with back of hand or palm to activate.
2. Enter 4-8 digit master PIN code* followed by key.
   Lock Response: "Menu mode, enter number, press key to continue."
3. Enter digit corresponding to the function to be performed followed by the key.
   Follow the voice commands.




## Programming Troubleshooting
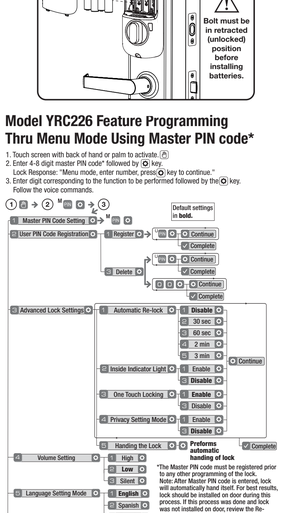
| Symptom | Suggested Action |
|---|---|
| Lock does not respond – door is open and accessible. | • Touchscreen becomes active when pressed w/whole hand. Use a larger area of the hand or fingers and verify contact with at least 3 areas.<br>• If touchscreen numbers are visible, check to see if they respond when pressed.<br>• Check batteries are installed and oriented correctly (polarity) in the battery case.<br>• Check batteries are in good condition; replace batteries* if discharged.<br>• Check to see if touchscreen harness is fully connected and not pinched. |
| Lock does not respond – door is locked and inaccessible. | • Batteries may be completely discharged.<br>• Use mechanical key to gain entry and replace batteries*. |
| Unit is on for a while then shows no reaction. Lights dim. | • Batteries do not have enough power. Replace batteries*. |
| Unit chimes to indicate code acceptance, but the door will not open. | • Check the door gaps for any foreign objects between door and frame.<br>• Check that the wire harness is firmly connected to the PCB. |
| Unit operates to allow access, but will not automatically re-lock. | • Check to see if Auto Re-lock Mode is enabled.<br>• Disable Auto Re-lock Mode to lock the door (automatically). If low battery indicator is lit (see below), change batteries*. |
| PIN codes will not register. | • PIN codes must consist of 4 to 8 digits to register.<br>• The same PIN code cannot be used for multiple users.<br>• Registration/management of PIN codes is set by the authority of the Master Code, which is set first.<br>• Contact the Master user.<br>• User codes must be entered within 5 seconds (while touchscreen is active) or process will have to be restarted.<br>• Check / or gear cannot be used as part of the PIN code. |
| Upon entering a PIN code and pressing key, the unit displays "Invalid code" error or lock times out without responding. | • Lockout Mode is enabled.<br>• Only the Master can enable/disable Lockout Mode.<br>• Contact the Master user. |
| Upon entering a PIN code and pressing the key, the red padlock icon appears and there are different tones. | • Check to see if the lock is set to Lockout Mode.<br>• Setting/managing Lockout Mode is done through Master Code only. Contact the Master user. |
| The unit operates, but it makes no sound. | • Check to see if Silent Mode is enabled (see Feature #4). |
| The unit responds "Low Battery" | • This is the alert to replace the batteries. Replace all four (4) batteries* with new AA Alkaline batteries. |
| Upon entering a PIN code and pressing the key, the unit responds "Wrong number of digits". | • The digits entered were incorrect or incomplete. Re-enter the correct code followed by the check key. |

* When batteries are replaced, Network Module locks have a real time clock that will be set through the User Interface (UI); it is recommended to verify correct date and time particularly those locks operating under Daylight Saving Time (DST).

**FCC:**
*Class B Equipment*
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

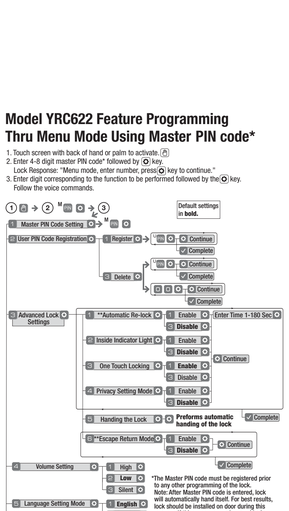**Warning:** Changes or modifications to this device, not expressly approved by **ASSA ABLOY Residential Group** could void the user's authority to operate the equipment.

**Industry Canada:**
This Class A digital apparatus meets all requirements of the Canadian Interference Causing Equipment Regulations.
Cet appareillage numérique de la classe A répond à toutes les exigences de l'interférence canadienne causant des réglements d'équipement.

**Yale Locks & Hardware**
Product Support Tel 1-855-213-5841 • www.yalehome.com

Yale® , Yale Real Living® and Assure Lock® are registered trademarks of ASSA ABLOY Residential Group. Other product / brand names may be trademarks or registered trademarks of their respective owners and are mentioned for reference purposes only. © Copyright 2019. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Residential Group is prohibited.

ASSA ABLOY

The global leader in door opening solutions

# Yale Locks

Z-Wave Plus ™ v2 System Integrators Guide

Yale Assure Electronic Deadbolts

YRD216-ZW3, YRD226-ZW3, YRD256-ZW3,
YRC216-ZW3, YRC226-ZW3, YRC256-ZW3,
YRD652-ZW3, NF-YRD622-ZW3, NF-YRD612-ZW3,
YRC652-ZW3, NF-YRC622-ZW3, NF-YRC612-ZW3,
YRD622-ZW3, YRD642-ZW3, YRC622-ZW3, YRC642-ZW3,
YRD410-ZW3, YRD420-ZW3, YRD430-ZW3, YRD450-ZW3,
YRD622-NN-ZW3, YRD642-NN-ZW3, YRC622-NN-ZW3, YRC642-NN-ZW3

Document Revision: 2.3

May 2023

# Contents

Revision History ..... 4
Yale Z-Wave Plus ™ Product Info ..... 6
Network Operations ..... 6
Enroll/Add device to network (SmartStart) ..... 6
Enroll/Add device to network (Classic Inclusion Mode) for Assure Lock [YRC/D216/226/256/622/642/652, NF-YRC/D612/622] ..... 7
Enroll/Add device to network (Classic Inclusion Mode) for Assure 2 Lock [YRD410/420/430/450] ..... 7
Un-enroll/Remove device from network (Exclusion Mode) ..... 7
Factory Reset ..... 8
Supported Command Classes ..... 8
Command Class Z-Wave Plus ™ Info, Version 2 ..... 8
Command Class Manufacturer Specific, Version 2* ..... 9
Command Class Security, Version 1 ..... 11
Command Class Security 2, Version 1 ..... 11
Command Class Device Reset Locally, Version 1* ..... 11
Command Class Power Level, Version 1* ..... 12
Command Class Version, Version 3* ..... 12
Command Class Battery, Version 1* ..... 13
Command Class Door Lock, Version 4* ..... 14
Command Class Door Lock Logging, Version 1* ..... 14
Command Class Schedule Entry Lock, Version 3* ..... 14
Command Class User Code, Version 2* ..... 14
Command Class Time Parameters, Version 1* ..... 18
Command Class Time, Version 2 ..... 18
Command Class Firmware Update Meta Data, Version 5* ..... 19
Command Class Association, Version 2* ..... 20
Command Class Multi Channel Association, Version 3* ..... 20
Command Class Association Group Info, Version 3* ..... 21
Command Class Notification, Version 8* ..... 23
Command Class Configuration, Version 4* ..... 28

Command Class Application Status, Version 1 ..... 32
Command Class Transport Service, Version 2 ..... 32
Command Class Supervision, Version 1 ..... 32
Command Class Indicator, Version 3* ..... 32
Command Class Basic, Version 2* ..... 33

* This command class requires security.

## Revision History

| Rev. | Details |
|---|---|
| 1.0 | Initial Release |
| 1.1 | Made the following updates:<br>• Added Command Class Clock section.<br>• Added Clock Report to the Association Group Info commands list.<br>• Marked Time as a secure command class.<br>• Added the following note to Time, Time Parameters, and Clock command classes: "If the controller does not support either the Time CC, Time Parameters CC, or Clock CC, then scheduled users will not have access."<br>• Added a brief description of the time syncing mechanism to the Command Class Time section.<br>• Changed Master Code slot from 0xFB to 0x00 in Notifications Table. |
| 1.2 | Made the following updates:<br>• Marked the Version command class as secure.<br>• Added Basic command class.<br>• Added information about non-access user codes to the User Code command class section. |
| 1.3 | Updated the Product ID description in the "Command Class Manufacturer Specific" section. |
| 1.4 | Made the following updates:<br>• Added interconnected locks: YRC216, YRC226, YRC256<br>• Added configuration parameter 28 (expiration time) to the Configurable Parameters table. |
| 1.5 | Made the following updates:<br>• Provided Version Report example<br>• Add mapping of Basic CC to Door Lock CC<br>• Updated CC descriptions that required security<br>• Updating Configuration Parameter Table<br>• Fixed the Max Nodes for Association<br>• Add information on how our Lock uses the Indicator feature<br>• Add information how to trigger unsolicited AGI Lifeline reports<br>• Add description of OTA internal step<br>• Updated User Code User ID Status Values from CC v1 vs v2<br>• Removed support for Clock CC |
| 1.6 | • Added NF-YRD612, NF-YRD622, NF-YRC612, NF-YRC622 and YRC652<br>• Added SmartStart feature statement |
| 1.7 | • Added YRD622, YRD642, YRC622 and YRC642<br>• Expectations from User Code Set/Get vs Extended User Code Set/Get Commands |
| 1.8 | • Added YRD410/420/430/450 |
| 1.9 | • Added BLE Alarms from BLE locks |
| 2.0 | • Added description of what other features are affected when Passage Mode and Escape Return Mode features are enabled. |

| | |
|---|---|
| | • Re-added Scheduling Alarms<br>• Fixed Door State Alarm value |
| 2.1 | • Added -NN (No NFC) SKUs<br>• Added Handing Alarm<br>• Fixed Master Code Change Alarm<br>• Fixed Wrong Entry Code Limit Alarm<br>• Fixed Auto Relock Time default and minimum for 400 Series Locks<br>• Added Notes for Passage Mode, DPS Alarms, Time Sync at lock boot-up. |
| 2.2 | • Added Duplicate Pincode Error Alarm<br>• Added Manual Unlock by inside button alarm.<br>• Updated Wrong Code Entry Limit default for 400 Series Locks<br>• Added notes for Relock time minimum value.<br>• Added notes about delete all user codes |
| 2.3 | • Added Door Propped Alarm |

# Yale Z-Wave Plus ™ Product Info

Manufacturer ID: ASSA ABLOY (0x0129)

Z-Wave™ Device Type: Door Lock Keypad

Z-Wave™ Role Type: Listening Sleeping Slave (LSS)

# Network Operations

## Enroll/Add device to network (SmartStart)

SmartStart enabled products can be added into a Z-Wave™ network by scanning the Z-Wave™ QR Code present on the product with a controller providing SmartStart inclusion. No further action is required and the SmartStart product will be added automatically within 10 minutes of being switched on in the network vicinity.

- Open the Z-Wave™ system's smart home app via smartphone or tablet and follow the in-app prompts to add a new device.
- SmartStart works when the Z-Wave™ system has the DSK saved and one of the following are true:
    - The lock has the minimum Radio Module firmware version AND is in a factory-reset state:
        - AYR-MOD-ZW3-USA: v2.35
    - The lock has the minimum Lock firmware version AND is in a factory-reset state:
        - YRC/D216/226/256: v4.4.00
        - YRC/D652: v2.1.07
        - NF-YRC/D622: v2.1.11
        - NF-YRC/D612: v2.2.4
        - YRC/D622/642: v3.2.44
        - YRD410/420/430/450: v1.3.14
        - YRC/D622/642-NN: v4.0.01
    - An internal key has already been established.

## Enroll/Add device to network (Classic Inclusion Mode) for Assure Lock [YRC/D216/226/256/622/642/652, NF-YRC/D612/622]

- Enter the 4–8-digit Master PIN code followed by the ⚙ key.
- Press the 7 key followed by the ⚙ key.
- Press the 1 key followed by the ⚙ key.
- Scan the QR code, if prompted, or…
- Enter the first five (5) digits of the DSK if prompted.

## Enroll/Add device to network (Classic Inclusion Mode) for Assure 2 Lock [YRD410/420/430/450]

## Un-enroll/Remove device from network (Exclusion Mode)

- Enter the 4–8-digit Master PIN code followed by the ⚙ key.
- Press the 7 key followed by the ⚙ key.
- Press the 3 key followed by the ⚙ key.

When the Yale lock is unenrolled/excluded from the network through the device menu mode, any changes previously made to the user code database and configuration settings will be retained, as opposed to set back to defaults.

## Factory Reset

- Factory resetting the lock with the Z-Wave™ module installed will clear the Z-Wave™ network settings, causing the device to be removed from the network.
- The following is the method of performing a factory reset:
    1. Manual factory reset, via power cycle while holding button on inside lock escutcheon.
        - See the Lock Installation Manual for details.
        - Please use the manual factory reset procedure only when the network primary controller is missing or otherwise inoperable.

# Supported Command Classes

The Yale Assure Z-Wave Plus ™ deadbolts follow the Z-Wave™ Command Class Specifications for all command classes that are implemented. Please refer to these specifications for specifics on how each command class works. The supported command classes are listed below, and certain sections contain details about operations that may be specific to the Yale lock. If a section is blank, then please refer to the Z-Wave™ specifications.

As a secure device, most of the command classes supported by the lock are required to be sent securely with Z-Wave™ security. During enrollment, the controller can use the Security Command Class to get this list directly from the lock. If a command class requires security, it is also indicated as such below.

Specification used: Z-Wave™ Specifications Release Dec 2021 BCD

## Command Class Z-Wave Plus ™ Info, Version 2

The Z-Wave Plus ™Info command class reports the following information:

- Role Type: Slave Sleeping Listening (0x07)
- Node Type: Z-Wave Plus ™ Node (0x00)
- Installer Icon Type: 0x0300
- User Icon Type: 0x0300

## Command Class Manufacturer Specific, Version 2*

* This command class requires security.

The Manufacturer Specific command class reports the following information:

- Manufacturer ID: 0x0129
  - This is the manufacturer ID assigned to ASSA ABLOY.
- Product ID:
  - The Product ID can be used to differentiate between hardware platforms, as well as between ZW2 and ZW3. See Table 1 - First 2 Digits of Product ID, below, for details.
  - Product IDs for the locks covered in this document are as follows:
    - 0x4600 for older version of Yale Residential Deadbolt Lock
    - 0x46D1 for YRD216-ZW3 (Keyed Push Button Deadbolt)
    - 0x46D2 for YRD226-ZW3 (Keyed Touch Screen Deadbolt)
    - 0x46D5 for YRD256-ZW3 (Keyless Touch Screen Deadbolt)
    - 0x46C1 for YRC216-ZW3 (Interconnected Push Button Deadbolt)
    - 0x46C2 for YRC226-ZW3 (Interconnected Keyed Touch Screen Deadbolt)
    - 0x46C5 for YRC256-ZW3 (Interconnected Keyless Touch Screen Deadbolt)
    - 0x4DD5 for YRD652-ZW3 (2nd Generation Keyless Touch Screen Deadbolt)
    - 0x4DD2 for NF-YRD622-ZW3 (2nd Generation Keyed Touch Screen Deadbolt)
    - 0x4DD1 for NF-YRD612-ZW3 (2nd Generation Keyed Push Button Deadbolt)
    - 0x4DC5 for YRC652-ZW3 (2nd Generation Interconnected Keyless Touch Screen Deadbolt)
    - 0x4DC2 for NF-YRC622-ZW3 (2nd Generation Interconnected Keyed Touch Screen Deadbolt)
    - 0x4DC1 for NF-YRC612-ZW3 (2nd Generation Interconnected Keyed Push Button Deadbolt)
    - 0x52D2 for YRD622-ZW3 (2nd Generation Fire Rated Keyed Touch Screen Deadbolt)
    - 0x52D4 for YRD642-ZW3 (2nd Generation Fire Rated Keyless Touch Screen Deadbolt)
    - 0x52C2 for YRC622-ZW3 (2nd Generation Fire Rated Keyed Interconnected Touch Screen Deadbolt)
    - 0x52C4 for YRC642-ZW3 (2nd Generation Fire Rated Keyless Interconnected Touch Screen Deadbolt)

- 0x45D1 for YRD410-ZW3 (2nd Generation Assure Keyed Push Button Deadbolt)
- 0x45D2 for YRD420-ZW3 (2nd Generation Assure Keyed Touch Screen Deadbolt)
- 0x45D3 for YRD430-ZW3 (2nd Generation Assure Keyless Push Button Deadbolt)
- 0x45D5 for YRD450-ZW3 (2nd Generation Assure Keyless Touch Screen Deadbolt)
- 0x5DD2 for YRD622-NN-ZW3 (2nd Generation Fire Rated Keyed Touch Screen Deadbolt with No NFC)
- 0x5DD4 for YRD642-NN -ZW3 (2nd Generation Fire Rated Keyless Touch Screen Deadbolt with No NFC)
- 0x5DC2 for YRC622-NN -ZW3 (2nd Generation Fire Rated Keyed Interconnected Touch Screen Deadbolt with No NFC)
- 0x5DC4 for YRC642-NN -ZW3 (2nd Generation Fire Rated Keyless Interconnected Touch Screen Deadbolt with No NFC)

- Product Type ID:
  - 0x8004 for YRD216-ZW3 & YRCD216-ZW3 (Push Button Deadbolt)
  - 0x8002 for YRD226-ZW3, YRC226-ZW3, YRD256-ZW3, & YRC256-ZW3 (Touch Screen Deadbolt)
  - 0x8109 for YRD652-ZW3, YRC652-ZW3, NF-YRD622-ZW3, & NF-YRC622-ZW3 (2nd Generation Touch Screen Deadbolt)
  - 0x810A for NF-YRD612-ZW3 & NF-YRC612-ZW3 (2nd Generation Push Button Deadbolt)
  - 0x8103 for YRC/D622-ZW3 & YRC/D642-ZW3 (2nd Generation Fire Rated Touch Screen Deadbolt)
  - 0x8104 for YRD410-ZW3, YRD420-ZW3, YRD430-ZW3 & YRD450-ZW3 (2nd Generation Assure Deadbolt)
  - 0x8113 for YRC/D622-NN-ZW3 & YRC/D642-NN-ZW3 (2nd Generation Fire Rated Touch Screen Deadbolt with No NFC)

*Table 1 - First 2 Digits of Product ID*

| | Z-Wave™ Type | | | Platform | | | | | Hex Value |
|---|---|---|---|---|---|---|---|---|---|
| [0x8004/0x8002]-ZW2 | 0 | 0 | 0 | 0 | 0 | 1 | 1 | 0 | ***0x06*** |
| [0x8004/0x8002]-ZW3 | 0 | 1 | 0 | 0 | 0 | 1 | 1 | 0 | ***0x46*** |
| [0x8109/0x810A]-ZW2 | 0 | 0 | 0 | 0 | 1 | 1 | 0 | 1 | ***0x0D*** |
| [0x8109/0x810A]-ZW3 | 0 | 1 | 0 | 0 | 1 | 1 | 0 | 1 | ***0x4D*** |
| [0x8103]-ZW2 | 0 | 0 | 0 | 1 | 0 | 0 | 1 | 0 | **0x12** |
| [0x8103]-ZW3 | 0 | 1 | 0 | 1 | 0 | 0 | 1 | 0 | **0x52** |
| [0x8104]-ZW2 | 0 | 0 | 0 | 0 | 0 | 1 | 0 | 1 | ***0x05*** |
| [0x8104]-ZW3 | 0 | 1 | 0 | 0 | 0 | 1 | 0 | 1 | ***0x45*** |
| [0x8113]-ZW2 | 0 | 0 | 0 | 1 | 1 | 1 | 0 | 1 | **0x1D** |
| [0x8113]-ZW3 | 0 | 1 | 0 | 1 | 1 | 1 | 0 | 1 | **0x5D** |

## Command Class Security, Version 1

This command class has been implemented per the Z-Wave™ Specification.

## Command Class Security 2, Version 1

This command class has been implemented per the Z-Wave™ Specification.

## Command Class Device Reset Locally, Version 1*

* This command class requires security.

The Yale door locks covered in this guide can be reset to their factory default settings by manually resetting the lock or by BLE command via app for BLE locks (by following the procedure outlined in the specific lock's manual).

Upon factory reset, all Z-Wave™ network settings are cleared, all the user codes are erased from the lock (including the master code), and all configurable settings are reset to default values, except for the language setting. A factory reset leaves the lock in a completely unsecure state (waiting for master code to be set), so care should be taken if using the configuration parameter to perform a remote reset. However, if the DUT is unenrolled/excluded from the network through the device menu mode, then the user code database and configuration settings will not be reset to the defaults.

## Command Class Power Level, Version 1*

* This command class requires security.

This command class has been implemented per the Z-Wave™ Specification.

The Power Level command class was implemented to allow controllers to set the transmit power for the door lock. This could be useful in large networks with many nodes, so that the lock can find working routes back to the controller while transmitting at a lower power. This ensures robust routes when the normal transmit power level is restored.

Currently there is no way to initiate a low power enrollment; this command class can only be used once the lock is enrolled successfully.

## Command Class Version, Version 3*

* This command class requires security.

The Yale Real Living locks are a multi-processor system with 1 additional firmware target. All processors can be updated through the Firmware Update Meta Data command class. The firmware targets are numbered as follows:

- Firmware Target 0 = Z-Wave™ Chip
- Firmware Target 1 = Lock Processor

To identify the firmware version for each target, the hex data in the firmware version report must be converted to decimal prior to combining major and minor version into the full version.

After a controller sends a Version Get command the log will display the Version Report similar to the below:

```
Send VERSION_GET to node 16 started
Send VERSION_GET to node 16 completed in 00:00:01.242
Rx [S2_ACCESS] VERSION_REPORT(86 12) + 03 07 10 02 22 02 01 2C 00
```

The above Version Report will be defined as this in the Z-Wave™ sniffer tool, Zniffer:

**Command Class Version** ver.3

**Version Report**

| | |
|---|---|
| Z-Wave Library Type: | 0x03 |
| Z-Wave Protocol Version: | 0x07 |
| Z-Wave Protocol Sub Version: | 0x10 |
| Firmware 0 Version: | 0x02 |
| Firmware 0 Sub Version: | 0x22 |
| Hardware Version: | 0x02 |
| Number of firmware targets: | 0x01 |
| vg 1: | 2C 00 |
| Firmware Version: | 0x2C |
| Firmware Sub Version: | 0x00 |

For Firmware Target 0, the Firmware 0 Version (0x02) and Sub version (0x22) translate to module firmware decimal value of "2.34".

For Firmware Target 1 (the data under vg1), Firmware Version (0x2C) and Sub version (0x00) translate to lock firmware decimal value of "4.3.00".

## Command Class Battery, Version 1*

* This command class requires security.

Per the Z-Wave Plus ™ Specification, the lock will send a Battery Report with a value of 0xFF to the Lifeline node when a critical battery level is reached (starting at about 3.8V for Product Type IDs 0x8002 & 0x8004 and starting at about 4.2V for Product Type ID 0x8109, 0x810A, 0x8103, 0x8104 & 0x8113). In addition, the Yale Locks provide 2 earlier low battery alarms through the notification command class (see Table 7 - Notification Table).

Low battery alarms will be generated if the lock is in a low battery state during one of the following events: any motor activation (keypad lock/unlock, RF lock/unlock, etc.), controller sends Get Battery command, or the unsolicited battery report was triggered. Yale locks will generate an unsolicited Battery Report at lock boot-up and every 8 hours if a node is listed in the Lifeline Group.

## Command Class Door Lock, Version 4*

* This command class requires security.

Yale Z-Wave Plus ™ locks support three door lock modes: Door Secured (0xFF), Door Unsecured (0x00), and Door Unsecured with timeout (0x01). When Auto Relock is enabled, the lock will automatically relock after all unlock events. Yale Z-Wave Plus ™ locks do not support any of the "Door Unsecured for outside Door Handles" (0x20, 0x21) or "Door Unsecured for inside Door Handles" (0x10, 0x11) modes.

## Command Class Door Lock Logging, Version 1*

* This command class requires security.

This command class has been implemented per the Z-Wave™ Specification.

## Command Class Schedule Entry Lock, Version 3*

* This command class requires security.

Yale locks support Year Day Schedule types and Daily Repeating Schedule types. Yale locks allow the controller to apply multiple schedules to a single user. Each user has 1 Year Day Schedule slot (Slot ID 1) and 7 Daily Repeating slots (Slot IDs 1 – 7). If user scheduling is used in the lock, then the controller **MUST** set the lock's time using the Time Parameters command class.

## Command Class User Code, Version 2*

* This command class requires security.

Versions 1 and 2 of this command class can address user code slots 1 through 250 via the User Code Set/Get/Report commands. Version 2 of this command class also includes extended versions of each of these commands, used to address the extended range of users.

*Table 2 – Expected Reports for Set/Get Commands*

| Command | Slots 1-250 | Slot 251 | Slots 252-254 | Slot 255 | Slots 256-500 |
|---|---|---|---|---|---|
| User Code CC v1/v2: User Code Get | User Code Report | User Code Report | User Code Report | User Code Report | N/A |
| User Code CC v1/v2: User Code Set | User Code Report | Master Code Report | User Code Report | User Code Report | N/A |
| User Code CC v2: Extended User Code Get | Extended User Code Report | Extended User Code Report | Extended User Code Report | Extended User Code Report | Extended User Code Report |
| User Code CC v2: Extended User Code Set | Extended User Code Report | Extended User Code Report | Extended User Code Report | Extended User Code Report | Extended User Code Report |

The master code can be accessed (read/write) using slot 251 (0xFB), if using version 1 of this command class. For version 2, the Master Code Set/Get/Report commands must be used.

Yale locks do not support bulk commands (setting or getting multiple user codes at once) or CRC functionality for this command class.

It should be noted that the lock's operation mode (called "User Code Keypad Mode" in this command class) can be modified through Version 2 of this command class, or through parameter 8 of the Configuration command class. This is the only parameter that can be modified through more than one command class.

The following implementation notes apply specifically to non-access user codes:

- The usage of non-access users has changed slightly with ZW3, compared to ZW2, but is still backwards compatible. If a User Code Set is transmitted using version 1 of the command class, then the lock will accept a value of 0x04 as the status for the non-access user.
- Previously, a value of 0x04 was reserved for setting non-Access users, as stated above. When using version 2 of this command class, a non-Access (now called "Messaging") user ID status is assigned a value of 0x03. This value of 0x03 should be used with the Extended User Code Set command.
- A non-access user can be identical to a "normal" PIN code, aside from the fact that it does *not* grant access.
- Any available user code slot (except the master code) can be used to store non-access user code.
- Schedules can be applied to non-access users.

Yale locks support the following User ID Status values:

*Table 3 - User ID Status User Code CC v1 vs v2*

| **User ID Status** | **User Code CC v1 Set** | **User Code CC v1 Report Value** |
|---|---|---|
| *Description* | *Value* | *Value* |
| Available | 0x00 | 0x00 |
| Enabled / Grant Access | 0x01 | 0x01 |
| Disabled | 0x02 | 0x03 |
| | 0x03 | |
| Messaging:<br>The user code is accepted, but the lock does not grant access to the user. Instead, it generates an alarm to the Lifeline and does NOT take preventative actions for further attempts to enter the User ID and/or User Code. | 0x04 | 0x04 |
| One-Time Use:<br>This PIN is disabled immediately after being used for a successful unlock operation. | 0x06 | 0x06 |
| Expiring:<br>This PIN is disabled once a specified amount of time has passed after being used for a successful unlock operation. The expiration time is set through the Configuration command class. | 0x07 | 0x07 |

| User ID Status | User Code CC v2: Extended User Code Set | User Code CC v2: Extended User Code Report Value |
|---|---|---|
| *Description* | *Value* | *Value* |
| Available | 0x00 | 0x00 |
| Enabled / Grant Access | 0x01 | 0x01 |
| Disabled | 0x02 | 0x02 |
| Messaging: The user code is accepted, but the lock does not grant access to the user. Instead, it generates an alarm to the Lifeline and does NOT take preventative actions for further attempts to enter the User ID and/or User Code. | 0x03 | 0x03 |
| One-Time Use: This PIN is disabled immediately after being used for a successful unlock operation. | 0x06 | 0x06 |
| Expiring: This PIN is disabled once a specified amount of time has passed after being used for a successful unlock operation. The expiration time is set through the Configuration command class. | 0x07 | 0x07 |

## Command Class Time Parameters, Version 1*

* This command class requires security.

The controller must set the Time Parameters in the lock anytime the lock loses power. After 10 seconds from lock enrollment, if there are no messages from the controller the lock will initially request the Time (by sending Time Get and Time Parameter Get commands). If the time is not set by the controller, then user codes with schedules applied to them cannot be granted access. When the lock is powered up, it will generate a Notification Report to indicate to the controller that power has been applied (Alarm V1 Type = 0x82, Alarm V1 Level = 0x00, Event Type = 0x08, Event Value = 0x01). This indicates to the controller that the lock no longer has a valid time set.

If the controller does not support either the Time CC or Time Parameters CC, then scheduled users will not have access.

## Command Class Time, Version 2

The controller must set the Time Parameters in the lock anytime the lock loses power. Even though the Time CC is not secure, the Time Set command must be issued at the same or higher security level as when the device was enrolled for time to be set otherwise it will be rejected by the device. After 10 seconds from lock enrollment, if there are no messages from the controller the lock will initially request the Time (by sending Time Get and Time Parameter Get commands). If the time is not set by the controller, then user codes with schedules applied to them cannot be granted access. When the lock is powered up, it will generate a Notification Report to indicate to the controller that power has been applied (Alarm V1 Type = 0x82, Alarm V1 Level = 0x00, Event Type = 0x08, Event Value = 0x01). This indicates to the controller that the lock no longer has a valid time set.

If the controller does not support either the Time CC or Time Parameters CC, then scheduled users will not have access.

A time sync should occur every 8 hours, starting with the Time CC. If there is no response within a minute, the next step is to issue a Time Parameters Get to sync time.

## Command Class Firmware Update Meta Data, Version 5*

* This command class requires security.

Yale Z-Wave Plus ™ locks support over-the-air (OTA) upgrading of 2 firmware targets:

1. Firmware Target 0: Z-Wave™ chip
2. Firmware Target 1: The lock main processor

Firmware Target 0 is used to determine the correct Z-Wave™ processor image to download. ID 1 is always 0xA5, to signal this is an ASSA ABLOY Z-Wave™ image, and ID 2 is specific to the region, with the lower nibble being 0x0 and the upper nibble being the value in Table 4 - Region-Specific Values for Firmware ID 0. Eventually the lower nibble will be used to separate builds within a specific region, but this will also be 0 for now, since there is only a single build of firmware.

*Table 4 - Region-Specific Values for Firmware ID 0 (Upper Nibble)*

| Region | Value |
|---|---|
| ANZ | 0x1 |
| CN | 0x2 |
| EU | 0x3 |
| HK | 0x4 |
| IL | 0x5 |
| IN | 0x6 |
| JP | 0x7 |
| KR | 0x8 |
| RU | 0x9 |
| US | 0xA |

Firmware 1 target will depend on which version of the lock is in use (mapped to the Product Type ID).

- For YRC/D216-ZW3 (Push Button interface), Firmware 1 ID = 0x8004.
- For YRC/D226-ZW3 & YRC/D256-ZW3 (Touch Screen interface), Firmware 1 ID = 0x8002.
- For YRC/D652-ZW3 & NF-YRC/D622-ZW3 (2nd Generation Touch Screen interface), Firmware 1 ID = 0x8109.
- For NF-YRC/D612-ZW3 (2nd Generation Push Button interface), Firmware 1 ID = 0x810A.
- For YRC/D622-ZW3 & YRC/D642-ZW3 (2nd Generation Fire Rated Touch Screen Deadbolt), Firmware 1 ID = 0x8103
- For YRD410-ZW3, YRD420-ZW3, YRD430-ZW3 & YRD450-ZW3 (2nd Generation Assure Deadbolt), Firmware 1 ID = 0x8104
- For YRC/D622-NN-ZW3 & YRC/D642-NN-ZW3 (2nd Generation Fire Rated Touch Screen Deadbolt with No NFC), Firmware 1 ID = 0x8113

After an OTA is performed (a Firmware Update Status Report should return with successful), there is an additional step internally where we write/apply the image to the lock/module. When the image is being applied to the lock, the lock is unresponsive until completion of the applied image. Once the completion of the OTA image is applied the lock silently reboots.

The following is the time it takes for each product to complete OTA image apply phase:

- For Z-Wave™ Radio Chip, ~10 seconds
- For YRC/D216-ZW3 (Push Button interface), ~ 3 minutes
- For YRC/D226-ZW3 and YRC/D256-ZW3 (Touch Screen interface), ~ 3 minutes
- For YRC/D652-ZW3 & NF-YRC/D622-ZW3 (2nd Generation Touch Screen interface), ~ 13 minutes
- For NF-YRC/D612-ZW3 (2nd Generation Push Button interface), ~ 13 minutes
- For YRC/D622-ZW3 & YRC/D642-ZW3 (2nd Generation Fire Rated Touch Screen Deadbolt), ~23 minutes
- For YRD410-ZW3, YRD420-ZW3, YRD430-ZW3 & YRD450-ZW3 (2nd Generation Assure Deadbolt), ~23 minutes (full image) ~5 minutes (patch/differential image)
- For YRC/D622-NN-ZW3 & YRC/D642-NN-ZW3 (2nd Generation Fire Rated Touch Screen Deadbolt with No NFC), ~23 minutes

## Command Class Association, Version 2*

* This command class requires security.

This command class has been implemented per the Z-Wave™ Specification.

## Command Class Multi Channel Association, Version 3*

* This command class requires security.

This command class has been implemented per the Z-Wave™ Specification.

Yale locks support only one group, which can contain up to 5 nodes.

## Command Class Association Group Info, Version 3*

* Command Class Requires Security

Yale locks support the Lifeline Association Group.

*Table 5 - Association Table*

| Group ID | Maximum Nodes | Description | Commands |
|---|---|---|---|
| 1 | 5 | Lifeline | • Command Class Battery<br>  ○ Battery Report<br>• Command Class Configuration<br>  ○ Configuration Report<br>• Command Class Notification<br>  ○ Notification Report<br>• Command Class Door Lock<br>  ○ Door Lock Operation Report<br>  ○ Door Lock Configuration Report<br>• Command Class Device Reset Locally<br>  ○ Device Reset Locally Notification<br>• Command Class User Code<br>  ○ User Code Report<br>  ○ Extended User Code Report<br>  ○ User Code Keypad Mode Report<br>  ○ Master Code Report |

The following are the actions to trigger the reports:

*Table 6 – Lifeline Report Trigger Table*

| **Report Command** | **RF Trigger** | **Manual Trigger** |
|---|---|---|
| Battery Report | Any RF Lock Operation when lock is under the battery thresholds | Any manual/keypad Lock Operation when lock is under the battery thresholds or Power Cycle Lock |
| Configuration Report | Configuration Set | Change Lock Settings via Keypad |
| Notification Report (Access Control) | Any RF Lock Operation | Manual or Keypad Unlock/Lock |
| Notification Report (Power Management) | Any RF Lock Operation when lock is under the battery thresholds | Any manual/keypad Lock Operation when lock is under the battery thresholds or Power Cycle Lock |
| Door Lock Operation Report | | Manual or Keypad Unlock/Lock |
| Door Lock Configuration Report | Door Lock Configuration Set | Enable/Disable Auto-Relock Feature via Keypad |
| Device Reset Locally Notification | | HW Factory Reset |
| User Code Report | Add/Delete User Code via User Code Set Command | Add/Delete User Code via Keypad from Slots 1-250 |
| Extended User Code Report | Add/Delete User Code via Extended User Code Set Command | Add/Delete User Code via Keypad from Slots 251-500 |
| User Code Keypad Mode Report | User Code Keypad Mode Set | Enable/Disable Vacation Mode or Privacy Mode (refer to Installation Manual) |
| Master Code Report | Master Code Set | Update/Modify Master Code via Keypad |

## Command Class Notification, Version 8*

* This command class requires security.

*Table 7 - Notification Table*

| Alarm Reports | Alarm type | Alarm Level | Description | Notification Type | Event |
|---|---|---|---|---|---|
| Deadbolt Jammed | 0x09 | 0x01 | Deadbolt jammed while locking | 0x06 | 0x0B |
| | | 0x02 | Deadbolt jammed while unlocking | 0x06 | 0x0B |
| Keypad Lock | 0x12 | 0x (01 - max users) | Where Alarm level represents user slot number | 0x06 | 0x05 |
| Keypad Unlock | 0x13 | 0x (01- max users) | Where Alarm level represents user slot number (0x00 = Master Code) | 0x06 | 0X06 |
| Manual Lock | 0x15 | 0x01 | by key cylinder or inside thumb-turn | 0x06 | 0x01 |
| | | 0x02 | by touch function (lock and leave) | 0x06 | 0x01 |
| | | 0x03 | By inside button | 0x06 | 0x01 |
| Manual Unlock | 0x16 | 0x01 | By key cylinder or inside thumb turn | 0x06 | 0x02 |
| | | 0x02 | By inside button | 0x06 | 0x02 |

| | | | | | |
|---|---|---|---|---|---|
| RF Operate Lock | 0x18 | 0x01 | by RF module | 0x06 | 0x03 |
| RF Operate Unlock | 0x19 | 0x01 | by RF module | 0x06 | 0X04 |
| Auto Lock Operate Locked | 0x1B | 0x01 | Auto re-lock cycle complete, locked. | 0x06 | 0x09 |
| User deleted | 0x21 | 0x (01-max users) | User was deleted. Alarm level = user slot number | 0x06 | 0X0D (single) |
| | | 0x00 [1] | All User codes were deleted | | 0X0C (all) |
| Non-Access | 0x26 | 0x (01-max users) | A Non-Access Code was entered at the lock.<br>Where alarm level represents user slot number | 0x06 | 0xFE |
| Door State / DoorSense™ [2] | 0x2B | 0x00 | Door is open | 0x06 | 0x16 |
| | | 0x01 | Door is closed | 0x06 | 0x17 |
| | | 0x02 | Door Propped (Door Open for longer than configurable door propped time) | 0x06 | 0xFE |
| Daily Repeating Schedule Set/Erased | 0x60 | 0x (01-max users) | Schedule(s) has been set/erased for specified user ID | 0x06 | 0xFE |

| | | | | | |
|---|---|---|---|---|---|
| Daily Repeating Schedule Enabled/Disabled | 0x61 | 0x (01-max users) | Daily Repeating Schedule(s) were enabled/disabled for User ID specified in Alarm Level. If Alarm Level = 0xFF then all users were affected. | 0x06 | 0xFE |
| Year Day Schedule Set/Erased | 0x62 | 0x (01-max users) | Schedule(s) has been set/erased for specified user ID | 0x06 | 0xFE |
| Year Day Schedule Enabled/Disabled | 0x63 | 0x (01-max users) | Year Day Schedule(s) were Enabled/Disabled for User ID specified in Alarm Level. If Alarm Level = 0xFF then all users were affected. | 0x06 | 0xFE |
| All Schedule Types Erased | 0x64 | 0x (01-max users) | All Schedule Types were Set (erased/set) for User ID specified in Alarm Level. If Alarm Level = 0xFF then all users were affected. | 0x06 | 0xFE |
| All Schedule Types Enabled/Disabled | 0x65 | 0x (01-max users) | Schedule(s) has been enable/disabled for specified user ID. If Alarm Level = 0xFF then all users were affected. | 0x06 | 0xFE |
| Master Code changed | 0x70 | 0x00 | Master code was changed at keypad or via RF | 0x06 | 0x12 |
| User added | | 0x (01-max users) | User added. Alarm level = user slot number | 0x06 | 0X0E |
| Duplicate Pin code error | 0x71 | 0x (01-max users) | Where Alarm level represents user slot Number, an Alarm is generated in response to add user via RF.<br>This alarm is not generated when attempting to add duplicate pin at the Keypad (The lock simply denies it and plays the “Denied” sound.) Trying to duplicate the master code will result in a 0x71 0x00 alarm report. | 0x06 | 0x0F |

| | | | | | |
|---|---|---|---|---|---|
| Battery is fully charged | 0x80 | 0x05 | After a low battery alert was observed, the lock was powered down and powered back up with full battery. | 0x08 | 0x0D |
| Handing Cycle completed | 0x81 | 0x00 | Right-handed install | 0x06 | 0xFE |
| | | 0x01 | Left-handed install | 0x06 | 0xFE |
| Door Lock needs Time set / RF Module Power Cycled | 0x82 | 0x00 | Power to the lock was restored and the locks RTC was cleared. The controller should set the time to ensure proper logging. | 0x08 | 0x01 |
| Disabled user entered at keypad | 0x83 | 0x (01-max users) | A disabled user pin code was entered at the keypad | 0x06 | 0xFE |
| Valid user but outside of schedule | 0x84 | 0x (01-max users) | A valid user can be both a normal user and a non-Access user. If a non-access user is out of schedule this alarm will be sent instead of the non-access alarm. | 0x06 | 0xFE |
| Tamper Alarm | 0xA1 | 0x01 | keypad attempts exceed code entry limit | 0x06 | 0X10 |
| | | 0x02 | front escutcheon removed from main | 0x06 | 0xFE |
| Low Battery Alarms [3] | 0xA7 | 0x (Current %) | *Low Battery* Starting at 4.0V [0x8002 & 0x8004]; 4.6V [0x8109, 0x810A, 0x8103, 0x8104 & 0x8113] | 0x08 | 0x0A |
| | 0xA8 | 0x (Current %) | *Critical Battery Level* Starting at 3.9V [0x8002 & 0x8004]; 4.4V [0x8109, 0x810A, 0x8103, 0x8104 & 0x8113] | 0x08 | 0x0B |
| Integrated BLE Lock [4] | 0xE2 | 0x00 | Integrated BLE Lock | 0x06 | 0x03 |
| | | 0x01 | Integrated BLE Auto Relock | 0x06 | 0x09 |
| Integrated BLE Unlock [4] | 0xE3 | 0x00 | Integrated BLE Unlock | 0x06 | 0X04 |
| | | 0x01 | Integrated BLE Auto Unlock | 0x06 | 0X04 |
| Homekit BLE Lock [4] | 0xE4 | 0x00 | Integrated Homekit BLE Lock | 0x06 | 0x03 |
| Homekit BLE Unlock [4] | 0xE5 | 0x00 | Integrated Homekit BLE Unlock | 0x06 | 0X04 |

[1] Deleting all user codes will also delete any associated schedules (year day and daily repeating scheduled pin codes) assigned to user codes.

[2] Only supported by YRD410/420/430/450. This requires additional Hardware and calibration within the Yale Access App.

[3] The Yale lock also supports a 3rd low battery alarm: too low to operate. This alarm is sent out as a Battery Report (with value = 0xFF) through the Battery Command Class. This is the last low battery alarm level before the product stops functioning. Starting at 3.8V (0x8002 & 0x8004); 4.2V (0x8109 ,0x810A, 0x8103 ,0x8104, & 0x8113)

[4] Only supported by YRD410/420/430/450 and needs Yale Access App setup.

## Command Class Configuration, Version 4*

* This command class requires security.

*Table 8 - Configurable Parameters*

| Param. Num. | Name | Length | Configuration Properties | | | Info | Length of Info String (Max length allowed is 90) |
|---|---|---|---|---|---|---|---|
| | | | Min | Max | Default | | |
| 1 | Volume | 1 byte | 0x01 (High Volume) | 0x03 (Silent) | 0x02 (Low Volume) [0x8002, 0x8109, 0x8103 & 0x8113] | Set Volume Level to high (1), low (2), or silent (3). [0x8002, 0x8109, 0x8103, 0x8104 & 0x8113] | 53 |
| | | | | | 0x01 (High Volume) [0x810A, 0x8004 & 0x8104] | Set Volume Level to high (1) or silent (3). [0x810A & 0x8004] | 44 |
| 2 | Auto Relock | 1 byte | 0x00 (Disable) | 0xFF (Enable) | 0x00 (Disable) | Set Auto Relock feature to enable or disable. | 45 |

| | | | | | | | |
|---|---|---|---|---|---|---|---|
| 3 | Relock time | 1 byte | 0x0A (10 seconds) [0x8002, 0x810A, 0x8004, 0x8109, 0x8103 & 0x8113]<br>0x01 (1 seconds) [0x8104] [1] | 0xB4 (180 seconds) | 0x1E (30 seconds) | Adjust the time your lock will auto relock. | 43 |
| 4 | Wrong Code Entry Limit | 1 byte | 0x03 | 0x0A | 0x05 [0x8002, 0x810A, 0x8004, 0x8109, 0x8103 & 0x8113]<br>0x03 [0x8104] | Adjust the limit for wrong code entries allowed by your lock. | 61 |
| 5 | Language [2] | 1 byte | 0x01 (English) | 0x03 (French) | 0x01 (English) | Set the language to English (1), Spanish (2), or French (3). | 60 |
| 7 | Shut down time | 1 byte | 0x0A (10 seconds) | 0x84 (132 seconds) | 0x3C (60 seconds) | Adjust the time your lock is shutdown after reaching its wrong code entry limit. | 80 |

| | | | | | | | |
|---|---|---|---|---|---|---|---|
| 8 | Operating mode [3] | 1 byte | 0x00 (Normal Mode) | 0x02 (Privacy Mode) [0x8002, 0x8004, 0x8109 & 0x810A] | 0x00 (Normal Mode) | Set the Operating Mode to normal mode(0), vacation mode(1), privacy mode(2). [0x8002, 0x8004, 0x8109 & 0x810A] | 75 |
| | | | | | | Set the Operating Mode to normal mode, keypad disable mode or passage mode. [0x8104] | 76 |
| | | | | 0x03 (Passage Mode) [0x8103, 0x8104 & 0x8113] | | Set the Operating Mode to normal mode, vacation mode, privacy mode or passage mode. [0x8103 & 0x8113] | 83 |
| 11 | One Touch Locking | 1 byte | 0x00 (Disable) | 0xFF (Enable) | 0xFF (Enable) | Set One Touch Locking feature to enable or disable. | 51 |
| 12 | Privacy Button [4] | 1 byte | 0x00 (Disable) | 0xFF (Enable) | 0x00 (Disable) | Set Privacy Button feature to enable or disable. | 48 |
| 13 | Lock Status LED | 1 byte | 0x00 (Disable) | 0xFF (Enable) | 0x00 (Disable) | Set Lock Status LED feature to enable or disable. | 49 |

| | | | | | | | |
|---|---|---|---|---|---|---|---|
| 16 | Escape Return Mode [5] | 1 byte | 0x00 (Disable) | 0xFF (Enable) [6] | 0x00 (Disable) | Enable or Disable Escape Return Mode | 36 |
| 18 | Door Propped Timer [7] | 1 byte | 0x00 (Disable) [8] | 0xFE (2540 seconds) [8] | 0x00 (Disable) [8] | Adjust the time to receive an alert when the door is propped open. | 66 |
| 19 | DPS Alarms (DoorSense™) [7] | 1 byte | 0x00 (Disable) | 0xFF (Enable) | 0xFF (Enable) | Enable or Disable DPS Alarms | 28 |
| 21 | Eco Mode On/Off [5] | 1 byte | 0x00 (Disable) | 0xFF (Enable) | 0x00 (Disable) | Enable or Disable Eco Mode feature | 34 |
| 28 | Expiring Pin Code Enabled Time | 1 byte | 0x00 (Disable) | 0xFF (127 Hours) | 0x00 (Disable) | Timeout value used to determine time after first entry is triggered. | 68 |

[1] Even though the lock accepts value 0x01 for Auto Relock Time, we limit the lock's minimum to value of 0x03. Therefore, if user tries to set Auto Relock Time to values 0x01 or 0x02, it will always report back value of 0x03.
[2] Only supported by YRC/D226/256/652/622/642, NF-YRC/D622, YRC/D622/642-NN
[3] When Operation Mode feature is set to Passage Mode, this also results in disabling the following configuration parameters 2 (Auto Relock feature). For YRD410/420/430/450, the Passage Mode feature can only be set when user holds the inside button. For YRC/D622/642 & YRC/D622/642-NN, the Passage Mode feature can only be set when Passage User Pin Code is used to unlock the lock.
[4] Only supported by YRC/D216/226/256/652/622/642, NF-YRC/D612/622, YRC/D622/642-NN
[5] Only supported by YRC/D622/642 & YRC/D622/642-NN
[6] When this Escape Return Mode feature is enabled, this also results in disabling the following configuration parameters 2 (Auto Relock feature) and 11 (One Touch Locking feature).
[7] Only supported by YRD410/420/430/450. This requires additional Hardware and calibration within the Yale Access App.
[8] The Door Propped value is represented as seconds X 10. (i.e., a value of 4 would mean a door propped timer of 40 seconds).

## Command Class Application Status, Version 1

This command class has been implemented per the Z-Wave™ Specification.

## Command Class Transport Service, Version 2

This command class has been implemented per the Z-Wave™ Specification.

## Command Class Supervision, Version 1

This command class has been implemented per the Z-Wave™ Specification.

## Command Class Indicator, Version 3*

* This command class requires security.

The indicator feature is set by using Indicator ID 0x50 to identify the node and Property ID 0x02 or 0x03, 0x04 and 0x05.

*Table 9 – Lock UI for Indicator Set Overview*

| Indicator Set | Lock Exterior | Lock Interior |
|---|---|---|
| OFF | Keypad LED is OFF | Inside LED OFF |
| ON | YRC/D226/256/652/622/642, NF-YRC/D622, YRD410/420/430/450, & YRC/D622/642-NN: Numbers 0-9 on Touch Screen Flash<br>YRC/D216 & NF-YRC/D612: All buttons Flash | Inside LED Flashes |

In order to set the Indicator ID 0x50 with Property 0x02, set values to 0x00 for off and 0x01…0x63 or 0xFF for on.

In order to properly set the Indicator ID 0x50 with Properties 0x03, 0x04 and 0x05, we had to map the values to our lock's specific blink rate.

*Table 10 – Minimum Values for Indicator Set Property IDs 0x03, 0x04, & 0x05 to trigger Lock UI*

| Property ID 0x03 (On/Off Periods) Fixed Value | Property ID 0x04 (On/Off Cycles) Minimum Value | Property ID 0x05 (On time within an on/Off period) Fixed Value |
|---|---|---|
| 0x14* | 0x00...0xFF (per Z-Wave™ Spec) | 0x0A* |

**NOTE: If Property IDs 0x03 and 0x05 are set to value other than the above, then the lock will blink at the different number of cycles than what you have set. **

## Command Class Basic, Version 2*

* This command class requires security.

This command class is mapped to Door Lock CC:

*Table 11 – Basic Mapping Overview*

| Basic Command | Door Lock Mapped Command |
|---|---|
| Basic Set (Value) | Door Lock Operation Set (Door Lock Mode) |
| Basic Report (Current Value = 0x00) | Door Lock Operation Report (Door Lock Mode = 0x00) |
| Basic Report (Current Value = 0xFF) | Door Lock Operation Report (Door Lock Mode > 0x00) |

The Basic Get Current Value, Basic Get Duration, and Basic Get Target Value are mapped to Door Lock Operation Get and Basic Set is directly mapped to Door Lock Operation Set where the Duration is returned as is, but the Value and Target Door Lock State Value of the Basic Report use the following mapping:

*Table 12 – Basic Report: Value*

| Value | Level | State | Door Lock State |
|---|---|---|---|
| 0 (0x00) | 0% | Off | Unsecure |
| 1..99 (0x01...0x63) | 1..100% | On | Secure |
| 100..253 (0x64...0xFD) | Reserved | Reserved | |
| 254 (0xFE) | Unknown | Unknown | Unknown |
| 255 (0xFF) | 100% | On | Secure |