



Products

- > Hubs
- > Software
- > Interfaces
- > Lighting
 - > HS-WX300
 - HS-WX300 User Guide**
 - HS-WX300 vs HS-WD200+
 - How To Add HS-WX300+ to Sma..
- > HS-WA100+
- HS-SP100
- > HS-FC200+
- > HS-WD200+
- > HS-WS200+
- HS-WD100+
- WD/WS Manual Reset
- Compatible Wire Gauge
- > Legacy Lighting
- > Sensors
- > Water Valves
- > IP Cameras
- > MyHS
- > Cloud Services
 - Plugin SDK
 - Return Policy
- > Other Docs

Products / ... / HS-WX300

HS-WX300 User Guide

Online manual for the HS-WX300 In-wall Dimmer & Switch



Overview

HS-WX300 is a Z-Wave in-wall light switch that may be configured to operate as either a dimmer switch or an on/off switch. It may be installed with or without a neutral wire and it works with both wired and wireless companion switches in 3-way circuit configurations. This switch has been designed, tested and certified for use in the United States and Canada.

Important

⚠ WARNING RISK OF FIRE | RISK OF ELECTRICAL SHOCK | RISK OF BURNS


DO NOT USE THIS SWITCH TO CONTROL ANYTHING THAT MAY PRESENT A HAZARD WHEN CONTROLLED REMOTELY OR USED IN AN UNATTENDED FASHION. DO NOT USE WITH MEDICAL AND LIFE SUPPORT INSTRUMENTS.

CAUTION:

- To Reduce the Risk of Overheating And Possible Damage To Other Equipment, **Do Not Install To Control A Receptacle, A Motor-Operated Appliance, A Fluorescent Lighting Fixture, Or A Transformer-Supplied Appliance.**
- If used with non-dimming loads, **be sure to configure as a an on-off switch** before powering the load.

Circuit Types

Most lighting loads are powered with line (120 VAC) and neutral wires. The line wire always runs through the wall switch box but the neutral may not be present there. If the neutral wire is present, use the 3-wire method below. If no neutral is present, use the 2-wire method. For 3-way circuits, a neutral is only required at the companion switch location (using HS-WA100+ or standard 3-way switches).

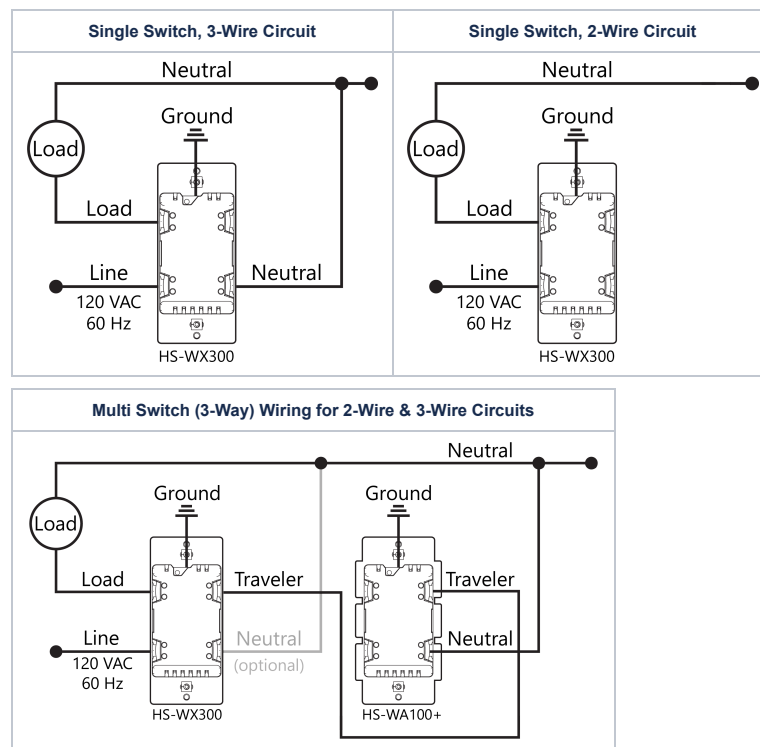

Installation



Products

- › Hubs
- › Software
- › Interfaces
- ▼ Lighting
 - ▼ HS-WX300
 - HS-WX300 User Guide
 - HS-WX300 vs HS-WD200+
 - How To Add HS-WX300+ to Sma..
 - › HS-WA100+
 - HS-SP100
 - › HS-FC200+
 - › HS-WD200+
 - › HS-WS200+
 - HS-WD100+
 - WD/WS Manual Reset
 - Compatible Wire Gauge
- › Legacy Lighting
- › Sensors
- › Water Valves
- › IP Cameras
- › MyHS
- › Cloud Services
 - Plugin SDK
 - Return Policy
- › Other Docs

- Medium Philips Screwdriver
- Wire Cutter & Stripper

Steps

1. Shut off power to the circuit at the circuit breaker or fuse box.
⚠️ VERIFY power is OFF before continuing!
2. Remove existing switch's wall plate and mounting screws. Carefully remove the existing switch from the electrical box but leave the wires connected.
3. There may be up to five wires connected to the existing switch. Make note of these wires and label, if necessary, to ensure correct installation of the HS-WX300. You will need to match these wires with the corresponding screw terminals on the HS-WX300.

Note: LINE, and LOAD wires are required for every installation. If a NEUTRAL wire is present, we recommend using that also for best performance, particularly for dimming loads. Wires are usually color-coded for easy identification. However, colors can deviate from what's shown in the list below, depending upon the original installer. We recommend using a multi-meter or voltage detector to verify which wire is actually connected to power before wiring. In general, the colors follow the convention below.

- LINE (120 VAC) - Black (connected to power)
 - NEUTRAL - White (this wire is often tied to other neutral wires and may require a jumper to connect with the HS-WX300)
 - LOAD - Black (connected to load)
 - GROUND — Green or Bare
 - TRAVELER — Red/Other (only used in 3-way circuits)
4. Disconnect the wires from the existing switch and attach those wires to the HS-WX300 using the screw terminal connectors on the back with the following procedure:
 5. Strip 16 mm (5/8") insulation from each wire*.
 6. With a screw driver, loosen each screw terminal by rotating the screw counter-clockwise a few turns until resistance is felt.
 7. There are two holes on the back of the switch near each screw terminal. Insert the stripped wire into one of these holes and tighten the screw terminal to secure the connection. Connections should be snug. *all wires should be 14 AWG or larger rated at 80°C or higher. Tightening torque should be 12 lbf-in (14kgf-cm). **Use copper wire only.**
 8. Carefully install the wired switch back into the electrical box and reattach the trim plate.

Configuration

① Plugin Version

WX300 works with HS3 and HS4 system using these plugins:

- HS3: Z-Wave Core version 3.0.9.0 (or later)
- HS4: Z-Wave version 4.0.1.0 (or later)

Changing Switch Mode

(Must be done BEFORE Z-Wave inclusion)

HS-WX300 may be configured to operate as an ON-OFF switch or as a DIMMER. By default, it will operate as a dimmer. If you're installing it to control a non-dimming load or wish to only provide ON-OFF operation, be sure to configure it to operate as an ON-OFF switch. To change the switch mode, follow these steps:

1. Press & hold the small button located on the metal yoke next to the column of LEDs, **OR** if the trim plate is already installed, in rapid succession, tap the top paddle 3 times, then press & hold the top paddle for 3 seconds (tap-tap-tap-press & hold)
2. Observe the behavior of the LEDs
 - If all LEDs blink green 3 times, HS-WX300 is configured to function as a dimmer
 - If the bottom LED blinks blue 3 times, HS-WX300 is configured to function as an on-off switch

Changing Wire Mode

HS-WX300 may be installed with a neutral wire (3-wire mode) or without a neutral wire (2-wire mode). Selecting the correct wire mode will yield the best results, especially if the switch is configured as a dimmer. By default, 3-wire mode is enabled. To change the wire mode (at the switch):

1. Turn the power off
2. In rapid succession, tap the **top** paddle 2 times, then press & hold the top paddle for 3 seconds (tap-tap-press & hold)
3. Observe the behavior of the LEDs
 - If the bottom 3 LEDs flash white 3 times, HS-WX300 is configured for 3-wire mode
 - If the bottom 2 LEDs flash white 2 times, HS-WX300 is configured for 2-wire mode

Note: Wire mode may also be changed by the hub using Z-Wave parameter 32. See the Z-Wave Parameters section at the end of this user guide.

Z-Wave Inclusion or Exclusion

Follow this 2-step procedure to add (or remove) your new HomeSeer switch to (or from) your Z-Wave network:

1. Put your Z-Wave controller into inclusion (or exclusion) mode. Consult your controller's manual if you're unsure how to do this.
2. In rapid succession, tap the **bottom** paddle 2 times, then press & hold the bottom paddle for 3 seconds (tap-tap-press & hold). This will initiate the inclusion (or exclusion) process. **Note:** The switch will default to dimmer mode after Z-Wave exclusion.

Factory Reset





Products

- > Hubs
- > Software
- > Interfaces
- ▼ Lighting
 - ▼ HS-WX300
 - HS-WX300 User Guide**
 - HS-WX300 vs HS-WD200+
 - How To Add HS-WX300+ to Sma..
 - > HS-WA100+
 - HS-SP100
 - > HS-FC200+
 - > HS-WD200+
 - > HS-WS200+
 - HS-WD100+
 - WD/WS Manual Reset
 - Compatible Wire Gauge
 - > Legacy Lighting
- > Sensors
- > Water Valves
- > IP Cameras
- > MyHS
- > Cloud Services
 - Plugin SDK
 - Return Policy
- > Other Docs

was successful. If not, repeat this procedure.

Note: As this must be done very quickly, we recommend using 2 fingers for this operation; one on each paddle!

Note: The switch will default to 3-wire mode and dimmer mode after factory reset.

Association

This product supports Group 1 and Group 2 Associations with up to five Z-Wave devices per group. Group 1 supports Lifeline Communication, Group 2 supports Basic Set, refer to your controller manual for instructions on setting up these features.

Operation

Your new HomeSeer switch may be operated locally (by pressing the paddle) or remotely using a Z-Wave compatible hub or system

Local Control

- Press (tap) the top of the paddle to power the load.
- Press (tap) the bottom of the paddle to cut power to the load.
- If configured as a dimmer, press and hold the top or bottom of the paddle increase or decrease the dim level.

Remote Control

On / Off / Dim control is available remotely using wireless Z-Wave commands. Consult your controller manual for details.

HomeSeer Compatibility

Your new HomeSeer switch is Z-Wave certified and is ready to be used with a wide variety of home automation hubs and controllers. All features are fully supported by HomeSeer systems but some **Advanced Features** (see below) may not be fully supported by other controllers. If you're using another brand of controller, be sure to check with that company to determine compatibility.

Advanced Features

Your new HomeSeer switch includes advanced features that may be accessed with HomeSeer and other systems.

Multi-tap scene control or event triggering

Tapping the top or bottom of the paddle 1, 2, 3, 4 or 5 times in rapid succession will broadcast Z-Wave central scene commands to the hub. These commands may be used to trigger automations (like HomeSeer events).

RGB LED Indicators

The color of all LED indicators may be controlled with Z-Wave parameter commands from the hub. This may be done manually or via automations, if supported by the hub. HomeSeer hubs are designed to send these parameter commands with event actions.

- **Normal mode:** LED indicators glow to reflect the on/off/dim status of the connected load using a palette of 7 possible colors (red, green, blue, cyan, magenta, yellow, white).
- **Status mode:** Individual LEDs can be controlled to reflect the status of nearly anything in the home. For example, one LED can be programmed to glow yellow when the garage door is open. Another LED can blink red when motion is sensed in the driveway. The possibilities are endless.
- **Switching between normal mode and status mode:** HS-WX300 switches operate in normal mode by default unless or until a status command is received. When that happens, normal mode is suspended and the switch goes into status mode. It will stay in status mode until all status LEDs are turned off. At that point, the switch will revert to normal mode.
Note: If a switch is operating in status mode, manually dimming it will cause the LEDs to operate temporarily in normal mode. After the dimming operation is complete, the switch will revert to status mode.

Toggle Mode

When Toggle Mode is enabled, WX300 functions like a single push-button switch. The load will be toggled on and off, regardless of which part of the paddle you press. This is especially useful for switches that are installed into dark locations or where users may have accessibility issues. This feature is set using Z-Wave parameter commands (see table below for details).

Smart Bulb Mode

This feature is designed to disable load control when the paddle is pressed. Instead, power is always supplied to the load, and paddle presses are only used to send Z-Wave commands to the controller. This feature is especially useful for circuits that are powering smart bulbs. This feature is set using Z-Wave parameter commands (see table below for details).

Default Dim Level

This feature applies to WX300s that are configured to operate as dimmers. By default, WX300 is designed to turn on to the previous dim level when powered on from an off state. This feature allows you to override that behavior and turn on to an absolute dim level instead. This feature is set using Z-Wave parameter commands (see table below for details).

Non-HomeSeer Compatibility

The special features of this switch are supported using a number of different Z-Wave technologies. HomeSeer systems are designed to support these technologies and will provide the most seamless operation of these features. However, other systems may also provide satisfactory results depending on the level of support they provide for these same technologies. If you're using a non-HomeSeer system, use the information below and consult with your system manufacturer to determine the level of compatibility.





Products

- › Hubs
- › Software
- › Interfaces
- › Lighting
 - › HS-WX300
 - HS-WX300 User Guide**
 - HS-WX300 vs HS-WD200+
 - How To Add HS-WX300+ to Sma..
 - › HS-WA100+
 - HS-SP100
 - › HS-FC200+
 - › HS-WD200+
 - › HS-WS200+
 - HS-WD100+
 - WD/WS Manual Reset
 - Compatible Wire Gauge
 - › Legacy Lighting
- › Sensors
- › Water Valves
- › IP Cameras
- › MyHS
- › Cloud Services
 - Plugin SDK
 - Return Policy
- › Other Docs



interrogation process for inclusion, this feature should work. However, if the system employs an inclusion process based on the Z-Wave product ID, then specific product support would need to be implemented.

RGB LED Indicators

This feature is supported using Z-Wave parameter commands. Most Z-Wave certified systems provide a method for issuing parameter commands to individual products. HomeSeer systems simplify the use of this feature by providing event actions to send parameter commands. A complete list of parameters may be found on the next page.

Instant Status

This feature is supported using a Z-Wave SWITCH MULTILEVEL REPORT (dimmer mode) and SWITCH BINARY REPORT (on-off switch mode) and the CENTRAL SCENE command class. All Z-Wave certified systems should support the SWITCH MULTILEVEL REPORT feature.

Attention SmartThings users

A special **device handler** is required to enable your hub to use the advanced features of this switch. Information about installing this may be found at: [SmartThings](#)

Z-Wave SmartStart

SmartStart enabled products can be added into a Z-Wave network by scanning the Z-Wave QR Code* with a controller providing SmartStart inclusion. No further action is required and the SmartStart product will be added automatically within 10 minutes of being switched on in the network vicinity.

***QR Code is located on the HS-WX300 metal yoke under the switch paddle.**

Interoperability

This product can be operated in any Z-Wave network with other Z-Wave certified devices from other manufacturers. All mains operated nodes within the network will act as repeaters regardless of vendor to increase reliability of the network

Z-Wave Parameters

Use the parameters below to adjust HS-WX300 configuration settings

Parameter	Description	Bytes	Value	Default	Dimmer Mode	Switch Mode	Firmware
3	Sets bottom LED operation (in normal mode)	1	0 = Bottom LED ON if load is OFF 1 = Bottom LED OFF if load is OFF	1	Y	Y	v1.12
4	Sets paddle's load orientation	1	0 = Top of Paddle turns load ON 1 = Bottom of Paddle turns load ON	0	Y	Y	v1.12
5	Sets the lowest dimming threshold	1	Possible values: 1-14 3-wire mode (1=16%, 14=25%) 2-wire mode (1=25%, 14=30%)	1	Y	N	v1.12
6	Enables/Disables Central Scene and multiple tap functions	1	0 = Central Scene Enabled, controls load with delay. Enables Multi-tap and press and hold 1 = Central Scene Disabled, controls load instantly. Disables multi-tap, central scene, press and hold	0	Y	Y	v1.12
11	Set dimmer Ramp rate for remote control	1	Possible values: 0-90 0=No delay (instant ON), 1=1 second	3	Y	N	v1.12
12	Set dimmer Ramp rate for local control	1	Possible values: 0-90 0=No delay (instant ON), 1=1 second	3	Y	N	v1.12
13	Sets the display mode of the LEDs	1	0=Normal mode (LEDs show load status) 1=Status mode (custom LED status)	0	Y	Y	v1.12
14	Sets the Normal display mode LED color	1	Possible values: 0-6 0=White, 1=Red, 2=Green, 3=Blue, 4=Magenta, 5=Yellow, 6=Cyan	0	Y	Y	v1.12
21	Sets the Status mode LED 1 (bottom) color	1					
22	Sets the Status mode	1					



Products

- > Hubs
- > Software
- > Interfaces
- > Lighting
 - > HS-WX300
 - HS-WX300 User Guide**
 - HS-WX300 vs HS-WD200+
 - How To Add HS-WX300+ to Sma..
 - > HS-WA100+
 - HS-SP100
 - > HS-FC200+
 - > HS-WD200+
 - > HS-WS200+
 - HS-WD100+
 - WD/WS Manual Reset
 - Compatible Wire Gauge
- > Legacy Lighting
- > Sensors
- > Water Valves
- > IP Cameras
- > MyHS
- > Cloud Services
 - Plugin SDK
 - Return Policy
- > Other Docs

	LED 3 color		7=White				
24	Sets the Status mode LED 4 color	1					
25	Sets the Status mode LED 5 color	1					
26	Sets the Status mode LED 6 color	1					
27	Sets the Status mode LED 7 (top) color	1					
30	Sets the dimmer Blink frequency for All LEDs in Status mode	1	Possible values: 0, 1-255 0=No blink, 1=100ms ON then 100ms OFF	5	Y	Y	v1.12
31	Sets LED(s) 1-7 to Blink in Status mode	1	Bitmask defines specific LEDs to enable for blinking: Note: this decimal value is derived from a hex code calculation based on the following: Bit 0 = led 1, Bit 1 = led 2, Bit 2 = led 3, Bit 3 = led 4, Bit 4 = led 5, Bit 5 = led 6, Bit 6 = led 7 IE: value of 1 = first LED, 64 = led 7	0	Y	Y	v1.12
32	Sets the Wire mode / no neutral mod of the switch	1	0 = 3 wire mode (Neutral, Line, & Load) 1 = 2 wire mode (Line & Load)	0	Y	Y	v1.12
33	Sets Startup Flash Behavior	1	0 = LEDs do not flash on startup 1 = LEDs flash on startup to indicate switch or dimmer operation	1	Y	Y	v1.13
34	Sets relative LED indicator brightness	1	Possible values: 0-6 0=Lowest intensity 6=Highest intensity	3	Y	Y	v1.13
35	Sets Paddle Behavior for Switch Mode (Toggle Feature)	1	0 = Top paddle press turns load ON. Bottom paddle press turns load OFF. 1 - Either paddle press turns load ON if OFF and OFF if ON.	0	N	Y	v1.13
36	Sets Default Dim Value when turned ON via paddle press	1	Possible values: 0-99 0 = LAST dim level when switch was last turned off 1-99 = dim level	0	Y	N	v1.13
37	Sets Load Control via Paddle (Smart Bulb Feature)	1	0 = Load is controlled with paddle 1 = Load is not controlled with paddle	0	Y	Y	v1.13

Specifications

Power	Requirements	120VAC / 60 Hz
Max Load	Incandescent Dimmable CFL/LED	600 watts 300 watts
Min Load	All types	24 watts (0.2A)
Incandescent De-rating	Double-gang Box	500 watts
	Triple-gang Box	400 watts
Temperatures	Operating Storage	0°C → 40°C -20°C → 60°C
Z-Wave	Frequency	908.4/916 MHz (US/CAN)



Products

- › Hubs
- › Software
- › Interfaces
- › Lighting
 - › HS-WX300

HS-WX300 User Guide

HS-WX300 vs HS-WD200+

How To Add HS-WX300+ to Sma..

- › HS-WA100+
 - HS-SP100
- › HS-FC200+
- › HS-WD200+
- › HS-WS200+
 - HS-WD100+
 - WD/WS Manual Reset
 - Compatible Wire Gauge
- › Legacy Lighting
- › Sensors
- › Water Valves
- › IP Cameras
- › MyHS
- › Cloud Services
 - Plugin SDK
 - Return Policy
- › Other Docs

		(45.5mm x 105mm) (W x H)
	Plastic Housing	1.72" x 2.68" x 1.18" (43.7mm x 68mm x 30mm) (W x H x D)
Certifications	UL (US, Canada), FCC/IC, Z-Wave Plus	
UL Specifications	For indoor use only Operating ambient temperature 0-40°C Method of mounting included: Independently mounted (Vertical position only) Operating control, Type 1.B action Pollution Degree 2 Rated Impulse Voltage 2500 V Software Class A	

Supported Z-Wave Command Classes

This device supports the Indicator Command Class, version 3 and supports the Indicator ID 0x50 (Identify) and Properties ID 0x03, 0x04 and 0x05.

SWITCH_MULTILEVEL (Dimmer Mode)

Command Class	Version	Security
COMMAND_CLASS_ZWAVEPLUS_INFO	V2	
COMMAND_CLASS_ASSOCIATION	V2	S2
COMMAND_CLASS_ASSOCIATION_GRP_INFO	V3	S2
COMMAND_CLASS_DEVICE_RESET_LOCALLY	V1	S2
COMMAND_CLASS_FIRMWARE_UPDATE_MD	V5	S2
COMMAND_CLASS_INDICATOR	V3	S2
COMMAND_CLASS_MANUFACTURER_SPECIFIC	V2	S2
COMMAND_CLASS_MULTI_CHANNEL_ASSOCIATION	V3	S2
COMMAND_CLASS_POWERLEVEL	V1	S2
COMMAND_CLASS_SECURITY_2	V1	
COMMAND_CLASS_SUPERVISION	V1	S2
COMMAND_CLASS_TRANSPORT_SERVICE	V2	
COMMAND_CLASS_VERSION	V3	S2
COMMAND_CLASS_SWITCH_MULTILEVEL	V4	S2
COMMAND_CLASS_CONFIGURATION	V4	S2
COMMAND_CLASS_CENTRAL_SCENE	V3	S2
COMMAND_CLASS_BASIC	V2	S2

SWITCH_BINARY (Switch Mode)

Command Class	Version	Security
COMMAND_CLASS_ZWAVEPLUS_INFO	V2	
COMMAND_CLASS_ASSOCIATION	V2	S2
COMMAND_CLASS_ASSOCIATION_GRP_INFO	V3	S2
COMMAND_CLASS_DEVICE_RESET_LOCALLY	V1	S2
COMMAND_CLASS_FIRMWARE_UPDATE_MD	V5	S2
COMMAND_CLASS_INDICATOR	V3	S2
COMMAND_CLASS_MANUFACTURER_SPECIFIC	V2	S2
COMMAND_CLASS_MULTI_CHANNEL_ASSOCIATION	V3	S2
COMMAND_CLASS_POWERLEVEL	V1	S2
COMMAND_CLASS_SECURITY_2	V1	
COMMAND_CLASS_SUPERVISION	V1	S2




Products

- › Hubs
- › Software
- › Interfaces
- › Lighting
 - ▼ HS-WX300
 - HS-WX300 User Guide**
 - HS-WX300 vs HS-WD200+
 - How To Add HS-WX300+ to Sma..
- › HS-WA100+
- › HS-SP100
- › HS-FC200+
- › HS-WD200+
- › HS-WS200+
- › HS-WD100+
- › WD/WS Manual Reset
- › Compatible Wire Gauge
- › Legacy Lighting
- › Sensors
- › Water Valves
- › IP Cameras
- › MyHS
- › Cloud Services
 - Plugin SDK
 - Return Policy
- › Other Docs

COMMAND_CLASS_SWITCH_BINARY	V2	S2
COMMAND_CLASS_CONFIGURATION	V4	S2
COMMAND_CLASS_CENTRAL_SCENE	V3	S2
COMMAND_CLASS_BASIC	V2	S2

Physical Dimensions

HS-WX300 In Wall Dimmer Design

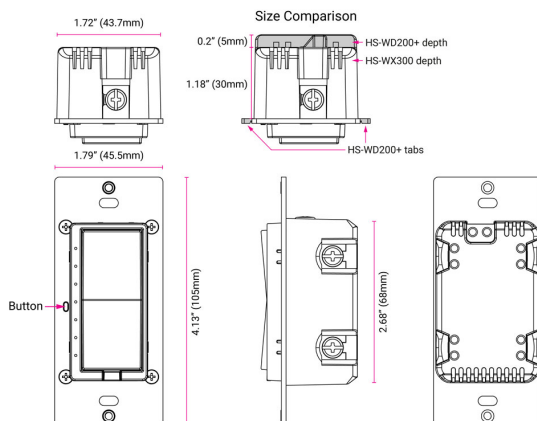

Warranty

HomeSeer warrants to the original purchaser that this product, for the warranty period, will be free from material defects and workmanship. This warranty is subject to proper installation and operation of the product. HomeSeer's sole obligation, under this warranty, is to repair, replace or correct any defect that was present at the time of delivery. This warranty does not extend to consequential or incidental damage to other products that may be used with this product. Warranty claims must be submitted in writing directly to HomeSeer at [HomeSeer.com](https://www.homeseer.com). Warranty period: limited 2 years from date of purchase

FCC statements:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The Caution: The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and any part of your body."

IC statements

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) L'appareil ne doit pas produire de brouillage;
- (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This equipment complies with ICSED RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and any part of your body.



Products

- > Hubs
- > Software
- > Interfaces
- ▼ Lighting
 - ▼ HS-WX300
 - HS-WX300 User Guide**
 - HS-WX300 vs HS-WD200+
 - How To Add HS-WX300+ to Sma..
- > HS-WA100+
- HS-SP100
- > HS-FC200+
- > HS-WD200+
- > HS-WS200+
- HS-WD100+
- WD/WS Manual Reset
- Compatible Wire Gauge
- > Legacy Lighting
- > Sensors
- > Water Valves
- > IP Cameras
- > MyHS
- > Cloud Services
 - Plugin SDK
 - Return Policy
- > Other Docs

Supplier's Declaration of Conformity

47 CFR 2.1077 Compliance Information
Responsible Party – US Contact Information
10 Commerce Park North, Unit 10
Bedford, NH 03110 United States
Model: WD700
<https://homeseer.com/support-home>

This product employs or practices certain features and/or methods of the following U.S. Patents: U.S. Patent Nos.6,891,838, 6,914,893 and 7,103,511.

- [Overview](#)
- [Important](#)
- [Circuit Types](#)
- [Installation](#)
 - [Tools required](#)
 - [Steps](#)
- [Configuration](#)
 - [Changing Switch Mode](#)
 - [Changing Wire Mode](#)
 - [Z-Wave Inclusion or Exclusion](#)
 - [Factory Reset](#)
 - [Association](#)
- [Operation](#)
 - [Local Control](#)
 - [Remote Control](#)
- [HomeSeer Compatibility](#)
 - [Advanced Features](#)
 - [Multi-tap scene control or event triggering](#)
 - [RGB LED Indicators](#)
 - [Toggle Mode](#)
 - [Smart Bulb Mode](#)
 - [Default Dim Level](#)
- [Non-HomeSeer Compatibility](#)
 - [Multi-tap scene control or event triggering](#)
 - [RGB LED Indicators](#)
 - [Instant Status](#)
 - [Attention SmartThings users](#)
- [Z-Wave SmartStart](#)
- [Interoperability](#)
- [Z-Wave Parameters](#)
- [Specifications](#)
- [Supported Z-Wave Command Classes](#)
- [Physical Dimensions](#)
- [Warranty](#)
- [FCC statements:](#)
- [IC statements](#)
- [Supplier's Declaration of Conformity](#)

< [HS-WX300](#)

[HS-WX300 vs HS-WD200+](#) >

