

# Smart Bolt Armor MDL

## Advanced Information Product Manual



# Table of Content

<b>1</b>	<b>OVERVIEW .....</b>	<b>1</b>
<b>2</b>	<b>INTERFACES.....</b>	<b>2</b>
<b>3</b>	<b>SPECIFICATIONS.....</b>	<b>3</b>
3.1	Structural Characteristics.....	3
3.2	Hardware Characteristics .....	3
3.3	Software Characteristics .....	3
<b>4</b>	<b>PRODUCT QUICK START .....</b>	<b>5</b>
4.1	Z-Wave DSK Location.....	5
4.2	How to add the product into Z-Wave network.....	5
4.3	How to remove the product from Z-Wave network.....	5
4.4	How to factory reset.....	5
4.5	How to add the product into Z-Wave Long Range network.....	5
<b>5</b>	<b>SOFTWARE FUNCTION DEFINITION.....</b>	<b>7</b>
5.1	Supported Command Classes.....	7
5.2	Basic Command Class mapping.....	8
5.3	ZWAVEPLUS_INFO.....	8
5.4	Manufacturer Specific .....	8
5.5	Version.....	8
5.6	Association Group Info .....	9
5.7	Notification .....	10
5.8	Door Lock.....	11
5.9	Door Lock Logging.....	12
5.10	User Code.....	12
5.11	Schedule.....	13
5.12	Battery.....	14
5.13	Indicator .....	14
5.14	Time.....	14
5.15	Time Parameters.....	14

5.16 Configuration ..... 14

# 1 OVERVIEW

Please read this Engineering Specification carefully for correct and effective use.

Failure to follow the recommendations set forth by Rently Limited may be dangerous or cause a violation of the law. The manufacturer, importer, distributor, and/or reseller will not be held responsible for any loss or damage resulting from not following any instruction in this guide or in other materials.


The product is intended for indoor use in dry locations only. Do not use in damp, moist, and /or wet locations.

Z-Wave® is the international wireless protocol for communication in the Smart Home.

This device is a security enabled Z-Wave Plus® v2 product that is able to use encrypted Z-Wave Plus v2 messages to communicate to other security S2 enabled Z-Wave Plus v2 products. This device must be used in conjunction with a S2 security enabled Z-Wave controller in order to fully utilize all implemented functions. Otherwise it will automatically turn into a lower level of security to maintain backward compatibility. This product can be operated in any Z-Wave network with other Z-Wave certified devices from other manufacturers. All mains operated nodes within the network will act as repeaters regardless of vendor to increase reliability of the network.

SmartStart enabled products can be added into a Z-Wave network by scanning the Z-Wave QR Code present on the product with a controller providing SmartStart inclusion. No further action is required and the SmartStart product will be added automatically within 10 minutes of being switched on in the network vicinity.

## 2 INTERFACES

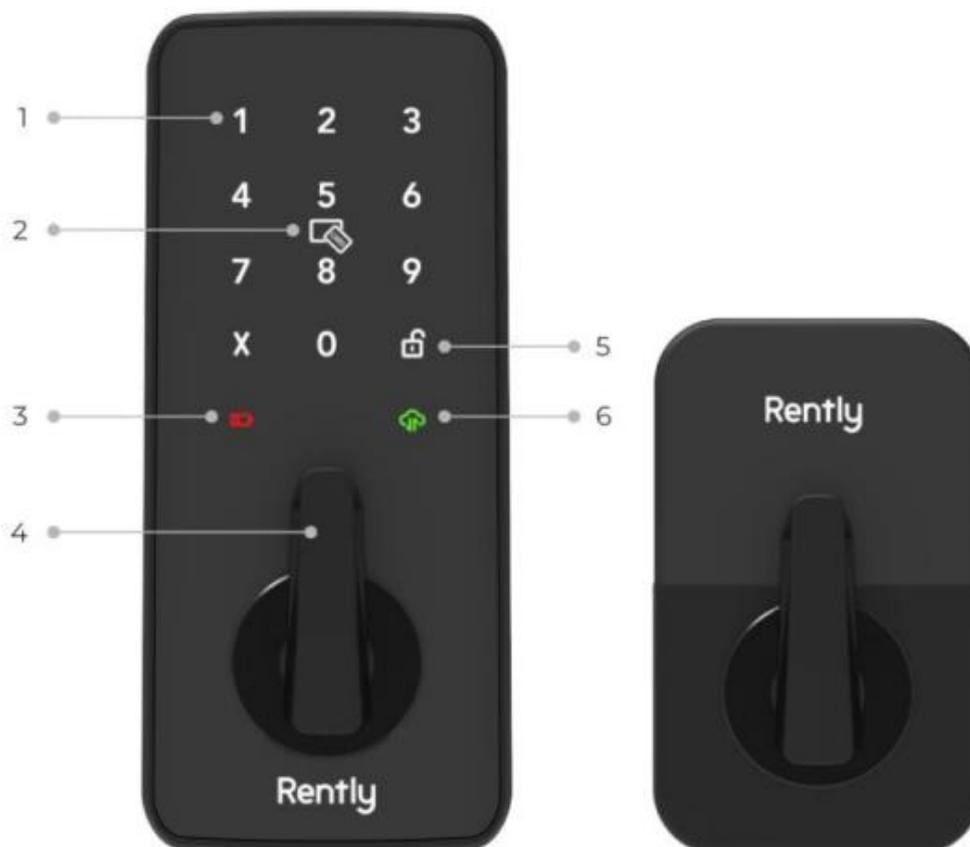

- 1. Number buttons**  
Used to enter User Codes, touch with figure to wake up.
- 2. Fob reader**  
Swipe the Fob card close to this icon.
- 3. Low Battery indicator**  
This indicator will turn on when battery is low.
- 4. Knob**  
Lock and unlock from the interior.
- 5. Unlock button**  
Used for unlocking the door.
- 6. Z-Wave® connection indicator**  
Not added to Z-Wave® network: Red  
Added to Z-Wave® network: Green

### 3 SPECIFICATIONS

#### 3.1 Structural Characteristics

Parameter	Value
Product Identifier	LOCK500
Color	Black
Usage	For indoor use.
Operating Temperature	-35-66°C
Relative Humidity	20-85%

#### 3.2 Hardware Characteristics

Parameter	Value
Z-Wave Module	EFR32ZG23A010F512GM40
Z-Wave TX Power	Max: 14dBm
Z-Wave Antenna Distance	40m (Indoor) /100m (Outdoor)
Indicator Light Color	RED/GREEN
Battery Info	AA alkaline battery x4
Working Current	Z-Wave Module: 5mA(Wake Up), 11mA (Send message) Door Lock body: 25mA (Wake Up), 83mA (operate door lock)
Standby Current	Z-Wave Module: 30uA Door Lock body: 110uA

#### 3.3 Software Characteristics

Parameter	Value
Wireless Technology	Z-Wave
Certification Type	Z-Wave Plus v2
Z-Wave SDK Version	7.18.8
Z-Wave Library Type	Enhanced 232 Slave
Z-Wave Role Type	ZWAVEPLUS_INFO_REPORT_ROLE_TYPE_SLAVE_SLEEPING_LISTENING (0x07)
Generic Device Type	GENERIC_TYPE_ENTRY_CONTROL (0x40)
Specific Device Type	SPECIFIC_TYPE_DOOR_LOCK (0x01)
Security Class	Non-Security, S0, S2-ACCESS
SmartStart	Support. After powering on, SmartStart is auto active if it' s out of the

	Z-Wave network.
Over The Air (OTA)	Support. Firmware can be updated via RF.
Multichannel Device	No
Association	Support. Refer to Section 5.6 Association Group Info.
Factory Reset	Support. Refer to Section 4.4 How to factory reset.
Power-down Memory	Support. All command settings will stay unchanged even power down.
Timed battery report	Support. Refer to Configuration Parameter 2.
Low battery warning	Support.
Door State Report	Support. When door lock mode changed, send out notification via Group 1.
User code Report	Support. When user code changed, send out notification via Group 1.

## 4 PRODUCT QUICK START

### 4.1 Z-Wave DSK Location

You can find the QR code on the back of your door lock.

You may also find the QR Code and DSK on individual package of each product.

Please do not remove or damage them.

### 4.2 How to add the product into Z-Wave network

1. Download and install Rently Smart Home App by scan the QR code below:



2. Login Rently Smart Home App, Follow the instructions for your Z-Wave controller to set the controller to Inclusion mode.
3. Follow the in-app instructions to Inclusion (Add) the Smart Bolt Elite to the Z-Wave® network.

### 4.3 How to remove the product from Z-Wave network

1. Login Rently Smart Home App, Follow the instructions for your Z-Wave controller to set the controller to Exclusion mode.
2. Go to **Settings** of the Smart Bolt Elite on the App, follow the in-app instructions to do Exclusion (Remove).

### 4.4 How to factory reset

Login Rently Smart Home App, Go to **Settings** of the Smart Bolt Elite on the App, follow the in-app instructions to do Reset.


If reset is successful, the lock will reset itself to factory default by sending a "Device Reset Locally Notification" to gateway.

Note: Please use this procedure only when the network primary controller is missing or otherwise inoperable.

### 4.5 How to add the product into Z-Wave Long Range network

Z-Wave Long Range device can only support be included via SmartStart.

Extract the DSK from end device and paste it into the DSK Value in PC Controller, make sure the 'Long Range' option is ticked.

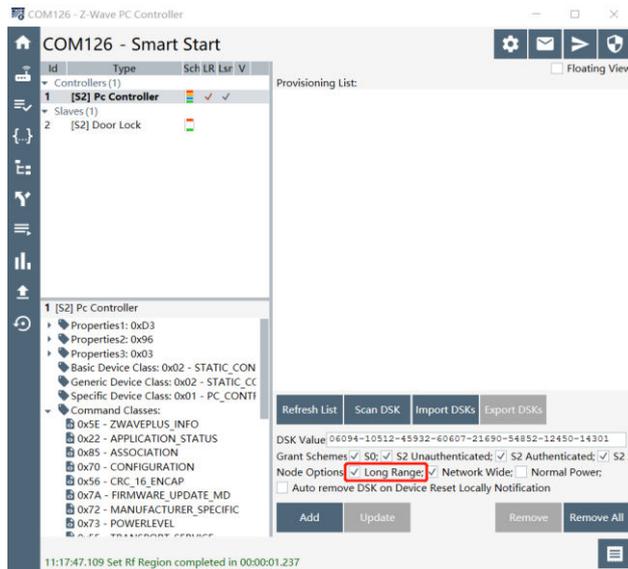

In the scanning process when using US\_LR frequency, the end device will switch between 2 PHY setups, the classic US PHY and the LR PHY with both LR channels active. When the inclusion of end device starts, it will settle on using the PHY that was used by the controller for inclusion. In other words, during learn mode, a end node that support LR will send SmartStart Prime on both classic Z-Wave and Z-Wave LR PHY, both request are send up to the host on the controller and it is the host's responsibility to determine which PHY is used for inclusion.

The controller doesn't do channel scanning the same way as in end device. The controller will scan 4 channels, including 3 classic Z-Wave channels 9.6/40/100 kbps and 1 LR channel, using US\_LR frequency will scan at 912 MHz while using US\_LR\_BACKUP will scan at 920 MHz during startup. The active LR channel can be switch at runtime.

## 5 SOFTWARE FUNCTION DEFINITION

### 5.1 Supported Command Classes

Command Class	Version	Not added	Non-secure added	Securely 0 added		Securely 2 added	
				Non-secure CC	Secure CC	Non-secure CC	Secure CC
ZWAVEPLUS_INFO	2	Support	Support	Support		Support	
ASSOCIATION	2				Support		Support
ASSOCIATION_GRP_INFO	3				Support		Support
MULTICHANNEL ASSOCIATION	3				Support		Support
NOTIFICATION	8				Support		Support
DOOR LOCK	4				Support		Support
USER CODE	2				Support		Support
SCHEDULE	4				Support		Support
DOOR LOCK LOGGING	1				Support		Support
CONFIGURATION	4				Support		Support
APPLICATION STATUS	1	Support	Support	Support		Support	
TIME	1	Support	Support	Support		Support	
TIME PARAMETERS	1				Support		Support
VERSION	3				Support		Support
MANUFACTURER_SPECIFIC	2				Support		Support
DEVICE_RESET_LOCALLY	1				Support		Support
POWERLEVEL	1				Support		Support
INDICATOR	3				Support		Support
BATTERY	1				Support		Support
SECURITY	1	Support	Support	Support		Support	
SECURITY_2	1	Support	Support	Support		Support	
TRANSPORT_SERVICE	2	Support	Support	Support		Support	
SUPERVISION	1	Support	Support	Support		Support	
FIRMWARE_UPDATE_MD	5				Support		Support

## 5.2 Basic Command Class mapping

Basic Command maps to Door Lock Command Class, as shown below.

Command	Value	Mapped	Value	Function
Basic Set	0x00	Door Lock Operation Set	Door Unsecured	Open the door
	0xFF		Door Secured	Close the door
Basic Report	0x00	Door Lock Operation Report	Door Unsecured	The door is opened
	0xFF		Door Secured	The door is closed
Basic Get		Door Lock Operation Get		

## 5.3 ZWAVEPLUS\_INFO

The Command is used to differentiate between Z-Wave Plus v2, Z-Wave for IP and Z-Wave devices. This command provides additional information about the Z-Wave Plus v2 device in question.

Parameter	Value
Z-Wave Plus Version	2
Role Type	7 (ZWAVEPLUS_INFO_REPORT_ROLE_TYPE_SLAVE_SLEEPING_LISTENING) (APPLICATION_FREQ_LISTENING_MODE_1000ms)
Node Type	0 (ZWAVEPLUS_INFO_REPORT_NODE_TYPE_ZWAVEPLUS_NODE)
Installer Icon Type	0x0300 (ICON_TYPE_GENERIC_DOOR_LOCK_KEYPAD)
User Icon Type	0x0300 (ICON_TYPE_GENERIC_DOOR_LOCK_KEYPAD)

## 5.4 Manufacturer Specific

The Command is used to advertise manufacturer specific information.

Parameter	Value
Manufacturer ID 1	0x04
Manufacturer ID 2	0x39
Product Type ID 1	0x00
Product Type ID 2	0x04
Product ID 1	0x03
Product ID 2	0x21

## 5.5 Version

The Command may be used to obtain the Z-Wave library type, the Z-Wave protocol version used by the application, the individual command class versions used by the application.

Parameter	Value
Z-Wave Protocol Library Type	0x03
Z-Wave Protocol Version	0x07
Z-Wave Protocol Sub Version	0x12
Firmware 0 Version	Z-Wave Chip Firmware Version Major
Firmware 0 Sub Version	Z-Wave Chip Firmware Version Minor
Hardware Version	0x01
Number of firmware targets	0x01
Firmware 1 Version	Door Lock Firmware Version Major
Firmware 1 Sub Version	Door Lock Firmware Version Minor

## 5.6 Association Group Info

The Command is used to manage associations to Node ID destinations.

ID	Name	Count	Profile	Function
1	Lifeline	5	General: Lifeline (0x0001)	<p><b>Battery Report(0x8003):</b> Issued periodically to report the current battery level; Issued when battery becomes low.</p> <p><b>Device Reset Locally Notification (0x5A01) :</b> Issued when Factory Reset is performed.</p> <p><b>Door Lock Operation Report(0x6203):</b> Issued when door lock mode changed</p> <p><b>Door Lock Configuration Report(0x6206):</b> Issued when door lock configuration changed</p> <p><b>Indicator Report(0x8703):</b> Issued when indicator set received</p> <p><b>Notification Report(0x7105):</b> Issued when door lock event changed</p> <p><b>User Code Report(0x6303):</b> Issued when user code changed</p> <p><b>Master Code Report(0x6310)</b> Issued when master code changed</p> <p><b>User Code Keypad Mode Report(0x630A)</b> Issued when keypad mode changed</p>
2	On/Off control	5	General: Control (0x2000)	<p><b>Basic Set (0x2001) :</b> Issued when door lock mode changed (value is determined by parameter 0x03)</p>

## 5.7 Notification

The Command is used to advertise events or states, such.

Notification Type = Access Control (0x06), according to Table 4-7-1

Notification Type = Power Management (0x08), according to Table 4-7-2

Notification Type = System (0x09), according to Table 4-7-3

Table 4-7-1:

Description	Event	Alarm type	Alarm Level	Parameters
Manual lock operation (mechanical key or thumb turn)	0x01	0x15	0x01	
Manual unlock operation ( mechanical key or thumb turn)	0x02	0x16	0x00	
Manual unlock operation (IC card)			0xFE	IC Card ID (1 Byte) + IC Card No (4 Byte)
RF lock operation (BLE)	0x03	0x18	0x01	0x01
RF lock operation (Z-Wave)				0x02
RF unlock operation (BLE)	0x04	0x19	0x01	0x01
RF unlock operation (Z-Wave)				0x02
Keypad lock operation	0x05	0x15	0x00	
Keypad unlock operation	0x06	0x13	User Id	User Code
			0xFB	Master Code
			0xFF	Auto Code
Auto lock locked operation (Timer)	0x09	0x1B	0x01	0x01
Auto lock locked operation (Contact sensor)				0x02
Lock jammed (Auto secured bolt jammed not fully extended)	0x0B	0x09	0x00	
Lock jammed (Secured keypad bolt jammed not fully extended)			0x01	
Lock jammed (Secured RF bolt jammed not fully extended)			0x02	
Lock jammed (Secured IC card bolt jammed not fully extended)			0x03	
All user codes deleted	0x0C	0x21	0xFF	
Single user code deleted	0x0D	0x21	User Id	User Code Report
New user code added	0x0E	0x70	User Id	User Code Report

(add and modify)				
New user code not added due to duplicate code	0x0F	0x71	User Id	User Code Report
			0xFE	IC Card Report
New program code entered : unique code for lock configuration	0x12	0x70	0x00	Master Code Report
Manually enter user access code exceeds code limit	0x13	0x00	0x00	

Table 4-7-2:

Description	Event	Alarm type	Alarm Level	Parameters
Replace battery soon (20%)	0x0A	0x00	0x00	
Replace battery now (5%)	0x0B	0x00	0x00	

Table 4-7-3:

Description	Event	Alarm type	Alarm Level	Parameters
System hardware failure	0x01	0x00	0x00	

## 5.8 Door Lock

The Command is used to operate and configure a door lock device.

1. Support Door Lock Mode: Door Secured(0xFF), Door Unsecured(0x00)
2. Door Lock Capabilities Report Command:
  - 1) Supported Operation type Bit Mask Length = 0x01
  - 2) Supported Operation Type Bit Mask 1 = 0x02 (Constant operation)
  - 3) Supported Door Lock Mode List Length = 0x02
  - 4) Supported Door Lock Mode 1 = 0x00 (Door Unsecured)
  - 5) Supported Door Lock Mode 2 = 0xFF (Door Secured)
  - 6) Supported Outside Handle Modes Bitmask = 0x00
  - 7) Supported Inside Handle Modes Bitmask = 0x00 (No Handle)
  - 8) Supported door components = 0x00;
  - 9) ARS = 1
  - 10) HRS = TAS = BTBS = 0
3. Door Lock Operation Set Command:
  - 1) Door Unsecured (0x00)
  - 2) Door Secured (0xFF)
4. Door Lock Operation Report Command:
  - 1) Door Unsecure, example: 00 00 00 FE FE 00 00  
Door Lock Mode = 0x00 (Door Unsecured)

Outside Door Handles Mode = 0 (Disabled), Inside Door Handles Mode = 0 (Disabled)

Door Condition = 0x00

Lock Timeout minutes = 0xFE (No unlocked period)

Lock Timeout Seconds = 0xFE (No unlocked period)

Target Door Lock Mode = 0x00 (Door Unsecured)

Duration = 0x00

2) Door Secured, example: FF 00 00 FE FE FF 00

Door Lock Mode = 0xFF (Door secured)

Outside Door Handles Mode = 0 (Disabled), Inside Door Handles Mode = 0 (Disabled)

Door Condition = 1 (Bolt Locked, Door Closed)

Lock Timeout minutes = 0xFE (No unlocked period)

Lock Timeout Seconds = 0xFE (No unlocked period)

Target Door Lock Mode = 0xFF (Door Secured)

Duration = 0x00

5. Door Lock Configuration Report Command:

1) Operation Type = 0x01 (Constant operation)

2) Lock Timeout minutes = 0xFE (No unlocked period)

3) Lock Timeout Seconds = 0xFE (No unlocked period)

4) Auto-relock time 1 = 0

5) Auto-relock time 2 = 0

6) Hold and release time 1 = 0x00

7) Hold and release time 2 = 0x00

8) BTB = TA = 0

The auto relock time mapping table of door lock and Z-Wave is as follows:

Z-Wave definition	Door lock function
Auto-relock time = 0	disabled
Auto-relock time = 1 – 59	<b>1-59 Seconds</b>
Auto-relock time = 60 – 65535	<b>60 Seconds</b>

### 5.9 Door Lock Logging

The Command provides an audit trail in an access control application. Each time an event takes place at the door lock, the system logs the user's ID, date, time etc.

Max records stored = **255**

### 5.10 User Code

The Command is used to manage User Codes in access control systems

1. Support users: **250**
2. Support master code

3. Supported User ID Status: available(0x00), grant access (0x01)
4. Supported Keypad Modes: Normal mode
5. User Code Capabilities Report Command:
  - 1) Supported Users = **250**
  - 2) AC (Admin Code) Support = 1
  - 3) ACD (Admin Code Deactivation) Support = 0
  - 4) UCC (User Code Checksum) Support = 1
  - 5) MUCR (Multiple User Code Report) Support = 1
  - 6) MUCS (Multiple User Code Set) Support = 1
  - 7) Supported User ID Status Bit Mask Length = 1
  - 8) Supported User ID Status Bit Mask 1 = 0x03 (Available, Grant Access)
  - 9) Supported Keypad Modes Bit Mask Length = 1
  - 10) Supported Keypad Modes Bit Mask 1 = 0x01 (Normal mode)
  - 11) Supported Keys Bit Mask Length = 8
  - 12) Supported Keys Bit Mask 1 = 0x00
  - 13) Supported Keys Bit Mask 2 = 0x00
  - 14) Supported Keys Bit Mask 3 = 0x00
  - 15) Supported Keys Bit Mask 4 = 0x00
  - 16) Supported Keys Bit Mask 5 = 0x00
  - 17) Supported Keys Bit Mask 6 = 0x00
  - 18) Supported Keys Bit Mask 7 = 0xFF (digits 0-7)
  - 19) Supported Keys Bit Mask 8 = 0x03 (digits 8-9)

## 5.11 Schedule

The Command allows scheduling the execution of commands for a given duration in a supporting device. It is a generic Command Class that may be used to schedule commands of any other Command Class.

1. SCHEDULE\_SUPPORTED\_REPORT:
  - 1) Number of Supported Schedule IDs: **30**
  - 2) Support Enable / disable: 0
  - 3) Fall-back Support: 0
  - 4) Start Time Support: 0x0E (Start Hour and Minute/Calendar time/Weekdays)
  - 5) Number of supported CC: 1
  - 6) Supported CC 1: USER\_CODE\_COMMAND\_CLASS
  - 7) Supported Command1: 0x01 (Only Set Commands are supported)
  - 8) Override Support: false
  - 9) Supported Override Types: 0x00
  - 10) Number of Supported Schedule Blocks: 1
2. SCHEDULE\_SUPPORTED\_COMMANDS\_REPORT:
  - 1) Supported Command Class: USER\_CODE\_COMMAND\_CLASS
  - 2) Supported Command: USER\_CODE\_SET

## 5.12 Battery

The Command is used to request and report battery levels for a given device.

1. If send Battery Get to the device, it will issue Battery Report with current battery level to the requester.
2. If re-power on, it will issue Battery Report with current battery level via Lifeline.
3. If waked up, it will detect battery level, and issue Battery Report (Value=0xFF) via Lifeline when battery level is less than 20%.
4. If the battery value change exceeds 5%, the battery report will be sent
5. Support timed battery report, refer to Configuration Parameter 2.

## 5.13 Indicator

The Command is used to help end users to monitor the operation or condition of the application provided by a supporting node.

Indicator ID		Property ID	
Node Identify	0x50	On Off Period	0x03
		On Off Cycles	0x04
		On time within an On/Off period	0x05

## 5.14 Time

The Command is used to read date and time from a supporting node in a Z-Wave network.

## 5.15 Time Parameters

The Command is used to set date and time in a device hosting this facility

## 5.16 Configuration

The Command allows product specific configuration parameters to be changed.

Note: No Bulk Support equals to True. **It will return an Application Rejected Request Command when receiving Configuration Bulk Set or Get (if received without Supervision encapsulation).** It will reset all its configuration parameters if either manually reset to factory default or receives a Configuration Default Reset Command. It will NOT modify or reset any configuration parameter when being included or excluded of a Z-Wave network.

Parameter	0x01 (1)
Name	Enable or disable voice
Info	Enable or disable voice

Properties	Size	1	Min Value	0
	Format	Enumerated	Max Value	1
	Read-only	False	Default Value	1
	Altering capabilities	False	Advanced	False
Description	Enable or disable voice			
	Value	Function		
	0	Disable		
	1	<b>Enable</b>		

<b>Parameter</b>	<b>0x02 (2)</b>			
Name	Timed battery report			
Info	Configure timed battery report			
Properties	Size	2	Min Value	0
	Format	Unsigned Integer	Max Value	44640 (0xAE60) (31 days)
	Read-only	False	Default Value	1440 (0x05A0) (one day)
	Altering capabilities	False	Advanced	False
Description	Enable/Disable timed battery report and sets how often battery is reported in minutes.			
	Value	Function		
	0	Disable timed battery report		
	1-44640	Enable timed battery report and sets how often battery is reported in minutes.		

<b>Parameter</b>	<b>0x03 (3)</b>			
Name	Association Group 2 Settings			
Info	Configure the Basic Set value			
Properties	Size	1	Min Value	0
	Format	Enumerated	Max Value	6
	Read-only	False	Default Value	1
	Altering capabilities	False	Advanced	False
Description	Determine the Basic Set value to control other Z-Wave devices directly.			
	Value	Function		

	0	Disable completely.
	1	<b>Unlocked Status sends Basic SET 0xFF, Locked Status sends Basic SET 0x00.</b>
	2	Unlocked Status sends Basic SET 0x00, Locked Status sends Basic Set 0xFF.
	3	Sends only Basic SET 0xFF when Unlocked Status happens.
	4	Sends only Basic SET 0x00 when Locked Status happens.
	5	Sends only Basic SET 0x00 when Unlocked Status happens.
	6	Sends only Basic SET 0xFF when Locked Status happens.

<b>Parameter</b>	<b>0x04 (4)</b>			
Name	Bluetooth MAC address of part 1			
Info	Bluetooth MAC address of part 1			
Properties	Size	4	Min Value	0
	Format	Unsigned Integer	Max Value	4294967295
	Read-only	True	Default Value	0
	Altering capabilities	False	Advanced	False
Description	This parameter represents the first four bytes of the Bluetooth MAC address, and it can only be read, not set.			
	Value	Function		
	00000000-FFFFFFFF	Bluetooth MAC address of part 1		

<b>Parameter</b>	<b>0x05 (5)</b>			
Name	Bluetooth MAC address of part 2			
Info	Bluetooth MAC address of part 2			
Properties	Size	2	Min Value	0
	Format	Unsigned Integer	Max Value	65535
	Read-only	True	Default Value	0
	Altering capabilities	False	Advanced	False
Description	This parameter represents the last two bytes of the Bluetooth MAC address, and it can only be read, not set.			
	Value	Function		
	0000-FFFF	Bluetooth MAC address of part 2		