



*Shelly*  
QUBINO

# Wave Plug UK

**Z-Wave® smart plug with power measurements**

**Extended User Guide (EN)**

**Device: Wave Plug UK**

EU Part number/Ordering Code: QNPL-001X12UK

Z-Wave Product type ID: 0x0002

Z-Wave Product ID: 0x0089

Z-Wave Manufacturer: Shelly Europe

Z-Wave Manufacturer ID: 0x0460

Table of contents

- 1. User and safety guide ..... 5
  - 1.1 Z-Wave® Plug UK with power measurement..... 5
- 2. Terminology and Abbreviations..... 5
- 3. About Shelly Qubino ..... 5
- 4. About the Device ..... 6
- 5. Installation instruction..... 6
- 6. About Z-Wave® ..... 7
- 7. Z-Wave® Adding / Removing / Factory reset ..... 8
  - 7.1 Adding the Device to a Z-Wave® network (inclusion) ..... 8
    - 7.1.1 SmartStart adding (inclusion) ..... 8
    - 7.1.2 Adding (inclusion) with the S button ..... 9
  - 7.2 Removing the Device from a Z-Wave® network (exclusion) ..... 9
    - 7.2.1 Removing (exclusion) with the S button..... 9
  - 7.3 Factory reset ..... 10
    - 7.3.1 Factory reset general ..... 10
    - 7.3.2 Factory reset with the S button ..... 10
    - 7.3.3 Remote factory reset with parameter with the gateway ..... 10
- 8. Z-Wave® Security 2 and Device Specific Key (DSK)..... 10
- 9. LED Signalization ..... 12
  - 9.1 General rules..... 12
  - 9.2 LED type: RGB dimmable ..... 12
  - 9.3 Normal mode ..... 12
    - Removed/Excluded ..... 12
    - Added/Included ..... 12
    - Relay is switched ON and power consumption is 0W (no power consumption) ..... 12
    - Relay is switched ON and power consumption is between >0W and 85% of Max Power consumption ..... 12
    - Relay is switched ON and power consumption is >85% of Max Power consumption ..... 13

Settings in progress Factory reset and reboot.....	13
Adding / Removing.....	13
Firmware updating OTA.....	13
Checking power supply 230 V AC frequency or 24 V DC voltage .....	13
9.4 Settings mode with S button .....	13
Adding / Removing menu selected.....	13
Adding / Removing menu - while pressing S- button - Add/Remove process selected.....	14
Factory reset menu selected .....	14
Factory reset - while pressing S - button - Factory reset process selected .....	14
9.5 Alarm Mode .....	14
Overcurrent detected O.....	14
Overheat detected .....	14
Power supply fault (power supply 230 V AC frequency or 24 V DC voltage fault).....	15
Overvoltage detected .....	15
10. Z-Wave® Parameters .....	15
Parameter No. 17 - Restore the O (O1) state after a power failure .....	15
Parameter No. 19 - O (O1) Auto OFF with timer .....	15
Parameter No. 20 - O (O1) Auto ON with timer .....	16
Parameter No. 23 - O (O1) contact type - NO/NC .....	16
Parameter No. 25 - Set timer units to s or ms for O (O1).....	17
Parameter No. 36 - O (O1) Power report on change - percentage .....	17
Parameter No. 39 - Minimum time between reports (O) O1.....	17
Parameter No. 91 - Water Alarm.....	18
Parameter No. 92 - Smoke Alarm .....	18
Parameter No. 93 - CO Alarm .....	19
Parameter No. 94 - Heat Alarm .....	19
Parameter No. 117 - Remote Device reboot.....	20
Parameter No. 120 - Factory Reset.....	20
Parameter No. 201 - Serial Number 1.....	21

Parameter No. 202 - Serial Number 2.....	21
Parameter No. 203 - Serial Number 3.....	21
11. Z-Wave Command Class .....	22
Supporting Command Class Indicator .....	23
Supporting Command Class Basic.....	24
Supporting Meter Command Class.....	24
12. Z-Wave Notifications Command class .....	25
12.1 Overheat detected .....	25
12.2 Overcurrent detected O.....	25
12.3 Overvoltage detected .....	26
13. Z-Wave Associations .....	26
13.1 Root device .....	26
Root device - Association Group 1 - Lifeline.....	26
14. Supported load types.....	27
15. Technical Specifications .....	27
16. Important disclaimer .....	28
17. Declaration of Conformity .....	28
18. Manufacturer.....	28

# 1. User and safety guide

## 1.1 Z-Wave® Plug UK with power measurement

### READ BEFORE USE

**This document contains important technical and safety information about the Device, its safe use and installation.**

**⚠CAUTION!** Before beginning the installation, please read carefully and entirely this guide and any other documents accompanying the Device. Failure to follow the installation procedures could lead to malfunction, danger to your health and life, violation of law or refusal of legal and/or commercial guarantee (if any). Allterco Robotics EOOD is not responsible for any loss or damage in case of incorrect installation or improper operation of this Device due to failure of following the user and safety instructions in this guide.

## 2. Terminology and Abbreviations

- **Device** - In this document, the term “**Device**” is used to refer to the Shelly Qubino device that is a subject of this guide.
- **Gateway (GW)** - A Z-Wave® gateway, also referred to as a Z-Wave® controller, Z-Wave® main controller, Z-Wave® primary controller, or Z-Wave® hub, etc., is a device that serves as a central hub for a Z-Wave® smart home network. The term “**gateway**” is used in this document.
- **S button** - The Z-Wave® Service button, located on Z-Wave® devices and is used for various functions such as adding (inclusion), removing (exclusion), and resetting the device to its factory default settings. The term “**S button**” is used in this document.
- **Adding/Inclusion** - The process of adding Z-Wave device to a Z-Wave network - gateway. The words **included, added**, etc. are used in this regard.
- **Removing/Exclusion** - The process of removing Z-Wave device from a Z-Wave network - gateway. The words **excluded, removed**, etc. are used in this regard.
- **Learn mode** - a state that allows the Device to receive network information from the gateway.

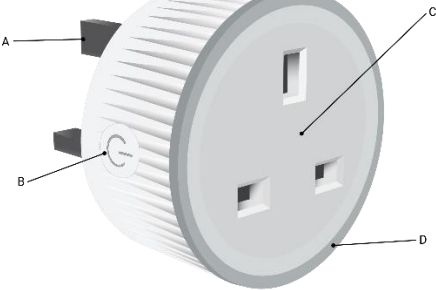
## 3. About Shelly Qubino

Shelly Qubino is a line of innovative microprocessor-managed devices, which allow remote control of electric circuits with a smartphone, tablet, PC, or home automation system. They work on Z-Wave® wireless communication protocol, using a gateway. When the gateway is connected to the internet, you can control Shelly Qubino devices remotely from anywhere. Shelly Qubino

devices can be operated in any Z-Wave® network with other Z-Wave® certified devices from other manufacturers. All mains operated nodes within the network will act as repeaters regardless of vendor to increase reliability of the network. Devices are designed to work with older generations of Z-Wave® devices and gateways.

## 4. About the Device

The Device is a smart plug/outlet with power measurement and overheating protection, which allows remote control of electrical appliances through a mobile phone, tablet, PC, or home automation system.



### Legend

- A: Plug
- B: S button
- C: Socket
- D: LED indicator

## 5. Installation instruction

The Device is a smart plug suitable for controlling electrical house-hold appliances and measuring their power consumption. It can be plugged into standard BS 1363 (Type-G) sockets and accepts standard BS 1363 (Type-G) plugs.

**⚠CAUTION!** Use the Device only with a power grid and appliances that comply with all applicable regulations. A short circuit in the power grid or any appliance connected to the Device may damage it.

**⚠CAUTION!** Do not connect the Device to appliances exceeding the given max. load!

**⚠CAUTION!** Do not install the Device where it can get wet.

⚠CAUTION! Do not use the Device if it has been damaged!

⚠CAUTION! Do not attempt to service or repair the Device yourself!

⚠CAUTION! Connect the Device only in the way shown in these instructions. Any other method could cause damage and/or injury.

⚠CAUTION! Do not allow children to play with the device, especially with the S button. Keep the devices for remote control of Shelly Qubino (mobile phones, tablets, PCs) away from children.

⚠CAUTION! The product is intended for indoor use only.

⚠CAUTION! Protect the product from dirt and moisture! Do not use the product in a damp environment!

⚠CAUTION! Before cleaning the Device power off the connected appliance by pressing the S button, unplug it and then unplug the Device itself. Never clean the Device if it is connected to the mains! Use a wet soft cloth to clean the Device.

⚠CAUTION! Do not use aggressive detergents!

⚠CAUTION! Do not immerse the Device or wash it under running water!

Insert Wave Plug UK into a power socket without an appliance/load connected to it. Then you can now plug an appliance into the Device socket. To power the appliance on press briefly the S button. The LED will turn green if load is 0W, yellow if load is between >0W and 85% of the max. power consumption and red if load is >85% of the max. load.

## 6. About Z-Wave®



The Z-Wave® protocol is an interoperable, wireless, RF-based communications technology designed specifically for control, monitoring, and status reading applications in residential and light commercial environments. Mature, proven, and broadly deployed, Z-Wave® is by far the world market leader in wireless control, bringing affordable, reliable, and easy-to-use 'smart' products to millions of people in every aspect of daily life.

Interoperability has always been at the core of the Z-Wave® protocol, alongside the features like backward compatibility, security, and reliability. All Z-Wave® devices can be operated in any Z-Wave® network with other Z-Wave® certified devices, regardless of brand or manufacturer. All mains operated nodes within the network will act as repeaters regardless of vendor to

increase the reliability of the network. There are 4000+ Z-Wave certified products that are backwards- and forwards-compatible in the Z-Wave® ecosystem and well over 100 million devices currently in the market.

With over 20 years in the marketplace, Z-Wave® technology has best-in-class security measures to keep your home network smarter and safer.

Source: [www.z-wavealliance.org](http://www.z-wavealliance.org), <http://www.z-wave.com>

## 7. Z-Wave® Adding / Removing / Factory reset

### 7.1 Adding the Device to a Z-Wave® network (inclusion)

**Note!** *All Device outputs (O, O1, O2, etc. - depending on the Device type) will turn the load 1s on/1s off /1s on/1s off if the Device is successfully added to/removed from a Z-Wave® network.*

**Note!** *In case of Security 2 (S2) adding (inclusion), a dialog will appear asking you to enter the corresponding PIN Code (5 underlined digits) that are written on the Z-Wave® DSK label on the side of the Device and on the Z-Wave® DSK label inserted in the packaging.*

**IMPORTANT: The PIN Code must not be lost.**

#### 7.1.1 SmartStart adding (inclusion)

SmartStart enabled products can be added into a Z-Wave® network by scanning the Z-Wave® QR Code present on the Device with a gateway providing SmartStart inclusion. No further action is required, and the SmartStart device will be added automatically within 10 minutes of being switched on in the network vicinity.

1. With the gateway application scan the QR code on the Device label and add the Security 2 (S2) Device Specific Key (DSK) to the provisioning list in the gateway.
2. Connect the Device to a power supply.
3. Check if the blue LED is blinking in Mode 1. If so, the Device is not added to a Z-Wave® network.
4. Adding will be initiated automatically within a few seconds after connecting the Device to a power supply, and the Device will be added to a Z-Wave® network automatically.
5. The blue LED will be blinking in Mode 2 during the adding process.
6. The green LED will be blinking in Mode 1 if the Device is successfully added to a Z-Wave® network.



### 7.1.2 Adding (inclusion) with the S button

1. Connect the Device to a power supply.
2. Check if the blue LED is blinking in Mode 1. If so, the Device is not added to a Z-Wave® network.
3. Enable add/remove mode on the gateway.
4. To enter the Setting mode, quickly press and hold the S button on the Device until the LED turns solid blue.
5. Quickly release and then press and hold (> 2s) the S button on the Device until the blue LED starts blinking in Mode 3. Releasing the S button will start the Learn mode.
6. The blue LED will be blinking in Mode 2 during the adding process.
7. The green LED will be blinking in Mode 1 if the Device is successfully added to a Z-Wave® network.

**Note!** *In Setting mode, the Device has a timeout of 10s before entering again into Normal mode.*

## 7.2 Removing the Device from a Z-Wave® network (exclusion)

**Note!** *The Device will be removed from your Z-Wave® network, but any custom configuration parameters will not be erased.*

**Note!** *All Device outputs (O, O1, O2, etc. - depending on the Device type) will turn the load 1s on/1s off /1s on/1s off if the Device is successfully added to/removed from a Z-Wave® network.*

### 7.2.1 Removing (exclusion) with the S button

1. Connect the Device to a power supply.
2. Check if the green LED is blinking in Mode 1. If so, the Device is added to a Z-Wave® network.
3. Enable add/remove mode on the gateway.
4. To enter the Setting mode, quickly press and hold the S button on the Device until the LED turns solid blue.
5. Quickly release and then press and hold (> 2s) the S button on the Device until the blue LED starts blinking in Mode 3. Releasing the S button will start the Learn mode.
6. The blue LED will be blinking in Mode 2 during the removing process.
7. The blue LED will be blinking in Mode 1 if the Device is successfully removed from a Z-Wave® network.

**Note!** *In Setting mode, the Device has a timeout of 10s before entering again into Normal mode.*

## 7.3 Factory reset

### 7.3.1 Factory reset general

After Factory reset, all custom parameters and stored values (kWh, associations, routings, etc.) will return to their default state. HOME ID and NODE ID assigned to the Device will be deleted. Use this reset procedure only when the gateway is missing or otherwise inoperable.

### 7.3.2 Factory reset with the S button

**Note!** *Factory reset with the S button is possible anytime.*

1. To enter the Setting mode, quickly press and hold the S button on the Device until the LED turns solid blue.
2. Press the S button multiple times until the LED turns solid red.
3. Press and hold (> 2s) S button on the Device until the red LED starts blinking in Mode 3. Releasing the S button will start the factory reset.
4. During factory reset, the LED will turn solid green for about 1s, then the blue and red LED will start blinking in Mode 3 for approx. 2s.
5. The blue LED will be blinking in Mode 1 if the Factory reset is successful.

### 7.3.3 Remote factory reset with parameter with the gateway

Factory reset can be done remotely with the settings in Parameter No. 120.

## 8. Z-Wave® Security 2 and Device Specific Key (DSK)

The Device supports the latest Security 2 (S2) feature. S2 is handled by the strong AES 128 Encryption protocol, which means that the S2 makes Z-Wave® the most secure IoT (Internet of Things) security platform out there. To fully utilize the product and its Security 2 feature, a Security 2-enabled Z-Wave® gateway must be used.

Authenticated Control

- Out-Of-Band DSK for adding (inclusion)
- May be used by most implementations

The Device also supports Security 2 Authenticated, Unauthenticated, and Unsecure adding (inclusion).

**Note!** When adding the Device to a Z-Wave network with a gateway supporting Security 2 (S2), the PIN Code of the Z-Wave Device Specific Key (DSK) is required. You can find it on the label on

the side of the Device and a copy is inserted in the packaging, which must not be lost. Do not remove the Z-Wave DSK label from the Device. As a backup measure, use the label in the packaging.



The first five digits of the key are highlighted or underlined to help the user identify the PIN Code part of the DSK text. The DSK is additionally represented with a QR Code as shown on the image.

#### **Z-Wave DSK label and QR code (example)**

A joining node requesting to join the S2 Access Control Class or the S2 Authenticated Class will obfuscate its Public Key by setting the bytes 1...2 to zeros (0x00) before transferring its key via RF.

The DSK may be used for out-of-band (OOB) authentication.

The including gateway may use a QR code scanning device to read the entire DSK of the joining device and match it with the obfuscated public key received via RF from the joining device.

① NOTE: This Device must be used in conjunction with a Security Enabled Z-Wave gateway to fully utilize all implemented functions.

① NOTE: This Device is a security enabled Z-Wave Plus® product that can use encrypted Z-Wave Plus messages to communicate to other security enabled Z-Wave Plus products.

① NOTE: DSK access via UI gateways, which implement the S2 and SmartStart security feature, display an input dialog box, with a full or partial DSK key. Most of them display a partial DSK (they do not show the PIN code) when the Device is added with the S2-Authenticated security scheme. When added with the S2-Unauthenticated, some gateways show the complete DSK while others perform the complete adding (inclusion) process without prompting the user with the dialogue.

## 9. LED Signalization

### 9.1 General rules

- Switching between Normal and Settings mode is done by Single press on the S button.
- Ones in settings mode, LED automatically turns off after 10s.
- Press on the S button or device power cycle wakeup LED for 10s.

Normal mode LED status: Normal mode is defined by stable device function that can remain for an infinite time.

### 9.2 LED type: RGB dimmable

### 9.3 Normal mode

#### Removed/Excluded

The LED will be blinking **blue** in Mode 1 for 10 sec after every power cycle.



#### Added/Included

The LED will be blinking **green** in Mode 1 for 10 sec after every power cycle.



#### Relay is switched ON and power consumption is 0W (no power consumption)

The LED will be **green** solid on all the time starting 11 sec after every power cycle.

#### Relay is switched ON and power consumption is between >0W and 85% of Max Power consumption

The LED will be **yellow** solid on all the time starting 11 sec after every power cycle.

**Relay is switched ON and power consumption is >85% of Max Power consumption**

The LED will be **red** solid on all the time starting 11 sec after every power cycle.

**Settings in progress** Factory reset and reboot

During factory reset, the LED will turn solid **green** for approx. 1sec, then the **blue** and **red** LED will be blinking 0,1s On / 0,1s Off for about 2sec.

**Adding / Removing**


During adding or removing, the LED will be blinking **blue** in Mode 2.

**Firmware updating OTA**

During the OTA update, the LED will be blinking **blue** and **red** in Mode 2.

**Checking power supply 230 V AC frequency or 24 V DC voltage**

During checking the power supply, the LED will be blinking **blue** and **red** in Mode 5.

**9.4 Settings mode with S button****Adding / Removing menu selected**

When the menu is selected the LED will be on **blue**, for maximum of 10 seconds.

**Adding / Removing menu - while pressing S- button - Add/Remove process selected**


When the menu is executing the LED will be blinking **blue** in Mode 3.

**Factory reset menu selected**

When the menu is selected the LED will be on **red**, for maximum of 10 seconds.

**Factory reset - while pressing S - button - Factory reset process selected**

When the menu is executing the LED will be blinking **red** in Mode 3.

**9.5 Alarm Mode****Overcurrent detected O**

The LED will be blinking **red** in Mode 4

**Overheat detected**

The LED will be blinking **red** in Mode 4



**Power supply fault (power supply 230 V AC frequency or 24 V DC voltage fault)**

The LED will be blinking **red** in Mode 4

**Overvoltage detected**

The LED will be blinking **red** in Mode 4



## 10. Z-Wave® Parameters

**Parameter No. 17 - Restore the O (O1) state after a power failure**

This parameter determines if the on/off status is saved and restored for the load connected to O (O1) after a power failure.

Values size: 1 Byte

Default value: 0

Values & descriptions:

- 0 - Device saves last on/off status and restores it after a power failure
- 1 - Device does not save on/off status and does not restore it after a power failure, it remains off

**Parameter No. 19 - O (O1) Auto OFF with timer**

If the load O (O1) is ON, you can schedule it to turn OFF automatically after the period of time defined in this parameter. The timer resets to zero each time the Device receives an ON command, either remotely (from the gateway or associated device) or locally from the switch.

Values size: 2 Byte

Default value: 0

Values & their descriptions:

- 0 - Auto OFF Disabled
- 1 - 32535 = 1 - 32535 seconds (or milliseconds – see Parameter no. 25. Auto OFF timer enabled for a given number of seconds (or milliseconds) resolution 100ms

**Parameter No. 20 - O (O1) Auto ON with timer**

If the load O (O1) is OFF, you can schedule it to turn ON automatically after the period of time defined in this parameter. The timer resets to zero each time the Device receives an OFF command, either remotely (from the gateway or associated device) or locally from the switch.

Values size: 2 Byte

Default value: 0

Values & their descriptions:

- 0 - Auto ON Disabled
- 1 - 32535 = 1 - 32535 seconds (or milliseconds – see Parameter No. 25. Auto ON timer enabled for a given number of seconds (or milliseconds) resolution 100ms

**Parameter No. 23 - O (O1) contact type - NO/NC**

The set value determines the relay contact type for output O (O1) . The relay contact type can be normally open (NO) or normally closed (NC).

Values size: 1 Byte

Default value: 0

Values & descriptions:

- 0 - NO
- 1 - NC

Relay logic:

Par-NO/NC	Command (switch, Z-Wave...)	Device output state
NO (0)	OFF	OFF (0 V)
NO (0)	ON	ON (230 V)
NC (1)	OFF	ON (230 V)
NC (1)	ON	OFF (0 V)



**Parameter No. 25 - Set timer units to s or ms for O (O1)**

Set the timer units to seconds or milliseconds. Choose if you want to set the timer in seconds or milliseconds in Parameters No. 19, 20.

Values size: 1 Byte

Default value: 0

Values & descriptions:

- 0 – timer set in seconds
- 1 – timer set in milliseconds

**Parameter No. 36 - O (O1) Power report on change - percentage**

This parameter determines the minimum change in consumed power that will result in sending a new report to the gateway.

Values size: 1 Byte

Default value: 50

Values & descriptions:

- 0 - reports are disabled
- 1-100 (1-100%) - change in power

NOTE: When the Device reports the power consumption (W), it will also automatically report the voltage (V) and current (A).

NOTE: Regardless of the power consumption change in percentage, the report will not be sent more frequently than defined by Parameter No. 39.

**Parameter No. 39 - Minimum time between reports (O) O1**

This parameter determines the minimum time that must elapse before a new power report on O (O1) is sent to the gateway.

Values size: 1 Byte

Default value: 30

Values & descriptions:

- 0 - reports are disabled
- 1-120 (1-120s) - report interval

NOTE: This Parameter is in relation to Parameter No. 36.

NOTE: Setting the value to less than 30s can cause the Z-Wave network congestion state (slow Device response and decreased network stability).

### **Parameter No. 91 - Water Alarm**

This parameter determines how the device should respond to the reports of alarm frames. The parameters consist of 4 bytes, the three most significant bytes are set according to the official Z-Wave protocol specification.

The notification types it reacts to are as followed,

Notification Type:

- NOTIFICATION\_TYPE\_WATER\_ALARM 0x05

Notification Events:

- All except ALARM\_NO\_EVENT 0x00

Values size: 4 Byte

Default value: 0

Values & descriptions:

- 0 no action
- 1 open relay
- 2 close relay

### **Parameter No. 92 - Smoke Alarm**

This parameter determines how the device should respond to the reports of alarm frames. The parameters consist of 4 bytes, the three most significant bytes are set according to the official Z-Wave protocol specification.

The notification types it reacts to are as followed,

Notification Type:

- NOTIFICATION\_TYPE\_SMOKE\_ALARM 0x01

Notification Events:

- NOTIFICATION\_EVENT\_SMOKE\_ALARM\_SMOKE\_DETECTED 0x01
- NOTIFICATION\_EVENT\_SMOKE\_ALARM\_SMODE\_DETECTED\_UNKNOWN\_LOCATION 0x02

Values size: 4 Byte

Default value: 0

Values & descriptions:

- 0 no action
- 1 open relay
- 2 close relay

### **Parameter No. 93 - CO Alarm**

This parameter determines how the device should respond to the reports of alarm frames. The parameters consist of 4 bytes, the three most significant bytes are set according to the official Z-Wave protocol specification.

The notification types it reacts to are as followed,

Notification Type:

- NOTIFICATION\_TYPE\_CO\_ALARM 0x02

Notification Events:

- All except ALARM\_NO\_EVENT 0x00

Values size: 4 Byte

Default value: 0

Values & descriptions:

- 0 no action
- 1 open relay
- 2 close relay

### **Parameter No. 94 - Heat Alarm**

This parameter determines how the device should respond to the reports of alarm frames. The parameters consist of 4 bytes, the three most significant bytes are set according to the official Z-Wave protocol specification.

The notification types it reacts to are as followed,

Notification Type:

- NOTIFICATION\_TYPE\_HEAT\_ALARM 0x04

**Notification Events:**

- NOTIFICATION\_EVENT\_HEAT\_ALARM\_RAPID\_TEMPERATURE\_RISE\_LOCATION\_PROVIDED 0x03
- NOTIFICATION\_EVENT\_HEAT\_ALARM\_RAPID\_TEMPERATURE\_RISE 0x04
- NOTIFICATION\_EVENT\_HEAT\_ALARM\_RAPID\_TEMPERATURE\_FALL\_LOCATION\_PROVIDED 0x0C
- NOTIFICATION\_EVENT\_HEAT\_ALARM\_RAPID\_TEMPERATURE\_FALL 0x0D

Values size: 4 Byte

Default value: 0

**Values & descriptions:**

- 0 no action
- 1 open relay
- 2 close relay

**Parameter No. 117 - Remote Device reboot**

This parameter enable restarting or rebooting the Device without physical intervention. Use this parameter only for troubleshooting scope. After device reboot value will be set to default

Values size: 1 Byte

Default value: 0

**Values & descriptions:**

- 0 - function inactive
- 1 - Remote device reboot

**Parameter No. 120 - Factory Reset**

Reset to factory default settings and removed from the Z-Wave network.

The parameter is Advanced and may be hidden under the Advanced tag.

Values size: 1 Byte

Default value: 0

**Values & descriptions:**

- 0 - Don't do Factory reset
- 1 - Do the Factory reset

**Parameter No. 201 - Serial Number 1**

This parameter contains a part of device's serial number.

The parameter is Read-Only and cannot be changed.

The parameter is Advanced and may be hidden under the Advanced tag.

Values size: 4 Byte

Default value: Device specific

Values & descriptions:

- 0x00000000 - 0x7FFFFFFF

**Parameter No. 202 - Serial Number 2**

This parameter contains a part of device's serial number.

The parameter is Read-Only and cannot be changed.

The parameter is Advanced and may be hidden under the Advanced tag.

Values size: 4 Byte

Default value: Device specific

Values & descriptions:

- 0x00000000 - 0x7FFFFFFF

**Parameter No. 203 - Serial Number 3**

This parameter contains a part of device's serial number.

The parameter is Read-Only and cannot be changed.

The parameter is Advanced and may be hidden under the Advanced tag.

Values size: 4 Byte

Default value: Device specific

Values & descriptions:

- 0x00000000 - 0x7FFFFFFF

## 11. Z-Wave Command Class

1. ASSOCIATION\_V2 [S0, S2]\*
2. ASSOCIATION\_GRP\_INFO\_V3 [S0, S2]\*
3. BASIC\_V2 [S0, S2]\*
4. SWITCH\_BINARY\_V2 [S0, S2]\*
5. CONFIGURATION\_V4 [S0, S2]\*
6. DEVICE\_RESET\_LOCALLY\_V1 [S0, S2]\*
7. FIRMWARE\_UPDATE\_MD\_V5 [S0, S2]\*
8. INDICATOR\_V3 [S0, S2]\*
9. MANUFACTURER\_SPECIFIC\_V2 [S0, S2]\*
10. METER\_V6 [S0, S2]\*
11. MULTI\_CHANNEL\_ASSOCIATION\_V3 [S0, S2]\*
12. NOTIFICATION\_V8 [S0, S2]\*
13. POWERLEVEL\_V1 [S0, S2]\*
14. SECURITY\_V1
15. SECURITY\_2\_V1
16. SUPERVISION\_V1
17. TRANSPORT\_SERVICE\_V2
18. VERSION\_V3 [S0, S2]\*
19. ZWAVEPLUS\_INFO\_V2

\*[S2] Security 2 Command Class

### Supporting Command Class Indicator

The device may be identified by sending an Indicator Set Command 87 01 00 03 50 03 0A 50 04 0A 50 05 06 from the controller.

The bytes listed are

Command Class Indicator	(0x87)
Indicator Set	(0x01)
Indicator 0 value	(0x00)
Indicator object count	(0x03) <i>collection of definitions of how the indicator will act</i>
Indicator ID	(0x50) <i>ID for Node identify</i>
Property ID	(0x03) <i>ID for On Off period</i>
Value	(0x0A) <i>time span of a single on off period in ms. In this case 1000ms</i>
Indicator ID	(0x50) <i>ID for Node identify</i>
Property ID	(0x04) <i>ID for On Off cycles</i>
Value	(0x0A) <i>number of repetitions, or how many times the indicator will blink. In this case 10.</i>
Indicator ID	(0x50) <i>ID for Node identify</i>
Property ID	(0x05) <i>ID for One time on off period</i>
Value	(0x06) <i>the time in ms the indicator will be on or glowing, in a single period. In this case 600ms</i>

With this command the indicator on the device will blink 10 times, it will be on for 600ms and off for 400ms and it will be blinking for a total of 10 seconds.

**Supporting Command Class Basic**

COMMAND\_CLASS\_BASIC is mapped into COMMAND\_CLASS\_SWITCH\_BINARY, for enabling Switch (O) control:

Switch (O) will be turned ON or OFF, after receiving the BASIC\_SET command:

Basic Command received	Mapped Command (binary Switch)
Basic Set (0xFF)	Switch binary Switch (0xFF)
Basic Set (0x00)	Switch binary Switch (0x00)
Basic GET	Basic Report (Current Value, Target Value)

**Supporting Meter Command Class**

The Device supports the meter command class and KWh is the default scale report send when the scale type is not present in the received Get.

Supported Scale Name	Scale Value
Watt	2
KWh	0



## 12. Z-Wave Notifications Command class

Z-Wave Notification Type Name	Z-Wave Notification Name	LED color status	Device reaction	Action to restore	Device specific	Z-Wave definition
-------------------------------	--------------------------	------------------	-----------------	-------------------	-----------------	-------------------

### 12.1 Overheat detected

Heat Alarm	Overheat detected	Check the RGB LED signalization table	Switch OFF all outputs and send a notification	Any of the following activities reset this alarm: power cycle, Remote Device reboot (with Parameter No. 117), short press on the S button, press on any switch/push-button connected to any SW (SW, SW1, SW2, ...) terminal.	YES	notification type=heat alarm Value=0x04, event=State Notification name=Overheat detected Value=0x02, Version=V2
------------	-------------------	---------------------------------------	--	--	-----	--

### 12.2 Overcurrent detected O

Power Management	Overcurrent detected O (O1)	Check the RGB LED signalization table	Switch OFF the output O (O1) and send a notification	Any of the following activities reset this alarm: power cycle, Remote Device reboot (with Parameter No. 117), short press on the S button, press on any switch/push-button connected to any SW (SW, SW1, SW2, ...) terminal.	YES	notification type=power management Value=0x08. event=State Notification name=Over-current detected Value=0x06, Version=V3
------------------	-----------------------------	---------------------------------------	--	--	-----	--

### 12.3 Overvoltage detected

Power Management	Overvoltage detected	Check the RGB LED signalization table	Switch OFF all outputs and send a notification	Any of the following activities reset this alarm: power cycle, Remote Device reboot (with Parameter No. 117), short press on the S button, press on any switch/push-button connected to any SW (SW, SW1, SW2, ...) terminal.	YES	notification type=power management Value=0x08, event=State Notification name=Over-voltage detected Value=0x07, Version=V3
------------------	----------------------	---------------------------------------	--	---	-----	---

## 13. Z-Wave Associations

Associations are used for direct communication between the Device and other devices within your Z-Wave network without the need of the Z-Wave gateway. Max. number of associated devices per group is 9. This value is fixed and can not be configured. Each association group supports the association of up to 9 devices (nodes). To avoid network delays, we recommend limiting the number of associated devices to no more than 5 per group. "Lifeline Group" is reserved for controlling devices, such as Gateways and remote controllers, or devices who can interpret the reports sent.

**Association group 1** - "Lifeline Group" sends to the controlling device it's command class notifications and or command class reports when said command classes are triggered. Max. 9 nodes are allowed.

### 13.1 Root device

#### Root device - Association Group 1 - Lifeline

1. INDICATOR\_REPORT: LED status
2. DEVICE\_RESET\_LOCALLY\_NOTIFICATION: triggered upon request.
3. SWITCH\_BINARY\_REPORT: status change report for output O (O1)

4. NOTIFICATION\_REPORT: triggered on Overheat.
5. NOTIFICATION\_REPORT: triggered on Overcurrent detected O (O1)
6. NOTIFICATION\_REPORT: triggered on Overvoltage detected.
7. METER\_REPORT: triggered by load power consumption (according to the settings of Parameters from No. 36 to 39)

**Root device - Association Group 2**

**Association Group 2**

Allowed nodes: 9

It is assigned to output O (O1) (uses Basic command class).

Triggered by O (O1). Supports the following command classes:

- BASIC\_SET: set On/Off state at the associated device

## 14. Supported load types

- Resistive (incandescent bulbs, heating devices)
- Inductive (LED light drivers, transformers, fans, refrigerators, air-conditioners)
- Capacitive (capacitor banks, electronic equipment, motor start capacitors)

## 15. Technical Specifications

Power supply	230 V $\pm$ 10 %, 50/60 Hz
Power consumption	< 0.7W
Power measurement [W]	Yes
Max switching voltage AC	260 V
Max switching current AC	13 A
Overheating protection	Yes
Overcurrent protection	Yes
Overvoltage protection	Yes
Distance	up to 40 m indoors (131 ft.) (depends on local condition)
Z-Wave repeater:	Yes
CPU	Z-Wave S800

Z-Wave frequencies band(s)	868,4 MHz
Maximum radio frequency power transmitted in frequency bend(s)	< 25 mW
Size (H x W x D)	60x60x56 ±0.5 mm / 2.36x2.36x2.20 ±0.02 in
Weight	74 ±1 g / 2.6 ±0.04 oz
Compatible sockets	BS 1363 (Type-G)
Compatible plugs	BS 1363 (Type-G)
Shell material	Plastic
Color	White
Ambient temperature	-20°C to 40°C / -5°F to 105°F
Humidity	30% to 70% RH
Max. altitude	2000 m / 6562 ft.

## 16. Important disclaimer

Z-Wave® wireless communication may not always be 100% reliable. This Device should not be used in situations in which life and/or valuables are solely dependent on its functioning. If the Device is not recognized by your gateway or appears incorrectly, you may need to change the Device type manually and ensure that your gateway supports Z-Wave Plus® multi-channel devices.

## 17. Declaration of Conformity

Hereby, Allterco Robotics EOOD declares that the radio equipment type Wave Plug UK is in compliance with Directive 2014/53/EU, 2014/35/EU, 2014/30/EU, 2011/65/EU. The full text of the EU declaration of Conformity is available at the following internet address:  
<https://shelly.link/WavePlugUK-DoC>

## 18. Manufacturer

Shelly Europe Ltd. (former Allterco Robotics EOOD)

Address: 103 Cherni vrah Blvd., 1407 Sofia, Bulgaria

Tel.: +359 2 988 7435

E-mail: [zwave-shelly@shelly.cloud](mailto:zwave-shelly@shelly.cloud)

Support: <https://support.shelly.cloud/>

Web: <https://www.shelly.com>

Changes in the contact data are published by the Manufacturer at the official website:

<https://www.shelly.com>