



Shelly
QUBINO

Wave 1PM

Z-Wave® smart switch with power measurements

Extended User Guide (EN)

Device: Wave 1PM

Part number US: QNSW-001P16US

Z-Wave Product type ID: 0x0002

Z-Wave Product ID: 0x0084

Z-Wave Manufacturer: Shelly Europe Ltd.

Z-Wave Manufacturer ID: 0x0460

Table of contents

1. Terminology and Abbreviations.....	4
2. About Shelly Qubino	4
3. About the Device	4
4. Electrical diagrams (110-240 V AC / 24-30 V DC)	5
4.1 Installation instructions	6
5. About Z-Wave®	8
6. Z-Wave® Adding / Removing / Factory reset	9
6.1 Adding the Device to a Z-Wave® network (inclusion)	9
6.1.1 SmartStart adding (inclusion)	9
6.1.2 Adding (inclusion) with a switch/push-button	9
6.1.3 Adding (inclusion) with the S button	10
6.2 Removing the Device from a Z-Wave® network (exclusion)	10
6.2.1 Removing (exclusion) with a switch/push-button	10
6.2.2 Removing (exclusion) with the S button.....	11
6.3 Factory reset	11
6.3.1 Factory reset general	11
6.3.2 Factory reset with a switch/push-button	11
6.3.3 Factory reset with the S button	11
6.3.4 Remote factory reset with parameter with the gateway.....	12
7. Z-Wave® Security 2 and Device Specific Key (DSK).....	13
8. LED Signalization	15
General rules.....	15
9. Z-Wave® Parameters	17
Parameter No. 1 - SW (SW1) Switch type.....	17
Parameter No. 17 - Restore state of O (O1) after power failure.....	17
Parameter No. 19 - O (O1) Auto OFF with timer	17
Parameter No. 20 - O (O1) Auto ON with timer	18

Parameter No. 23 - O (O1) contact type - NO/NC	18
Parameter No. 25 - Set timer units to s or ms for O (O1).....	19
Parameter No. 36 - O (O1) Power report on change - percentage	19
Parameter No. 39 - Minimum time between reports (O) O1.....	19
Parameter No. 91 - Water Alarm.....	20
Parameter No. 92 - Smoke Alarm	20
Parameter No. 93 - CO Alarm	20
Parameter No. 94 - Heat Alarm	21
Parameter No. 120 - Factory Reset.....	21
Parameter No. 201 - Serial Number 1.....	22
Parameter No. 202- Serial Number 2.....	22
Parameter No. 203 - Serial Number 3.....	22
10. Z-Wave® Command Class	24
11. Z-Wave® Notifications Command class	26
11.1 Overheat detected.....	26
11.2 Overcurrent detected O.....	26
11.3 AC mains disconnected.....	27
12. Z-Wave® Associations	28
12.1 Root device	28
13. Supported load types.....	29
14. Technical Specifications.....	30
15. Important disclaimer	32
16. Disposal & Recycling.....	32
17. FCC Notes.....	32
18. Manufacturer.....	33

1. Terminology and Abbreviations

- **Device** - In this document, the term “**Device**” is used to refer to the Shelly Qubino device that is a subject of this guide.
- **Gateway (GW)** - A Z-Wave® gateway, also referred to as a Z-Wave® controller, Z-Wave® main controller, Z-Wave® primary controller, or Z-Wave® hub, etc., is a device that serves as a central hub for a Z-Wave® smart home network. The term “**gateway**” is used in this document.
- **S button** - The Z-Wave® Service button, located on Z-Wave® devices and is used for various functions such as adding (inclusion), removing (exclusion), and resetting the device to its factory default settings. The term “**S button**” is used in this document.
- **Adding/Inclusion** - The process of adding Z-Wave device to a Z-Wave network - gateway. The words **included**, **added**, etc. are used in this regard.
- **Removing/Exclusion** - The process of removing Z-Wave device from a Z-Wave network - gateway. The words **excluded**, **removed**, etc. are used in this regard.
- **Learn mode** - a state that allows the Device to receive network information from the gateway.

2. About Shelly Qubino

Shelly Qubino is a line of innovative microprocessor-managed devices, which allow remote control of electric circuits with a smartphone, tablet, PC, or home automation system. They work on Z-Wave® wireless communication protocol, using a gateway, which is required for configuration of the devices. When the gateway is connected to the internet, you can control Shelly Qubino devices remotely from anywhere. Shelly Qubino devices can be operated in any Z-Wave® network with other Z-Wave® certified devices from other manufacturers. All mains operated nodes within the network will act as repeaters regardless of vendor to increase reliability of the network. Devices are designed to work with older generations of Z-Wave® devices and gateways.

3. About the Device

The Device is a single product that enables the control of the on/off function for one electrical device such as bulb, ceiling fan, IR heater (with load up to 15 A). It measures power consumption of the connected device. The Device is compatible with switches (default) and push-buttons.

If the SW (SW1) is configured as a switch, each toggle of the switch will change the output O (O1) state to the opposite state - on, off, on, etc. If the SW (SW1) is configured as a push-button

in the Device settings, each press of the push-button will change the output O (O1) state to the opposite state - on, off, on, etc.

4. Electrical diagrams (110-240 V AC / 24-30 V DC)

Connecting to the power grid with power supply 110-240 V AC (Fig. 1), or 24-30 V DC (Fig. 2).

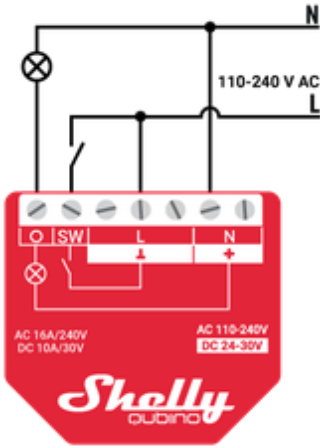


Fig. 1

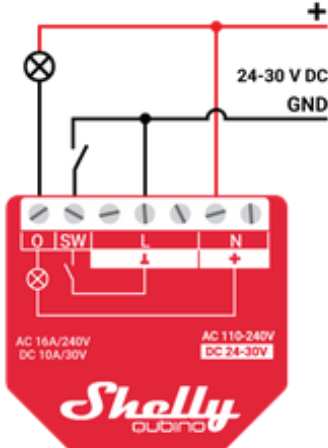


Fig. 2

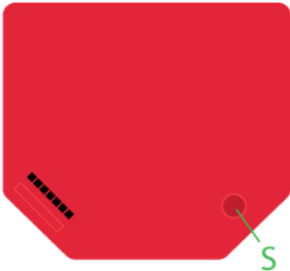


Fig. 3

LEGEND

Device terminals:

N: Neutral terminal

L: Live terminal (110-240 V AC)

SW (SW1): Input terminal for switch/push-button controlling O (O1)

O (O1): Output terminal for Load circuit (1)

+: 24 - 30 V DC positive terminal

⊥: 24 - 30 V DC ground terminal

Wires:

N: Neutral wire

L: Live wire (110-240 V AC)

+: 24 - 30 V DC positive wire

GND: 24 - 30 V DC ground wire

Button:

S: S button

4.1 Installation instructions

The Device can control a various type of loads (e.g., bulbs) in one electrical circuit (up to 16 A) and measures power consumption of the connected device (AC only). It can be retrofitted into standard electrical wall boxes, behind power sockets and light switches or other places with limited space.

⚠CAUTION! Danger of electrocution. Mounting/installation of the Device to the power grid has to be performed with caution, by a qualified electrician.

⚠CAUTION! Danger of electrocution. Every change in the connections has to be done after ensuring there is no voltage present at the Device terminals.

⚠CAUTION! Use the Device only with a power grid and appliances that comply with all applicable regulations. A short circuit in the power grid or any appliance connected to the Device may damage it.

⚠CAUTION! Do not connect the Device to appliances exceeding the given max. load!

⚠CAUTION! Do not shorten the antenna.

⚠CAUTION! Connect the Device only in the way shown in these instructions. Any other method could cause damage and/or injury.

⚠CAUTION! Do not install the Device where it can get wet.

⚠CAUTION! Do not use the Device if it has been damaged!

⚠CAUTION! Do not attempt to service or repair the Device yourself!

⚠CAUTION! Before starting the mounting/installation of the Device, check that the breakers are turned off and there is no voltage on their terminals. This can be done with a phase tester

or multimeter. When you are sure that there is no voltage, you can proceed to connecting the wires.

⚠CAUTION! Use only one phase AC circuit. Do not use mixed AC and DC circuits.

⚠CAUTION! Do not allow children to play with the push-buttons/ switches connected to the Device. Keep the devices for remote control of Shelly Qubino (mobile phones, tablets, PCs) away from children.

△RECOMMENDATION: Place the antenna as far away as possible from metal elements as they can cause signal interference.

△RECOMMENDATION: Connect the Device using solid single-core wires with increased insulation heat resistance not less than PVC T105°C (221°F).

△RECOMMENDATION: For inductive appliances that cause voltage spikes during switching on/off, such as electrical motors, fans, vacuum cleaners and similar ones, RC snubber (0.1 μ F / 100 Ω / 1/2 W / 600 VAC) should be connected parallel to the appliance.

If you are using AC power supply connect the load to the **O** terminal of the Device and the **Neutral** wire, as shown on **Fig. 1**. Connect the **Live** wire to an **L** terminal of the Device.

Connect the **Neutral** wire to a **N** terminal of the Device. Connect a switch or a push-button to the Device **SW** terminal and any of the unused **L** terminals of the Device.

If you are using DC power supply, connect the wires as shown on **Fig 2**. Connect the load to the **O** terminal of the Device and the **DC+** wire. Connect the **GND** wire to a **⊥** terminal of the Device. Connect the **DC+** wire to a **+** terminal of the device. Connect the switch/push-button to the **SW** and any of the unused **⊥** terminals of the Device.

5. About Z-Wave®



The Z-Wave® protocol is an interoperable, wireless, RF-based communications technology designed specifically for control, monitoring, and status reading applications in residential and light commercial environments. Mature, proven, and broadly deployed, Z-Wave® is by far the world market leader in wireless control, bringing affordable, reliable, and easy-to-use 'smart' products to millions of people in every aspect of daily life.

Interoperability has always been at the core of the Z-Wave® protocol, alongside the features like backward compatibility, security, and reliability. All Z-Wave® devices can be operated in any Z-Wave® network with other Z-Wave® certified devices, regardless of brand or manufacturer. All mains operated nodes within the network will act as repeaters regardless of vendor to increase the reliability of the network. There are 4000+ Z-Wave certified products that are backwards- and forwards-compatible in the Z-Wave® ecosystem and well over 100 million devices currently in the market.

With over 20 years in the marketplace, Z-Wave® technology has best-in-class security measures to keep your home network smarter and safer.

Source: www.Z-Wavealliance.org, <http://www.Z-Wave.com>

6. Z-Wave® Adding / Removing / Factory reset

6.1 Adding the Device to a Z-Wave® network (inclusion)

Note! All Device outputs (O, O1, O2, etc. - depending on the Device type) will turn the load 1s on/1s off /1s on/1s off if the Device is successfully added to/removed from a Z-Wave® network.

Note! In case of Security 2 (S2) adding (inclusion), a dialog will appear asking you to enter the corresponding PIN Code (5 underlined digits) that are written on the Z-Wave® DSK label on the side of the Device and on the Z-Wave® DSK label inserted in the packaging.

IMPORTANT: The PIN Code must not be lost.

6.1.1 SmartStart adding (inclusion)

SmartStart enabled products can be added into a Z-Wave® network by scanning the Z-Wave® QR Code present on the Device with a gateway providing SmartStart inclusion. No further action is required, and the SmartStart device will be added automatically within 10 minutes of being switched on in the network vicinity.

1. With the gateway application scan the QR code on the Device label and add the Security 2 (S2) Device Specific Key (DSK) to the provisioning list in the gateway.
2. Connect the Device to a power supply.
3. Check if the blue LED is blinking in Mode 1. If so, the Device is not added to a Z-Wave® network.
4. Adding will be initiated automatically within a few seconds after connecting the Device to a power supply, and the Device will be added to a Z-Wave® network automatically.
5. The blue LED will be blinking in Mode 2 during the adding process.
6. The green LED will be blinking in Mode 1 if the Device is successfully added to a Z-Wave® network.

6.1.2 Adding (inclusion) with a switch/push-button

1. Connect the Device to a power supply.
2. Check if the blue LED is blinking in Mode 1. If so, the Device is not added to a Z-Wave® network.
3. Enable add/remove mode on the gateway.
4. Toggle the switch/push-button connected to any of the SW terminals (SW, SW1, SW2, etc.) 3 times within 3 seconds (this procedure puts the Device in Learn mode*). The Device must receive on/off signal 3 times, which means pressing the momentary switch 3 times, or toggling the switch on and off 3 times.
5. The blue LED will be blinking in Mode 2 during the adding process.

6. The green LED will be blinking in Mode 1 if the Device is successfully added to a Z-Wave® network.

***Learn mode** - a state that allows the Device to receive network information from the gateway.

6.1.3 Adding (inclusion) with the S button

1. Connect the Device to a power supply.
2. Check if the blue LED is blinking in Mode 1. If so, the Device is not added to a Z-Wave® network.
3. Enable add/remove mode on the gateway.
4. To enter the Setting mode, quickly press and hold the S button on the Device until the LED turns solid blue.
5. Quickly release and then press and hold (> 2s) the S button on the Device until the blue LED starts blinking in Mode 3. Releasing the S button will start the Learn mode.
6. The blue LED will be blinking in Mode 2 during the adding process.
7. The green LED will be blinking in Mode 1 if the Device is successfully added to a Z-Wave® network.

Note! *In Setting mode, the Device has a timeout of 10s before entering again into Normal mode.*

6.2 Removing the Device from a Z-Wave® network (exclusion)

Note! *The Device will be removed from your Z-Wave® network, but any custom configuration parameters will not be erased.*

Note! *All Device outputs (O, O1, O2, etc. - depending on the Device type) will turn the load 1s on/1s off /1s on/1s off if the Device is successfully added to/removed from a Z-Wave® network.*

6.2.1 Removing (exclusion) with a switch/push-button

1. Connect the Device to a power supply.
2. Check if the green LED is blinking in Mode 1. If so, the Device is added to a Z-Wave® network.
3. Enable add/remove mode on the gateway.
4. Toggle the switch/push-button connected to any of the SW terminals (SW, SW1, SW2,...) 3 times within 3 seconds (this procedure puts the Device in Learn mode). The Device must receive on/off signal 3 times, which means pressing the momentary switch 3 times, or toggling the switch on and off 3 times.
5. The blue LED will be blinking in Mode 2 during the removing process.

6. The blue LED will be blinking in Mode 1 if the Device is successfully removed from a Z-Wave® network.

6.2.2 Removing (exclusion) with the S button

1. Connect the Device to a power supply.
2. Check if the green LED is blinking in Mode 1. If so, the Device is added to a Z-Wave® network.
3. Enable add/remove mode on the gateway.
4. To enter the Setting mode, quickly press and hold the S button on the Device until the LED turns solid blue.
5. Quickly release and then press and hold (> 2s) the S button on the Device until the blue LED starts blinking in Mode 3. Releasing the S button will start the Learn mode.
6. The blue LED will be blinking in Mode 2 during the removing process.
7. The blue LED will be blinking in Mode 1 if the Device is successfully removed from a Z-Wave® network.

Note! *In Setting mode, the Device has a timeout of 10s before entering again into Normal mode.*

6.3 Factory reset

6.3.1 Factory reset general

After Factory reset, all custom parameters and stored values (kWh, associations, routings, etc.) will return to their default state. HOME ID and NODE ID assigned to the Device will be deleted. Use this reset procedure only when the gateway is missing or otherwise inoperable.

6.3.2 Factory reset with a switch/push-button

Note! *Factory reset with a switch/push-button is only possible within the first minute after the Device is connected to a power supply.*

1. Connect the Device to a power supply.
2. Toggle the switch/push-button connected to any of the SW terminals (SW, SW1, SW2,...) 5 times within 3 seconds. The Device must receive on/off signal 5 times, which means pressing the push-button 5 times, or toggling the switch on and off 5 times.
3. During factory reset, the LED will turn solid green for about 1s, then the blue and red LED will start blinking in Mode 3 for approx. 2s.
4. The blue LED will be blinking in Mode 1 if the Factory reset is successful.

6.3.3 Factory reset with the S button

Note! *Factory reset with the S button is possible anytime.*

1. To enter the Setting mode, quickly press and hold the S button on the Device until the LED turns solid blue.
2. Press the S button multiple times until the LED turns solid red.
3. Press and hold (> 2s) S button on the Device until the red LED starts blinking in Mode 3. Releasing the S button will start the factory reset.
4. During factory reset, the LED will turn solid green for about 1s, then the blue and red LED will start blinking in Mode 3 for approx. 2s.
5. The blue LED will be blinking in Mode 1 if the Factory reset is successful.

6.3.4 Remote factory reset with parameter with the gateway

Factory reset can be done remotely with the settings in Parameter No. 120.

7. Z-Wave® Security 2 and Device Specific Key (DSK)

The Device supports the latest Security 2 (S2) feature. S2 is handled by the strong AES 128 Encryption protocol, which means that the S2 makes Z-Wave® the most secure IoT (Internet of Things) security platform out there. To fully utilize the product and its Security 2 feature, a Security 2-enabled Z-Wave® gateway must be used.

Authenticated Control

- Out-Of-Band DSK for adding (inclusion)
- May be used by most implementations

The Device also supports Security 2 Authenticated, Unauthenticated, and Unsecure adding (inclusion).

Note! When adding the Device to a Z-Wave network with a gateway supporting Security 2 (S2), the PIN Code of the Z-Wave Device Specific Key (DSK) is required. You can find it on the label on the side of the Device and a copy is inserted in the packaging, which must not be lost. Do not remove the Z-Wave DSK label from the Device. As a backup measure, use the label in the packaging.



The first five digits of the key are highlighted or underlined to help the user identify the PIN Code part of the DSK text. The DSK is additionally represented with a QR Code as shown on the image.

Z-Wave DSK label and QR code (example)

A joining node requesting to join the S2 Access Control Class or the S2 Authenticated Class will obfuscate its Public Key by setting the bytes 1..2 to zeros (0x00) before transferring its key via RF.

The DSK may be used for out-of-band (OOB) authentication.

The including gateway may use a QR code scanning device to read the entire DSK of the joining device and match it with the obfuscated public key received via RF from the joining device.

① NOTE: This Device must be used in conjunction with a Security Enabled Z-Wave gateway to fully utilize all implemented functions.

① NOTE: This Device is a security enabled Z-Wave Plus® product that can use encrypted Z-Wave Plus® messages to communicate to other security enabled Z-Wave Plus® products.


① NOTE: DSK access via UI gateways, which implement the S2 and SmartStart security feature, display an input dialog box, with a full or partial DSK key. Most of them display a partial DSK (they do not show the PIN code) when the Device is added (included) with the S2-Authenticated security scheme. When added (included) with the S2-Unauthenticated, some gateways show the complete DSK while others perform the complete adding (inclusion) process without prompting the user with the dialogue.

8. LED Signalization



General rules

- Switching between Normal and Settings mode is done by Single press on the S button
- **Solid LED** means that you are in the **Settings mode** (this is not valid for Plugs). Once in settings mode, switch to normal mode goes automatically after 10s
- If the LED is not in Alarm mode, it will turn off after a timeout of 30 min. Pressing the S button or power cycling the Device will wake the LED for 30 min.

Normal mode LED status: Normal mode is defined by stable device function that can remain for an infinite time.

Normal mode		Colour ↓	LED status	LED blinking mode	Blinking frequency	LED duration
Removed/Excluded	Blue	Blinking		Mode 1	0,5s On / 2s Off	30 min after every power cycle and 30 min after the S button was pressed, regardless of when the power cycle was finished.
Added/Included	Green	Blinking		Mode 1	0,5s On / 2s Off	10s after every power cycle.
Settings in progress mode		Colour	LED status	LED blinking mode	Blinking frequency	LED duration
Factory reset and reboot	Green / Blue / Red		During factory reset, the LED will turn solid green for about 1s (undefined in SW), then the blue and red LED will start blinking 0,1s On, 0,1s Off for about 2s.			During the process, regardless of when the power cycle was finished.
Adding / Removing (Inclusion / Exclusion)	Blue	Blinking		Mode 2	0,5s On / 0,5s Off	During the process, regardless of when the power cycle was finished.
OTA firmware updating	Blue / Red	Blinking		Mode 2	0,5s On / 0,5s Off	During the process, regardless of when the power cycle was finished.
Checking power supply 230 V AC frequency or 24 V DC voltage	Blue / Red	Blinking		Mode 5	0,2s On blue / 0,2s On red	During the process, regardless of when the power cycle was finished (it lasts max. 2s).

Setting mode (with S button)	Colour	LED status	LED blinking mode	Blinking frequency	LED duration
------------------------------	--------	------------	-------------------	--------------------	--------------


Adding / Removing (Inclusion / Exclusion) menu selected	Blue	On	Solid	On	During the process, regardless of when the power cycle was finished (it lasts max. 10s).
Adding / Removing (Inclusion / Exclusion) menu - while pressing S button - Adding / Removing (Inclusion / Exclusion) process selected	Blue	Blinking 	Mode 3	0,1s On / 0,1s Off	During the process, regardless of when the power cycle was finished.
Factory reset menu selected	Red	On	Solid	On	During the process, regardless of when the power cycle was finished (it lasts max. 10s).
Factory reset - while pressing S button - Factory reset process selected	Red	Blinking 	Mode 3	0,1s On / 0,1s Off	During the process, regardless of when the power cycle was finished.

Alarm mode	Colour	LED status	LED blinking mode	Blinking frequency	LED duration
------------	--------	------------	-------------------	--------------------	--------------

Overcurrent detected (it is one common state independent how many outputs O the Device has)	Red	Blinking 	Mode 4 (1x)	0,2s On 0,2s Off 2s Off and repeating this sequence	During an active alarm, regardless of when the power cycle was finished.
---	-----	---	-------------	---	--

Overheat detected	Red	Blinking 	Mode 4 (2x)	0,2s On 0,2s Off 0,2s On 0,2s Off 2s Off and repeating this sequence	During an active alarm, regardless of when the power cycle was finished.
-------------------	-----	---	-------------	--	--

Power supply fault (power supply 230 V AC frequency or 24 V DC voltage fault)	Red	Blinking 	Mode 4 (3x)	0,2s On 0,2s Off 0,2s On 0,2s Off 0,2s On 0,2s Off 2s Off and repeating this sequence	During an active alarm, regardless of when the power cycle was finished.
---	-----	---	-------------	---	--

Overvoltage detected	Red	Blinking 	Mode 4 (7x)	0,2s On 0,2s Off 0,2s On 0,2s Off 0,2s On 0,2s Off 0,2s On 0,2s Off 0,2s On 0,2s Off 2s Off and repeating this sequence	During an active alarm, regardless of when the power cycle was finished.
----------------------	-----	---	-------------	---	--

9. Z-Wave® Parameters

Parameter No. 1 - SW (SW1) Switch type

This parameter defines how the Device should treat the switch (which type) connected to the SW (SW1) terminal.

Value size: 1 Byte

Default value: 2

Values & descriptions:

- 0 - momentary switch,
- 1 - toggle switch (contact closed - ON / contact opened - OFF),
- 2 - toggle switch (Device changes status when switch changes status)

Parameter No. 17 - Restore state of O (O1) after power failure

This parameter determines if the on/off status is saved and restored for the load connected to O (O1) after a power failure.

Value size: 1 Byte

Default value: 0

Values & descriptions:

- 0 - Device saves last on/off status and restores it after a power failure
- 1 - Device does not save on/off status and does not restore it after a power failure, it remains off

Parameter No. 19 - O (O1) Auto OFF with timer

If the load O (O1) is ON, you can schedule it to turn OFF automatically after the period of time defined in this parameter. The timer resets to zero each time the Device receives an ON command, either remotely (from the gateway or associated device) or locally from the switch.

Value size: 2 Byte

Default value: 0

Values & their descriptions:

- 0 - Auto OFF Disabled

- 1 - 32535 = 1 - 32535 seconds (or milliseconds – see Parameter no. 25. Auto OFF timer enabled for a given amount of seconds (or milliseconds) resolution 100ms

Parameter No. 20 - O (O1) Auto ON with timer

If the load O (O1) is OFF, you can schedule it to turn ON automatically after the period of time defined in this parameter. The timer resets to zero each time the Device receives an OFF command, either remotely (from the gateway or associated device) or locally from the switch.

Values size: 2 Byte

Default value: 0

Values & their descriptions:

- 0 - Auto ON Disabled
- 1 - 32535 = 1 - 32535 seconds (or milliseconds – see Parameter no. 25. Auto ON timer enabled for a given amount of seconds (or milliseconds) resolution 100ms

Parameter No. 23 - O (O1) contact type - NO/NC

The set value determines the relay contact type for output O (O1) . The relay contact type can be normally open (NO) or normally closed (NC).

Values size: 1 Byte

Default value: 0

Values & descriptions:

- 0 - NO
- 1 - NC

Relay logic:

Par-NO/NC	Command (switch, Z-Wave ,..)	Device output state
NO (0)	OFF	OFF (0 V)
NO (0)	ON	ON (230 V)
NC (1)	OFF	ON (230 V)
NC (1)	ON	OFF (0 V)

Parameter No. 25 - Set timer units to s or ms for O (O1)

Set the timer units to seconds or milliseconds. Choose if you want to set the timer in seconds or milliseconds in Parameters No. 19, 20.

Values size: 1 Byte

Default value: 0

Values & descriptions:

- 0 – timer set in seconds
- 1 – timer set in milliseconds

Parameter No. 36 - O (O1) Power report on change - percentage

This parameter determines the minimum change in consumed power that will result in sending a new report to the gateway.

Values size: 1 Byte

Default value: 50

Values & descriptions:

- 0 - reports are disabled
- 1-100 (1-100%) - change in power

NOTE: When the Device reports the power consumption (W), it will also automatically report the voltage (V) and current (A).

NOTE: Regardless of the power consumption change in percentage, the report will not be sent more frequently than defined by Parameter No. 39.

Parameter No. 39 - Minimum time between reports (O) O1

This parameter determines the minimum time that must elapse before a new power report on O (O1) is sent to the gateway.

Values size: 1 Byte

Default value: 30

Values & descriptions:

- 0 - reports are disabled
- 1-120 (1-120s) - report interval

NOTE: This Parameter is in relation to Parameter No. 36.

NOTE: Setting the value to less than 30s can cause the Z-Wave network congestion state (slow Device response and decreased network stability).

Parameter No. 91 - Water Alarm

This parameter determines which alarm frames the Device should respond to and how. The parameters consist of 4 bytes, the three most significant bytes are set according to the official Z-Wave protocol specification.

Values size: 4 Byte

Default value: 0

Values & descriptions:

- 0 no action
- 1 open relay
- 2 close relay

Parameter No. 92 - Smoke Alarm

This parameter determines which alarm frames the Device should respond to and how. The parameters consist of 4 bytes, the three most significant bytes are set according to the official Z-Wave protocol specification.

Values size: 4 Byte

Default value: 0

Values & descriptions:

- 0 no action
- 1 open relay
- 2 close relay

Parameter No. 93 - CO Alarm

This parameter determines which alarm frames the Device should respond to and how. The parameters consist of 4 bytes, the three most significant bytes are set according to the official Z-Wave protocol specification.

Values size: 4 Byte

Default value: 0

Values & descriptions:

- 0 no action
- 1 open relay
- 2 close relay

Parameter No. 94 - Heat Alarm

This parameter determines which alarm frames the Device should respond to and how. The parameters consist of 4 bytes, the three most significant bytes are set according to the official Z-Wave protocol specification.

Values size: 4 Byte

Default value: 0

Values & descriptions:

- 0 no action
- 1 open relay
- 2 close relay

Parameter No. 120 - Factory Reset

Reset to factory default settings and removed from the Z-Wave network.

The parameter is Advanced and may be hidden under the Advanced tag.

Values size: 1 Byte

Default value: 0

Values & descriptions:

- 0 - Don't do Factory reset
- 1 - Do the Factory reset

Parameter No. 201 - Serial Number 1

This parameter contains a part of device's serial number.

The parameter is Read-Only and cannot be changed.

The parameter is Advanced and may be hidden under the Advanced tag.

Values size: 4 Byte

Default value: Device specific

Values & descriptions:

- 0x00000000 - 0x7FFFFFFF

Parameter No. 202- Serial Number 2

This parameter contains a part of device's serial number.

The parameter is Read-Only and cannot be changed.

The parameter is Advanced and may be hidden under the Advanced tag.

Values size: 4 Byte

Default value: Device specific

Values & descriptions:

- 0x00000000 - 0x7FFFFFFF

Parameter No. 203 - Serial Number 3

This parameter contains a part of device's serial number.

The parameter is Read-Only and cannot be changed.

The parameter is Advanced and may be hidden under the Advanced tag.

Values size: 4 Byte

Default value: Device specific

Values & descriptions:

- 0x00000000 - 0x7FFFFFFF

10. Z-Wave® Command Class

1. ASSOCIATION_V2 [S0, S2]*
2. ASSOCIATION_GRP_INFO_V3 [S0, S2]*
3. BASIC_V2 [S0, S2]*
4. SWITCH_BINARY_V2 [S0, S2]*
5. CONFIGURATION_V4 [S0, S2]*
6. DEVICE_RESET_LOCALLY_V1 [S0, S2]*
7. FIRMWARE_UPDATE_MD_V5 [S0, S2]*
8. INDICATOR_V3 [S0, S2]*
9. MANUFACTURER_SPECIFIC_V2 [S0, S2]*
10. METER_V6 [S0, S2]*
11. MULTI_CHANNEL_ASSOCIATION_V3 [S0, S2]*
12. NOTIFICATION_V8 [S0, S2]*
13. POWERLEVEL_V1 [S0, S2]*
14. SECURITY_V1
15. SECURITY_2_V1
16. SUPERVISION_V1
17. TRANSPORT_SERVICE_V2
18. VERSION_V3 [S0, S2]*
19. ZWAVEPLUS_INFO_V2

*[S2] Security 2 Command Class

This product can be operated in any Z-Wave network with other Z-Wave certified devices from other manufacturers. All mains operated nodes within the network will act as repeaters regardless of vendor to increase reliability of the network.

① NOTE: MAPPING OF COMMAND_CLASS_BASIC

Supporting Command Class Basic

COMMAND_CLASS_BASIC is mapped into COMMAND_CLASS_SWITCH_BINARY, for enabling Switch (O) control:

Switch (O) will be turned ON or OFF, after receiving the BASIC_SET command:

Basic Command received	Mapped Command (binary Switch)
Basic Set (0xFF)	Switch binary Switch (0xFF)
Basic Set (0x00)	Switch binary Switch (0x00)
Basic GET	Basic Report (Current Value, Target Value)

Supporting Command Class Indicator

The Device supports the Command Class Indicator V3 (ID 0x50). When the Device receives an indicator set, the LED blinks according to the received indicator set.

Refer to LED Signalization chapter.

Supporting Meter Command Class

The Device supports the meter command class and kWh is the default scale report send when the scale type is not present in the received Get.

Supported Scale Name	Scale Value
Watt	2
kWh	0

11. Z-Wave® Notifications Command class

11.1 Overheat detected

Z-Wave Notification Type Name	Z-Wave Notification Name	LED colour status	Device reaction	Action to restore	Device specific	Z-Wave definition
Heat Alarm	Overheat detected	Check the RGB LED signalization table	Switch OFF all outputs and send notification	Any of the following activities reset this alarm: power cycle, Remote Device reboot (with Parameter No. 117), short press on the S button, press on any switch/push-button connected to any SW (SW, SW1, SW2, ...) terminal.	YES	notification type=heat alarm Value=0x04, event=State Notification name=Overheat detected Value=0x02, Version=V2

11.2 Overcurrent detected O

Z-Wave Notification Type Name	Z-Wave Notification Name	LED colour status	Device reaction	Action to restore	Device specific	Z-Wave definition
Power Management	Overcurrent detected O (O1)	Check the RGB LED signalization table	Switch OFF the output O (O1) and send notification	Any of the following activities reset this alarm: power cycle, Remote Device reboot (with Parameter No.	YES	notification type=power management Value=0x08. event=State Notification name=Overcurrent detected

				117), short press on the S button, press on any switch/push-button connected to any SW (SW, SW1, SW2, ...) terminal.		Value=0x06, Version=V3
--	--	--	--	--	--	------------------------

11.3 AC mains disconnected

Z-Wave Notification Type Name	Z-Wave Notification Name	LED colour status	Device reaction	Action to restore	Device specific	Z-Wave definition
Power Management	AC mains disconnected (valid for AC and DC power supply)	Check the RGB LED signalization table	.	Any of the following activities reset this alarm: power cycle, Remote Device reboot (with Parameter No. 117), short press on the S button, press on any switch/push-button connected to any SW (SW, SW1, SW2, ...) terminal.	YES	notification type=power management Value=0x08, event=State Notification name=AC mains disconnected Value=0x02, Version=V2

12. Z-Wave® Associations

Associations are used for direct communication between the Device and other devices within your Z-Wave network without the need of the Z-Wave gateway.

Max. number of associated devices per group is 9. This value is fixed and cannot be configured. Each association group supports the association of up to 9 devices (nodes). To avoid network delays, we recommend limiting the amount of associated devices to no more than 5 per group. “Lifeline Group” is reserved solely for a gateway and hence only 1 node can be assigned.

Association group 1 – “Lifeline Group” reports the status of the Device and allows to assign only one device (gateway by default); only 1 node is allowed. The following command classes are supported:

12.1 Root device

Root device - Association Group 1 - Lifeline

INDICATOR_REPORT: LED status

DEVICE_RESET_LOCALLY_NOTIFICATION: triggered upon request

SWITCH_BINARY_REPORT: status change report for output O (O1)

NOTIFICATION_REPORT: triggered on Overheat

NOTIFICATION_REPORT: triggered on Overcurrent detected O (O1)

NOTIFICATION_REPORT: triggered on Overvoltage detected

NOTIFICATION_REPORT: triggered on AC mains disconnected

METER_REPORT: triggered by load power consumption connected to output O(O1) (according to the settings of Parameters No. 36 and 39)

Root device - Association Group 2

Association Group 2

Allowed nodes: 9

It is assigned to switch connected to the SW (SW1) terminal (uses Basic command class).

Triggered by SW (SW1). The device sends according to the state of SW (SW1) (switch or push-button) the command BASIC_SET ON or BASIC_SET OFF to the associated device. This command is reflected to the output of associated device. Supports the following command classes:

- BASIC_SET: set On / Off state at the associated device

Root device - Association Group 3

Association Group 3

Allowed nodes: 9

It is assigned to switch connected to the SW (SW1) terminal (uses Switch Multilevel command class). Triggered by SW (SW1).

It is recommended to use push buttons for this association. Supports the following command classes:

- SWITCH_MULTILEVEL_START_LEVEL_CHANGE: initiate a transition to a new level (increase or decrease light intensity in case of dimmer, or move shutter up or down, ...)
- SWITCH_MULTILEVEL_STOP_LEVEL_CHANGE: stop an ongoing transition (stop increase or decrease light intensity in case of dimmer, or stop moving shutter up or down, ...)

13. Supported load types

- Resistive (incandescent bulbs, heating devices)
- Inductive with RC Snubber (LED light drivers, transformers, fans, refrigerators, air-conditioners)
- Capacitive (capacitor banks, electronic equipment, motor start capacitors)

14. Technical Specifications

Power supply	110-240 V AC / 24–30 V DC
Power consumption	< 0.3 W
Power measurement (W)	Yes
Max switching voltage AC	240 V
Max switching current AC	15 A
Max switching voltage DC	30 V
Max switching current DC	10 A
Overheating protection	Yes
Overcurrent protection	Yes
Overvoltage protection	Yes
Distance	Up to 40 m indoors (131 ft.) (depends on local condition)
Z-Wave® repeater:	Yes
CPU	Z-Wave® S800
Z-Wave® frequency bands:	908,4 MHz
Maximum radio frequency power transmitted in frequency band(s)	< 25 mW
Size (H x W x D)	37x42x16 ±0.5 mm / 1.46x1.65x0.63 ±0.02 in
Weight	27 g / 0.95 oz.
Mounting	Wall console
Screw terminals max. torque	0.4 Nm / 3.5 lbin
Conductor cross section	0.5 to 1.5 mm ² / 20 to 16 AWG
Conductor stripped length	5 to 6 mm / 0.20 to 0.24 in
Shell material	Plastic
Colour	Red
Ambient temperature	-20°C to 40°C / -5°F to 105°F

Humidity	30% to 70% RH
Max. altitude	2000 m / 6562 ft.

15. Important disclaimer

Z-Wave® wireless communication may not always be 100% reliable. This Device should not be used in situations in which life and/or valuables are solely dependent on its functioning. If the Device is not recognized by your gateway or appears incorrectly, you may need to change the Device type manually and ensure that your gateway supports Z-Wave Plus® multi-channel devices.

16. Disposal & Recycling

This refers to the waste of electrical and electronic equipment. It is applicable in the US and other countries to collect waste separately.



This symbol on the product or in the accompanying literature indicates that the product should not be disposed of in the daily waste. Wave 1PM US must be recycled to avoid possible damage to the environment or human health from uncontrolled waste disposal and to promote the reuse of materials and resources. It is your responsibility to dispose of the device separately from general household waste when it is already unusable.

17. FCC Notes

- This Device complies with Part 15 of the FCC Rules.
- Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- The manufacturer is not responsible for any radio or TV interference caused by unauthorized modification or change to this equipment. Such modifications or change could void the user's authority to operate the equipment.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a

particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

- RF exposure statement:

-This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

18. Manufacturer

Shelly Europe Ltd. (former Allterco Robotics EOOD)

Address: 103 Cherni vrah Blvd., 1407 Sofia, Bulgaria

Tel.: +359 2 988 7435

E-mail: Z-Wave-shelly@shelly.cloud

Support: <https://support.shelly.cloud/>

Web: <https://www.shelly.cloud>

Changes in the contact data are published by the Manufacturer at the official website:
<https://www.shelly.cloud>



v2.2