





Dual In-Wall Switch

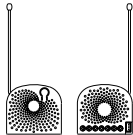

❶ Comi by Iamtem Dual In-Wall Switch.

Comi Dual In-Wall Switch is a low-cost Z-Wave Switch specifically used to enable Z-Wave constant and control (on/off) of any wall switches. It can report immediate voltage consumption or kWh energy usage over a period of time. In the event of power failure, non-volatile memory retains all programmed information relating to the last operating status. It can connect to 2 external manual switches to control the load ON/OFF independently. Its surface has a pin socket, which can be used for connecting to the touch panel, so you can also use the touch panel to control the Dual In-Wall Switch. The Dual In-Wall Switch is also a security Z-Wave device and supports Over the Air (OTA) feature for the products firmware upgrade.

❷ Familiarize yourself with your Dual In-Wall Switch.



Notes for the wire connection ports:

N – Power input for neutral

L – Power input for live

BN – Input for load power supply

OUT1 – Output for load 1

OUT2 – Output for load 2

S1 – External switch control for load 1

S2 – External switch control for load 2

Install the Dual In-Wall Switch.

Important: A licensed electrician with knowledge and understanding of electrical systems and electrical safety should complete the electrical installation.

1. Shut off the main circuit breaker of your home for safety during the installation and ensure the wires are not short circuited during the installation which will cause damage to the Dual In-Wall Switch.



Notes: Your home's main circuit breaker must support the overload protection for safety.

2. Preparing connection wires
14 AWG power wires for Input/ Output.
18 AWG copper wires for external manual switch.
Use the wire stripper cut the metallic part of the connection wire and make sure the length of the metallic part is about 5mm.




Notes: All connection wires needs to be flexible cable.

Wiring diagram of AC120V/230V power input



In some cases, you may have some loads just only can be used on the voltage of DC24V and hope that it still can be controlled by the Dual In-Wall Switch, so please refer to the following diagram to achieve this:



Notes: The "BN" terminal should be connected to the "L" of DC 24V input.

Wiring diagram of DC24V power input

Since the In-Wall Switch also supports the DC24V power input, so you can use it to control the loads that powered by DC24V.



If the output loads should be only powered by AC120V or AC230V, you can change the wire connection as below:



Notes: The "BN" terminal should be connected to the "Live" of AC 120V/230V power wire.

Wiring diagram of DC24V power input

Since the Dual In-Wall Switch also supports the DC24V power input, so you can use it to control the loads that powered by DC24V.



If the output loads should be only powered by AC120V or AC230V, you can change the wire connection as below:




Notes: The "BN" terminal should be connected to the "Live" of AC 120V/230V power wire.

All above wiring diagrams show that the Dual In-Wall Switch uses 3-Way or momentary button switches as the external manual switch for 3-Way connection. The below diagram will show you that the Dual In-Wall Switch uses the SPDT (Single Pole Double-Throw) switches as the external manual switch for 3-Way connection.

Wiring diagram of 3-Way connection for the external manual switch



1. Install Dual In-Wall Switch to the gang box.
 - a. Use/Hot wire connection: Connect the Use/Hot wire to the "L" terminal on the Dual In-Wall Switch.
 - b. Neutral wire connection: Connect the Neutral wire to the "N" terminal on the Dual In-Wall Switch.
 - c. Load wire connection: Connect the 2 load wires to the "OUT1" and "OUT2" on the Dual In-Wall Switch.
 - d. External/manual Switch connection: Connect 2 18AWG wires to the "S1" and "S2" on the Dual In-Wall Switch.
 - e. External/manual Switch connection: Connect 2 18AWG wires from the 2 terminals on the External/manual Switch to the Live wire.



Notes: This is the physical connection diagram for AC120V/230V power input.

4. Mounting the gang box.

- a. Position all wires to provide room for the device. Place the Dual In-Wall Switch inside the gang box towards the back of the box.
- b. Position the antenna towards the back of the box, away from all other wiring.
- c. Reinstall the Dual In-Wall Switch to the gang box.
- d. Reinstall the cover onto the gang box.



Notes:

1. The gang box should be sized 3x2x1.75 inch/ 75x50x70 mm or larger, minimum volume 14 in³ / 230cm³.
2. Use flexible copper conductors only.

5. Restore Power.

Restore power of the circuit breaker or fuse.



❸ Quick start.

Adding your Dual In-Wall Switch to a Z-Wave network.

After your Dual In-Wall Switch is installed and powered on, you are now able to manually control the Dual In-Wall Switch via turn it On/Off directly via pressing your Dual In-Wall Switch's Action Button. It is time to add your Dual In-Wall Switch to the Z-Wave network. To set your Z-Wave gateway/controller into pairing mode, please refer to the respective section within your controller instruction manual.

1. Set your Z-Wave controller into pairing mode.
2. Press the Action Button on the Dual In-Wall Switch or toggle the external manual switch once, the green LED (see secure indication) will blink to indicate the Dual In-Wall Switch is entering into pairing mode.
3. If the Dual In-Wall Switch has been successfully added to your Z-Wave network, its RGB LED will be solid. If the pairing was unsuccessful, the red LED will be on for 2 seconds and then remain a colorful gradient, repeat the instructions above from step 1.

With your Dual In-Wall Switch now working as a part of your smart home, you'll be able to configure it from your home control software/mobile application. Please refer to your software's user guide for further instructions on configuring Dual In-Wall Switch to your needs.

❹ Removing Dual In-Wall Switch from a Z-Wave network.

Your Dual In-Wall Switch can be removed from your Z-Wave network at any time. You'll need to set your Z-Wave network's main controller. To set your Z-Wave controller/gateway into removal mode, please refer to the respective section within your controller instruction manual.

1. Set your Z-Wave controller into manual mode. 2. Press the Action Button on the Dual In-Wall Switch or toggle the external manual switch 3 times in fast succession. 3. If the Dual In-Wall Switch has been successfully removed from your Z-Wave network, its RGB LED will remain colourful gradient. If the removal was unsuccessful, the RGB LED will still be solid (following the state of the output load), repeat the instructions above from step 1. ⚙️ Advanced functions. Changing mode on the External Switch/Button Control. The Dual In-Wall Switch can be controlled via 3-way (flp/top) external/manual switch, momentary push button or the 3-way switch. To automatically detect and set the mode to the appropriate type of manual switch wired into Dual In-Wall Switch, toggle the button on the manual switch once and wait 2 seconds for the Dual In-Wall Switch to detect the type of manual switch. You can also set the external switch mode through Configuration/Command Class. Parameter 120 (1 byte dec) is the parameter that will set one of the 3 different modes for external switch S2. If you set this configuration to: (0) Unknown mode (1) 2-state switch mode (2) 3-way switch mode (3) Momentary push button mode (4) Enter automatic identification mode. (The blue LED will fast blink) The parameter 121 (1 byte dec) is the parameter that will set one of the 3 different modes for external switch S2. If you set this configuration to: (0) Unknown mode (1) 2-state switch mode (2) 3-way switch mode (3) Momentary push button mode (4) Enter automatic identification mode. (The green LED will fast blink) Note: You can also use the Action Button of Dual In-Wall Switch to activate the automatic identification mode, as below: 1. Quick press the Action Button 4 times, which will activate the automatic identification mode for external switch S1; you will see the blue LED fast blink. 2. Quick press the Action Button 6 times, which will activate the automatic identification mode for external switch S2; the green LED will fast blink.	When the Dual In-Wall Switch enters automatic identification mode, it has 30 seconds before timeout for detecting the manual switch. Touch panel control. As you can see that the Dual In-Wall Switch's surface has a pin port, this port is used to connect the Touch panel. When you have already connected it to the Dual In-Wall Switch, you will be possible to control the Dual In-Wall Switch through the Touch panel directly.  Monitoring Energy Consumption. The Dual In-Wall Switch can report wattage energy usage or kWh energy usage to a Z-Wave control point when requested. If this function is supported by the control points, the energy consumption will be displayed in the user interface of the control points. (The specific Z-Wave commands supporting energy monitoring are the Release Command Class, Association reports are sent to association group 1, which is setup via the Association Command Class.) Please consult the operation manual for these control points for specific instructions on monitoring the Dual In-Wall Switch. Note: The model FT1140 Dual In-Wall Switch does not have the ability to monitor energy consumption. The model FT1132 Dual In-Wall Switch supports the energy metering feature and you can see the words "with Energy Metering" on its packaging box. Security or Non-security feature of your Dual In-Wall Switch in Z-Wave network. Including Dual In-Wall Switch as a non-secure device. If you want your Dual In-Wall Switch as a non-secure device in your Z-Wave network, press the Action Button once on Dual In-Wall Switch when you pair it to your gateway. If inclusion is successful, the green LED will be on for 2 seconds, and then return to a solid indicator. If inclusion is unsuccessful,	the red LED will be on for 2 seconds and then return to a colourful gradient. Including Dual In-Wall Switch as a secure device: In order to take full advantage of the Smart Film technology, you will need your Dual In-Wall Switch as a security device that can encrypt messages to communicate in your Z-wave network. A security enabled controller/gateway (or Z-Wave Plus controller) is required. 1. Set your Z-Wave Plus controller into pairing mode. 2. Press the Action Button 3 times within 1 second on the Dual In-Wall Switch, the blue LED (secure indicator) will blink to indicate the Dual In-Wall Switch is entering into secure pairing mode. 3. If the Dual In-Wall Switch has been successfully added to your Z-Wave network, its RGB LED will be solid. If the pairing was unsuccessful, the red LED will be on for 2 seconds and then remain a colourful gradient; repeat the instructions above from step 1. NFC function of your Dual In-Wall Switch. Your Dual In-Wall Switch has built-in an NFC module. In order to take full advantage of the NFC feature, the Owner's Touch panel is needed. When you take the Touch panel near to the NFC point of Dual In-Wall Switch, you will see light purple LED turns on and then off, at the same time, the product information is read out from Dual In-Wall Switch via NFC communication and then displayed on the Touch panel's screen. If your Dual In-Wall Switch is powered, it will send out a Node Information frame to start the inclusion/exclusion when the Touch panel touches your Dual In-Wall Switch. The Touch panel's screen will pop up a notification message to let you know whether the inclusion/exclusion is successful or not. If the Dual In-Wall Switch is included into your Touch panel, you will see the switch ON/OFF icons displayed on the Touch panel. Reset your Dual In-Wall Switch. If at some stage, your primary controller is missing or inoperable, you may wish to reset all of your Dual In-Wall Switch's settings to their factory defaults. To do this, press and hold the Action Button for 30 seconds and then release it, four Dual In-Wall Switch will now be reset to its original settings, and the green LED will be solid for 2 seconds and then return the colourful gradient status as a confirmation.	🔧 Technical specifications. Model number: FT1132/FT1140 Power input: 120VAC to 240VAC, 50Hz to 60Hz. Rated output: 5A per channel for resistive load, Total current: Max 30A, Max standby power: 0.8W. Operating temperature: 0°C to 40°C, 32°F to 104°F. Relative humidity: 0% to 90%. NFC operating distance: Maximum 30mm. Operating distance: Up to 400 feet/120 meters outdoors. 🛡️ Warranty. If you are in need of any technical support during or subsequent to your product's warranty, please get in touch with our support team via http://www.fantem.com/support. The Company who bought this product from has also guaranteed to assist you with any of your support needs, and you can also contact them for accordingly. The guarantee made by the company who you purchased the product from includes the transfer of Fantem full warranty to that Company. They've guaranteed that they'll be able to assist you, the Customer, with all technical support and repair needs on our behalf. Fantem warrants to the original purchaser of Products, that is, the Company who you have purchased from, that for the Warranty Period (as defined below), the Products will be free from material defects in materials and workmanship. The foregoing warranty is subject to the proper installation, operation and maintenance of the Products in accordance with installation instructions and the operating manual supplied. Warranty claims must be made to the Company who you have purchased from in writing within thirty (30) days of the manufacture of a product. Fantem's sole obligation under the foregoing warranty is, at Fantem's option, to repair, replace or correct any such defect that was present at the time of delivery or to remove the Products and to refund the purchase price to Company. The Warranty Period begins on the date the Products is delivered and continues for 12 months. Any repairs under this warranty must be conducted by an authorized Fantem service representative and under	Fantem RMA policy. Any repairs conducted by unauthorized persons shall void this warranty. Excluded from the warranty are problems due to accidents, acts of God, civil or military authority, civil disturbance, war, strikes, fires, other catastrophes, misuse, misapplication, storage damage, negligence, electrical power problems, or modification to the Products or its components. Fantem does not authorize any person or party to assume or create for it any other obligation or liability in connection with the Products except as set forth herein. Fantem will pass on to Company all manufacturers' Material warranties to the extent that they are transferable, but will not independently warrant any Material. Company will assist Customer with all warranty, repair, return and technical support needs. Company must prepay shipping and transportation charges for returned Products, and insure the shipment or accept the risk of loss or damage during such shipment and transportation. Fantem will ship the repaired or replacement products to Company freight prepaid. Customer and Company shall indemnify, defend, and hold Fantem and Fantem's affiliates, shareholders, directors, officers, employees, contractors, agents and other representatives harmless from all demands, claims, actions, causes of action, proceedings, suits, assessments, losses, damages, liabilities, settlements, judgments, fines, penalties, interest, costs and expenses (including fees and disbursements of counsel) of every kind (it being upon personal injury or death or injury to property to the extent any of the foregoing is proximately caused either by a defective product (including strict liability in tort) or by the negligent or willful acts or omissions of Customer or its officers, employees, subcontractors or agents, and/or (b) arising from or relating to any actual or alleged infringement or misappropriation of any patent, trademark, mask work, copyright, trade secret or any actual or alleged violation of any other intellectual property rights arising from or in connection with the products, except to the extent that such infringement exists as a result of Fantem's manufacturing processes. IN NO EVENT SHALL FANTEM BE LIABLE FOR ANY INDIRECT, INCIDENTAL, PUNITIVE, SPECIAL OR CONSEQUENTIAL DAMAGES, OR DAMAGES FOR LOSS OF PROFITS, REVENUE, OR USE INCURRED BY CUSTOMER, COMPANY OR ANY THIRD PARTY, WHETHER IN AN ACTION IN CONTRACT, OR TORT, OR OTHERWISE (EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES). FANTEM'S LIABILITY AND CUSTOMER'S EXCLUSIVE REMEDY FOR ANY CAUSE OF ACTION ARISING IN CONNECTION WITH THIS AGREEMENT OR THE SALE OR USE OF THE	PRODUCTS, WHETHER BASED ON NEGLIGENCE, STRICT LIABILITY, BREACH OF WARRANTY, BREACH OF AGREEMENT, OR EQUIPMENT PRINCIPLES, IS EXPRESSLY LIMITED TO, AT FANTEM OPTION, REPLACEMENT OF, OR REPAIRMENT OF THE PURCHASE PRICE FOR THAT PORTION OF PRODUCTS WITHIN THE SCOPE OF WHICH DAMAGES ARE CLAIMED. ALL CLAIMS OF ANY KIND ARISING IN CONNECTION WITH THIS AGREEMENT OR THE SALE OR USE OF PRODUCTS SHALL BE DEEMED WAIVED UNLESS MADE IN WRITING WITHIN THIRTY (30) DAYS FROM FANTEM DELIVERY, OR THE DATE FIXED FOR DELIVERY IN THE EVENT OF NONDELIVERY. THE WARRANTY AND WARRANTY IN ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES OR WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. FCC NOTICE (for USA) THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT. STORE PROCEEDS WHEN NOT IN USE, SUITABLE FOR DRY LOCATIONS. DO NOT IMMERSE IN WATER, NOT FOR USE WHERE DIRECTLY EXPOSED TO WATER. UL NOTICE (For USA) 1. Install only in a UL listed junction box sized 1x2x2 1/2 inch (75x50x75 mm) or larger, minimum volume 24 in³ (278 cm³). 2. Use Copper Conductors Only. 3. "CAUTION – Risk of Electric Shock – More than one disconnect switch may be required to deenergize the equipment before servicing". 4. "WARNING – This device shall not be used in combination with a wall switch controlling a receptacle." This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:	1. This device may not cause harmful interference, and 2. This device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or an experienced radio/TV technician for help. Warning Do not dispose of electrical appliances at unsorted municipal waste; use separate collection facilities. Contact your local government for information regarding the collection systems available. Certifications (regions):  Z-Wave and Z-Wave Plus are registered trademarks of Sigma Design and its subsidiaries in the United States and other countries. FCC ID: R64FT132    	FCC Part 15.19 Warning Statement THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESired OPERATION. FCC Part 15.21 Warning Statement NOTE: THE GUARANTEE IS NOT RESPONSIBLE FOR ANY CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT. FCC Part 15.105 Warning Statement Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: —Reorient or relocate the receiving antenna. —Increase the separation between the equipment and receiver. —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. —Consult the dealer or an experienced radio/TV technician for help. RF warning statement: The device has been evaluated to meet general RF exposure requirements. To maintain compliance with FCC's RF exposure guidelines, this equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.	IC Warning: This device complies with Industry Canada license-exempt RSS standards. Operation is subject to the following two conditions: (1) the device may not cause interference, and (2) the device must accept any interference, including interference that may cause undesired operation of the device. Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement. RF warning statement: The device has been evaluated to meet general RF exposure requirements. To maintain compliance with RSS-302 — Radio Frequency (RF) Exposure guidelines, this equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body. Le dispositif de radio doit être évalué à respecter général d'exposition exigence pour maintenir la conformité avec les directives d'exposition du RSS-302 – Radio Fréquence (RF), ce matériel doit être installé et exploité à une distance minimale de 20 cm entre le radiateur et votre corps.
--	---	--	---	---	--	---	--	--

Configuration parameters information

Case presentation	Discussion points
-------------------	-------------------

Function	Time /	Channel		
603a (a)	Over heat protection: Compensation will be closed after 30 seconds if the temperature inside the product exceeds 100°C. 0 = Disabled 1 = Enabled	0	1	
603b (b)	Configure the output load status after re-power on 0 = If the test status returns to the power output. 1 = Always on 2 = Always off	0	1	
603c (c)	To set whether a display result is sent to the associated nodes in association group 1 when the state of output load is changed. 0 = Nothing 1 = FullICE 2 = Display Report (c) 3 = Source: when using the external switch to switch the load. /None: When just only one channel load state is changed, the report message FullICE or Basic Report ICC would be Multi Channel corresponding.	0	1	
603d (d)	To set whether a display result is sent to the associated nodes in association group 2 when using the external switch 1 to switch the loads. 0 = Never/Nothing 1 = Basic Ice ICC	1	1	
603e (e)	To set whether a display result is sent to the associated nodes in association group 4 when using the external switch 2 to switch the loads. 0 = Never/Nothing 1 = Display Set (c)	1	1	
603f (f)	Configure the state of LED when a switch is open	0	1	

Configuration parameters information

Q604 (04)	Set the OnOff time of the LED when it is in night light mode. Value1 = ON (hour) Value2 = OFF (minute) Value3 = ON (hour) Value4 = OFF (minute)	Value1=0x01 Value2=0x00 Value3=0x00 Value4=0x00	4
Q605 (05)	Set the OnOff time of output load. Value1 = 0, disable or 1, enable. Value2 = ON (day load - full represents Max in Day) Value3 = ON (hour) Value4 = OFF (minute)	Value1=0x00 Value2=0x0F Value3=0x00 Value4=0x00	4
Q607 (07)	Set the OnOff time of output load. Value1 = 0, disable or 1, enable. Value2 = ON (day load - full represents Max in Day) Value3 = ON (hour) Value4 = OFF (minute)	Value1=0x00 Value2=0x0F Value3=0x01 Value4=0x00	4
Q608 (08)	Set the external switch mode of S1. 0 = Unknown switch mode. 1 = 2 state switch mode 2 = 3 way switch mode 3 = push-button mode 4 = automatic identification mode. Note When the switch mode of S1 is determined or identification completed, this mode value will not be read after evaluation.	0	1
Q609 (09)	Set the external switch mode of S2. 0 = automatic identification mode. 1 = 2 state switch mode 2 = 3 way switch mode 3 = push-button mode Note When the switch mode of S2 is determined or identification completed, this mode value will not be read after evaluation.	0	1
Q610 (10)	Set the control destination for external switch. 1 = control the output loads of itself. 2 = control the other modes. 3 = control the output loads of itself and other modes.	3	1
Q611 (11)	Set the OnOff time of the LED when it is in night light mode. Value1 = ON (hour) Value2 = OFF (minute) Value3 = ON (hour) Value4 = OFF (minute)	Value1=0x01 Value2=0x00 Value3=0x00 Value4=0x00	4

OMI